

# KEB AUTOMATION SYSTEMS

INSTRUCTIONS FOR USE | C6 S14

Original manual  
Document 20196812 EN 00



## Summary

1	Preliminary Information .....	1
1.1	General notes .....	2
1.2	Trademarks.....	2
1.3	Instructions on disposal .....	2
1.4	Description of safety symbols.....	3
1.5	Qualified Personnel .....	4
1.6	Basic knowledge required .....	4
1.7	Proper use of the product .....	4
1.8	Purpose of the user's guide .....	4
1.9	The manual is a part of the system .....	4
1.10	Figures.....	4
1.11	Scope of the operating instructions .....	5
1.12	Safety instructions .....	6
1.12.1	Installation according to the instructions .....	6
1.12.2	Working on the control cabinet.....	6
1.13	Notes about usage .....	6
1.14	Applicable standard .....	6
2	Description .....	7
2.1	Product description.....	8
2.1.1	C6 S14 (without $\mu$ UPS) description .....	8
2.1.2	C6 S14 (without $\mu$ UPS) Key features .....	8
2.1.3	C6 S14 (with $\mu$ UPS) description.....	9
2.1.4	C6 S14 (with $\mu$ UPS) Key features.....	9
2.2	Package .....	10
2.3	Front panels.....	11
2.3.1	Full aluminium front panel .....	12
2.3.2	Capacitive front panel .....	14
2.3.3	LCD aspect ratio .....	15
2.4	Rear view.....	16
2.5	Side view .....	16
2.6	Connector view.....	17
2.6.1	Labels.....	18
2.6.2	$\mu$ UPS.....	19
2.7	Putting in operation.....	20
2.7.1	Configuration and project creation .....	20
2.7.2	Process management .....	20
3	Installation and connection .....	21
3.1	Preparation for installation .....	22
3.1.1	Select the mounting location .....	22
3.1.2	Portrait Mounting .....	22
3.2	Checking the package contents .....	22
3.3	Checking the operating conditions .....	22
3.4	Mounting position .....	23
3.4.1	Damage due to overheating .....	23
3.5	Checking installation distances.....	24
3.6	Preparing the mounting cut-out .....	24
3.6.1	Degrees of protection.....	24
3.6.2	Cut-out measures .....	25
3.7	Mounting the device .....	26
3.7.1	Position of the mounting clamps .....	26
3.7.2	Tools to tighten the mounting clamps.....	26
3.7.3	Procedure .....	27
3.8	Connecting the device.....	30
3.8.1	Notes on connection .....	30
3.8.2	Power supply connection .....	30
3.8.3	Switching on and testing the device.....	31
3.9	Connecting the configuration PC .....	32
4	Commissioning the device.....	35
4.1	Storage.....	36
4.2	Slot for memory card .....	37
4.3	Installation/removal of a memory card .....	37
5	Commissioning a project .....	39
5.1	COMBIVIS studio HMI project .....	40
5.1.1	Overview .....	40
5.1.2	Transfer .....	42
5.1.3	Configuring the serial port.....	42

5.1.4	Connecting the serial port .....	44
5.1.5	Managing the project .....	44
5.1.6	Stopping the running project .....	45
5.1.7	Starting the project .....	46
5.1.8	Debugging the project .....	47
5.1.9	Transfer the project from C6 S14 to the configuration PC .....	49
5.1.10	Backup and restore .....	50
5.1.11	Updating the operating system .....	50
5.2	COMBIVIS studio 6 BASIC/PRO/ADVANCED .....	51
5.2.1	Project Implementation .....	51
5.2.2	Transferring the COMBIVIS studio 6 application to the target system .....	52
5.2.3	I/O Fieldbus .....	53
5.2.4	Support for retentive data .....	53
5.2.5	Use in combination with COMBIVIS HMI Runtime .....	55
5.2.6	Use in combination with COMBIVIS connect .....	57
5.2.7	Limitations and Recommendations .....	58
6	System Manager .....	59
6.1	System Manager .....	60
6.1.1	Backup Restore .....	61
6.1.2	System clone and Restore .....	61
6.1.3	Font Antialiasing .....	64
6.1.4	EMMC Usage .....	65
6.1.5	Kiosk mode .....	66
6.1.6	Language settings .....	67
6.1.7	Scrollbar .....	68
6.1.8	System reboot .....	68
7	Maintenance and care .....	69
7.1	Calibration of the touch screen .....	70
7.2	Maintaining & cleaning .....	71
7.2.1	Procedure .....	71
7.2.2	Removing the rear cover for access to the motherboard .....	72
7.2.3	Backup battery replacement (BR2032 3V) .....	74
7.2.4	Micro UPS Backup battery replacement .....	75
8	Technical specifications .....	77
8.1	Technical specifications .....	78
8.1.2	C6 S14 (without $\mu$ UPS) Technical specifications .....	79
8.1.3	COMBIVIS studio HMI runtimes differences .....	80
8.1.4	COMBIVIS CONNECT PRO main features .....	80
8.1.5	KEB System Manager Control Panel utilities .....	80
8.1.6	C6 S14 resistive .....	81
8.1.7	C6 S14 capacitive .....	82
8.1.8	C6 S14 Family Technical specifications .....	83
8.1.9	CONTROL Runtime WinCE/ARM for C6 S14 main features .....	84
8.1.10	COMBIVIS HMI runtimes differences .....	84
8.1.11	COMBIVIS CONNECT PRO main features .....	84
8.1.12	KEB System Manager Control Panel utilities .....	84
8.1.13	7.0" W display characteristics .....	85
8.1.14	8.4" display characteristics .....	85
8.1.15	10.1" display characteristics .....	85
8.1.16	10.1" W display characteristics .....	86
8.1.17	10.4" display characteristics .....	86
8.1.18	12.1" (SVGA) display characteristics .....	86
8.1.19	12.1" W (WXGA) display characteristics .....	87
8.1.20	15.0" (XGA) display characteristics .....	87
8.1.21	15.6" W (WXGA) display characteristics .....	88
8.2	Certificates and approvals .....	89
8.3	Dimension drawings .....	92
8.3.1	7.0" W (resistive) .....	92
8.3.2	7.0" W capacitive CUTOUT B .....	94
8.3.3	8.4" (resistive) .....	96
8.3.4	10.1" W (resistive) .....	98
8.3.5	C6 S14 - 10.1" W (capacitive) .....	100
8.3.6	10.4" (resistive) .....	102
8.3.7	12.1" (resistive) .....	104
8.3.8	12.1" W (resistive) .....	106
8.3.9	12.1" W (capacitive) .....	108
8.3.10	15.0" (resistive) .....	110
8.3.11	15.6" W (resistive) .....	112

8.3.12	15.6" W (capacitive) .....	114
8.4	Ports PINOUT.....	116
8.4.1	COM1.....	116
8.4.2	LAN1 – LAN2 .....	116
8.4.3	CAN .....	116
8.4.4	RS485.....	117
8.4.5	USB1 / USB2.....	117
8.5	Technical support & repairs.....	117
8.6	Recycling and disposal .....	117



## SECTION **1**

# **Preliminary Information**

## 1.1 General notes

- a) The information in this manual is subject to change and is in no way binding upon KEB Automation KG
- b) KEB Automation KG is not responsible for technical errors or other omissions in the manual, and shall not accept any responsibility deriving from its use.


## 1.2 Trademarks

- a) All brands and product names mentioned in this manual are trademarks of their respective owners.

## 1.3 Instructions on disposal


EN



- The symbol  on the product or in its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the supplier where you purchased the product.


IT



- Il simbolo  sul prodotto o sulla confezione indica che il prodotto non deve essere considerato come un normale rifiuto domestico, ma deve essere portato nel punto di raccolta appropriato per il riciclaggio di apparecchiature elettriche ed elettroniche. Provvedendo a smaltire questo prodotto in modo appropriato, si contribuisce a evitare potenziali conseguenze negative per l'ambiente e la salute, che potrebbero derivare da uno smaltimento inadeguato del prodotto. Per informazioni più dettagliate sul riciclaggio di questo prodotto, contattare l'ufficio comunale, il servizio locale di smaltimento rifiuti o il fornitore da cui è stato acquistato il prodotto.

FR




- Le symbole  sur le produit ou son emballage indique que ce produit ne peut être traité comme déchet ménager. Il doit être remis au point de collecte dédié à cet effet (collecte et recyclage du matériel électrique et électronique). En procédant à la mise à la casse réglementaire de l'appareil, nous préservons l'environnement et notre sécurité, s'assurant ainsi que les déchets seront traités dans des conditions appropriées. Pour obtenir plus de détails sur le recyclage de ce produit, veuillez prendre contact avec les services de votre commune ou le distributeur où vous avez effectué l'achat.




DE



- Das Symbol  auf dem Produkt oder seiner Verpackung weist darauf hin, dass dieses Produkt nicht als normaler Haushaltsabfall zu behandeln ist, sondern an einem Sammelpunkt für das Recycling von elektrischen und elektronischen Geräten abgegeben werden muss. Durch ihren Beitrag zum korrekten Entsorgen dieses Produkts schützen Sie die Umwelt und die Gesundheit Ihrer Mitmenschen. Umwelt und Gesundheit werden durch falsches Entsorgen gefährdet. Weitere Informationen über das Recycling dieses Produkts erhalten Sie von Ihrem Rathaus, Ihrer Müllabfuhr oder den Distributoren, in dem Sie das Produkt gekauft haben.


ES






- El símbolo  en el producto o en su embalaje indica que este producto no se puede tratar como desperdicios normales del hogar. Este producto se debe entregar al punto de recolección de equipos eléctricos y electrónicos para reciclaje. Al asegurarse de que este producto se desecha correctamente, usted ayudará a evitar posibles consecuencias negativas para el ambiente y la salud pública, lo cual podría ocurrir si este producto no se manipula de forma adecuada. Para obtener información mas detallada sobre el reciclaje de este producto, póngase en contacto con la adMinistración de su ciudad, con su servicio de desechos del hogar o con el surtidor donde comprò el producto.

PT



- Simbolo  no produto ou na embalagem indica que este produto não pode ser tratado como lixo doméstico. Em vez disso, deve ser entregue ao centro de recolha selectiva para a reciclagem de equipamento eléctrico e electrónico. Ao garantir uma eliminação adequada deste produto, irá ajudar a evitar eventuais consequências negativas para o meio ambiente e para a saúde pública, que, de outra forma, poderiam ser provocadas por um tratamento incorrecto do produto. Para obter informações mais detalhadas sobre a reciclagem deste produto, contacte os serviços municipalizados locais, o centro de recolha selectiva da sua área de residência ou no distribuidor onde adquirir o produto.

## 1.4 Description of safety symbols

 Danger	This symbol indicates a danger to life or health of personnel.
 Attention	This symbol indicates a danger to the hardware and / or the environment.
 Note	This symbol indicates an additional information meant to provide a better understanding.

## 1.5 Qualified Personnel

- a) The system may be operated only by personnel qualified for the specific task in accordance with the relevant documentation for the specific task, in particular its warning notices and safety instructions.
- b) Qualified personnel are those who, based on their training and experience, are able to identify risks and avoid potential hazards when working with these systems.

## 1.6 Basic knowledge required

- a) To understand operating instructions a general knowledge of automation technology is needed.
- b) Knowledge of personal computers and the Microsoft operating system is required to understand this user's guide.

## 1.7 Proper use of the product

- a) KEB products may only be used for the applications described in the catalogue and in the technical documentation.
- b) If products and components from other manufacturers are used, these must be approved by KEB.
- c) Proper transport, assembly, installation, storage, commissioning, operation and maintenance are required to ensure that the product operates safely.
- d) The indicated environmental conditions must be observed.
- e) The information in this user's manual must be observed.

## 1.8 Purpose of the user's guide

- a) This user's manual contains information based on the requirements defined by DIN EN 62079 for mechanical engineering documentation.
- b) These operating instructions are intended for:
  - 1. Users.
  - 2. Commissioning engineers.
  - 3. Maintenance personnel.
- c) Pay attention at the information in the chapter "Safety instructions".
- d) More information such as operating instructions, examples and reference information, are available in the online help of COMBIVIS studio HMI software and COMBIVIS connect software.

## 1.9 The manual is a part of the system

- a) This user's guide belongs to the system and is also required for commissioning.
- b) Keep all supplied documentation for the entire service life of the system.

## 1.10 Figures

- a) This manual contains illustrations of the described devices.
- b) Some details of the illustrations may differ from the device provided.

## 1.11 Scope of the operating instructions

The operating instructions apply to the C6 S14 family devices.

The devices are the following:

C6 S14 resistive	7.0" W	Full aluminium front panel
	8.4"	
	10.1" W	
	10.4"	
	12.1"	
	12.1" W	
	15.0"	
	15.6" W	
C6 S14 capacitive	7.0" W	Aluminium and glass front panel with TrueFlat technology with multi-touch touch screen
	10.1" W	
	12.1" W	
	15.6" W	

## 1.12 Safety instructions

### 1.12.1 Installation according to the instructions

- Commissioning the device is prohibited until it has been absolutely ensured that the system in which the device is to be installed complies with all the applicable EU and international regulation.

### 1.12.2 Working on the control cabinet

- **Open equipment**

The device is open equipment. This means that the system may only be integrated in housings or cabinets, where it can be operated from the front panel.

The cabinet in which the system is installed may only be accessed with a key or tool and only by trained and authorized personnel.

- **Dangerous voltage**

Opening the cabinet may expose high voltage parts. Before opening the cabinet always disconnect the power.

## 1.13 Notes about usage

- The system is approved for indoor use only.
- The system may be damaged if operated outdoors.

## 1.14 Applicable standard

Please refer section system manager for details about the relevant standards.

## SECTION 2

# Description

## 2.1 Product description

### 2.1.1 C6 S14 (without $\mu$ UPS) description

C6 S14 operating panels (without  $\mu$ UPS) integrate the numerous and advanced features of COMBIVIS studio HMI visualization software, in Basic or Advanced version, and the remote assistance software platform COMBIVIS connect with Windows Embedded Compact 7 Pro operating system.

C6 S14 panels (without  $\mu$ UPS) are available with a wide range of 16 million colors LED backlight TFT LCD sizes with Aluminium (resistive touch screen).

C6 S14 systems (without  $\mu$ UPS) are based on the ARM Cortex A9 1.0 GHz processor (NXP i.MX6 Dual Lite or QuadPlus) with 1 or 2 GB system RAM (DDR3-1600/800), 4 GB eMMC pseudo-SLC memory and a slot for a removable MicroSD memory card.

The motherboard includes the isolated 24 VDC power supply, two 10/100/1000 Mbps Ethernet interfaces, an RS-232/422/485 configurable serial port with MPI protocol support, two USB 2.0 interfaces.

C6 S14 (without  $\mu$ UPS), optionally, can be supplied with an additional isolated RS485 serial port.

### 2.1.2 C6 S14 (without $\mu$ UPS) Key features

- COMBIVIS HMI BASIC and ADVANCED WinCE runtime versions.
- KEB COMBIVIS CONNECT Pro WinCE remote assistance software.
- Windows Embedded Compact 7 Pro operating system with Datalight Reliance Nitro file system.
- NXP® ARM Cortex A9 i.MX6 1,00 GHz DualLite processor.
- Front panel available in variant: aluminium True Flat with P-CAP multi-touch.
- Wide range of TFT LCD 16 million colors and LED backlight displays:
  - wide aspect ratio: 7" W (15:9), 10.1" W (16:10), 12.1" W (16:10), 15.6" W (16:9).
- Smart Memory System:
  - 1 GB RAM DDR3.
  - 4 GB eMMC (SSD Pseudo-SLC).
  - 1 MicroSD slot.
- Interfaces:
  - 2 x Ethernet 10/100/1000 Mbps.
  - 2 x USB 2.0.
  - 1 x RS232/422/485 (DB15M) with MPI/PPI protocol support.
  - Optional 1 x RS485 isolated (DB9M).
- Isolated 24V DC Power supply input.

### 2.1.3 C6 S14 (with $\mu$ UPS) description

C6 S14 ARM-based Panel PACs - Programmable Automation Controllers - combine visualization, control and remote assistance functions.

They integrate the numerous and advanced features of COMBIVIS HMI Runtime, in Basic or Advanced versions, Control Runtime, in Basic, Pro and Advanced and COMBIVIS connect and KEB COMBIVIS CONNECT remote assistance software with Windows Embedded Compact 7 Pro.

C6 S14 panels are available with a wide range of 16 million colors LED backlight TFT LCD sizes with Aluminium (resistive touch screen), Aluminium True Flat (resistive touch screen) or Aluminium True Flat Multi-touch front panels (glass projected capacitive touch screen).

C6 S14 systems are based on the ARM Cortex A9 1.0 GHz processor (NXP i.MX6 DualLite or QuadPlus) with 1 or 2 GB system RAM (DDR3-1600/800), 4 GB eMMC pseudo-SLC memory, a slot for a removable MicroSD memory card and 512kb MRAM memory (Magnetoresistive RAM) for retentive data storage at power down to be used in combination with the MicroUPS (removable).

The motherboard includes the isolated 24 VDC power supply, two 10/100/1000 Mbps Ethernet interfaces, an RS-232/422/485 configurable serial port with MPI protocol support and two USB interface.

C6 S14, optionally, can be supplied with an isolated CAN interface or an additional isolated RS-485 serial port.

### 2.1.4 C6 S14 (with $\mu$ UPS) Key features

- CONTROL Runtime (WinCE) in the versions Basic, Pro and Advanced.
- COMBIVIS HMI Runtime (WinCE) in the versions Basic and Advanced.
- COMBIVIS connect (WinCE) in the version Pro.
- Windows Embedded Compact 7 Pro operating system with Datalight Reliance Nitro file system.
- NXP® ARM Cortex A9 i.MX6 1,00 GHz DualLite processor.
- Front panel available in two variants: aluminium and aluminium TrueFlat with P-CAP Multi-touch.
- Wide range of TFT LCD 16 mln colors and LED backlight displays:
  - 4:3 aspect ratio: 8.4", 10.4", 12.1", 15".
  - Wide aspect ratio: 7" W (15:9), 10.1" W (16:10), 12.1" W (16:10), 15.6" W (16:9).
- Smart Memory System:
  - 1 GB RAM DDR3.
  - 4 GB eMMC (SSD Pseudo-SLC).
  - 512 kB MRAM (magnetoresistive RAM).
  - 1 MicroSD slot.
- Interfaces:
  - 2 x Ethernet 10/100/1000 Mbps.
  - 2 x USB 2.0.
  - 1 x RS232/422/485 (DM15M) with MPI/PPI protocol support.
  - Optional add-on (only one):
    - 1 x RS485 isolated (DB9M).
    - 1 x CAN RAW isolated (DB9M).
- Isolated 24V DC Power supply input with Integrated MicroUPS to save retentive variables on 512 kB MRAM memory.

## 2.2 Package

C6 S14 package consists of:


C6 S14 system		C6 S14
Quick guide		X
Clamps with grub screw (depending of the LCD size)		X
n.1 hex key 1.5mm		X
n.1 Power supply plug		X



## 2.3 Front panels

The system is available with two different kinds of **frontal panel**:

- Full aluminium (resistive).
- Aluminium with True Flat technology and Multi-touch (capacitive).

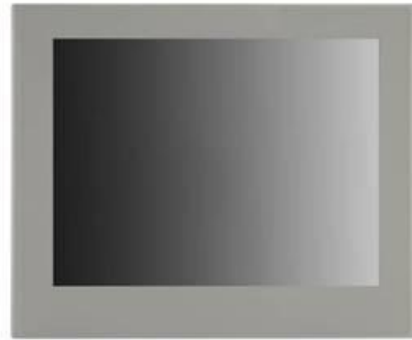

*Figure 1*  
*Full aluminium resistive front panel detail*




*Figure 2*  
*Capacitive front panel detail*

2.3.1 Full aluminium front panel

C6 S14 (full aluminium front panel) is available in the following sizes:

- 7.0" W
- 8.4"
- 10.1" W
- 10.4"
- 12.1"
- 12.1" W
- 15.0"
- 15.6" W

Figure 3  
Full aluminium front panel detail  
(in the figure is shown as an example a  
15.0" display)

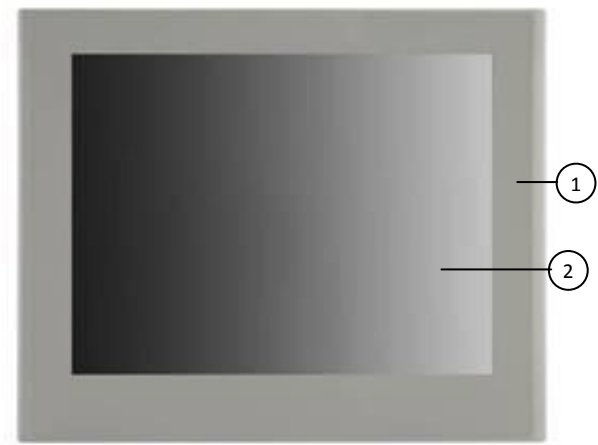

- ① Full aluminium front panel
- ② Touch screen display

- The full aluminium front panel has a “step” between the front panel and the touch screen.

Figure 4  
Front panel “Step” detail


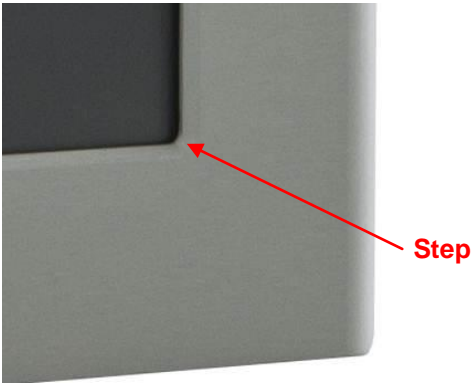


Table 1  
Full aluminium features

Features	
Index of protection	IP66
Back Seal type	EPDM
Metal housing	EN AW-5754, H22 EN 485-1

Figure 5  
Construction detail

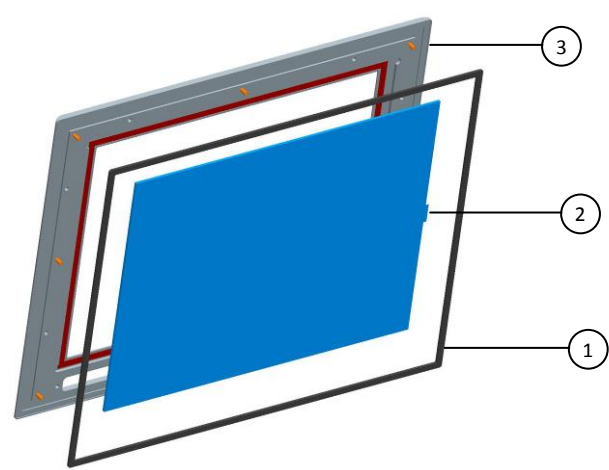

1	Back seal
2	Touch screen
3	Metal housing

2.3.2 Capacitive front panel

Capacitive C6 S14 (aluminium and glass front panel with True Flat technology with Multi-touch touch screen) is available in the following sizes:

- 7.0" W
- 10.1" W
- 12.1" W
- 15.6" W

Figure 6  
Capacitive front panel  
(in the figure is shown as an example a 15.6" display)



1	Aluminium and tempered glass TrueFlat
2	Projective capacitive multi-touch

The front panels with True Flat technology contain a projective capacitive multi-touch touch screen that is handled by a USB controller within the system.

Figure 7  
Capacitive front panel "No step" detail


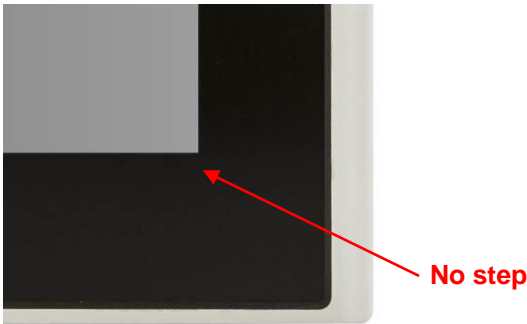


Table 2  
Capacitive features

Features	
Index of protection	IP66K
Seal type	EPDM
Front laminate	Glass
Metal housing	Aluminium alloy 5754

Figure 8  
Construction detail

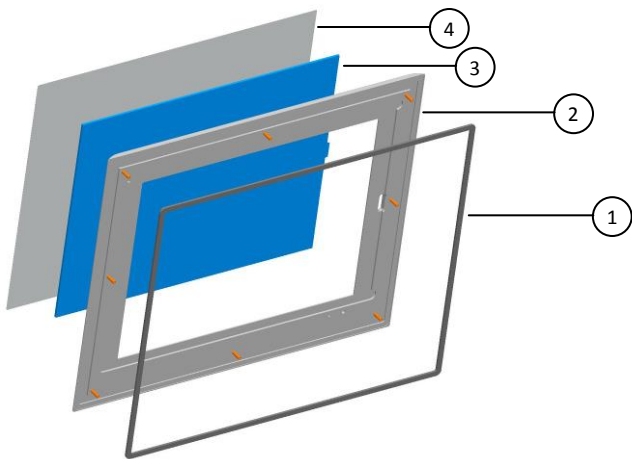

1	Back seal
2	Metal housing
3	Touch screen
4	Cover glass

2.3.3 LCD aspect ratio

There are different LCD aspect ratios depending of the frontal panel sizes:

Table 3  
LCD aspect ratio

Panel size	Aspect ratio
7.0" W	15 : 9
8.4"	4 : 3
10.1" W	16 : 10
10.4"	4 : 3
12.1"	4 : 3
12.1" W	16 : 10
15.0"	4 : 3
15.6" W	16 : 9

2.4 Rear view

Figure 9  
C6 S14 rear view



Note: Rear panels may be different depending on display size.

1	Aeration holes		
2	Mounting seal		

2.5 Side view

Figure 10  
C6 S14 side view


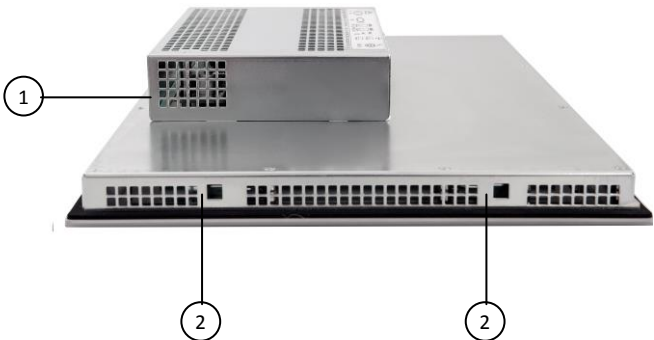



Figure 11  
C6 S14 side view

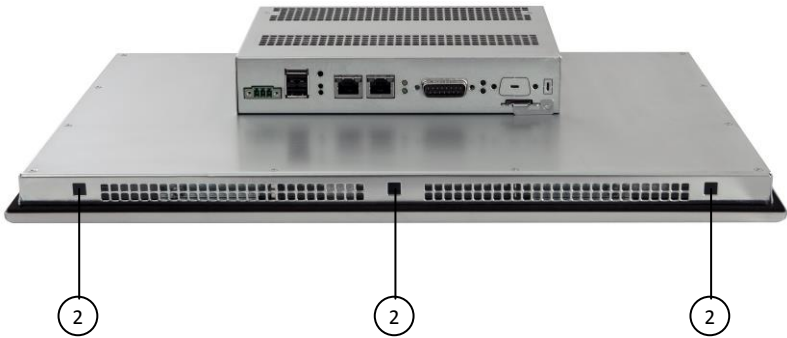


1	Aeration holes		
2	Recess for fixing clamps		

2.6 Connector view

Figure 12  
C6 S14 connectors

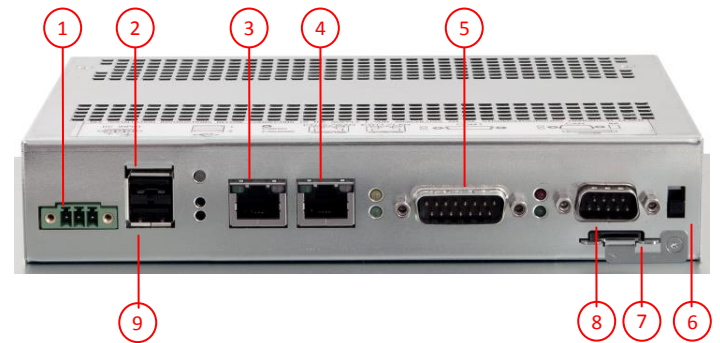

1	DC input
2	USB1 (2.0)
3	LAN1 (10/100/1000)
4	LAN2 (10/100/1000)
5	COM1 RS232/422/485 MPI
6	Termination
7	MicroSD slot
8	CAN/RS232/RS485 (optional)
9	USB2 (2.0)

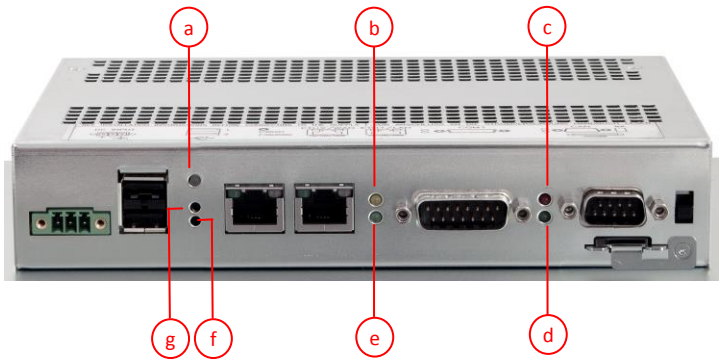

a	Power On LED
b	COM1 TX LED
c	Error (CAN) / TX (RS485) LED
d	RUN (CAN) / RX (RS485) LED
e	COM1 RX LED
f	Restore defaults
g	Reset

2.6.1 Labels

The following labels are present on the rear panel:

- Connectors label
- CE label

Figure 13  
System connectors label detail





Figure 14  
System label detail



1	Model
2	UL marking
3	CE marking
4	Electrical information
5	Serial number

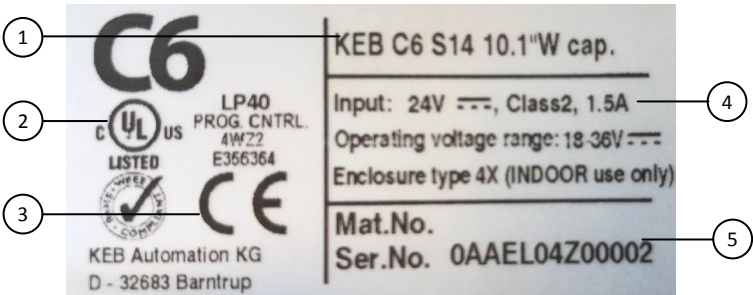

## 2.6.2 $\mu$ UPS

UPS (uninterruptable Power Supply) devices are normally used to provide the continuity in the power supply circuitry to electronic devices where the electronics itself or the user's application hosted by the devices is critical from the possibility of a sudden loose of power. KEB  $\mu$ UPS is designed to be used in combination with CONTROL Runtime. The  $\mu$ UPS module is installed on the internal power supply unit.

Figure 15  
 $\mu$ UPS detail



①  $\mu$ UPS module

### Notes about KEB $\mu$ UPS

Energy storage	2 super-capacitors 28F 2.7V connected in series.
Charging time	30s
Typical operating time	Between 500ms and 1s
Maintenance	None
Installation	Built-in electronics and super-capacitors
Local memory directly managed by the power supply	Not volatile 256KB MRAM for Soft PLC retain feature; real available memory 128KB for RETAIN segment + 128KB for PERSISTENT segment
System's actions taken when in UNDER_VOLTAGE	LCD is switched OFF USB power supply is switched OFF
Handling of retentive data in KEB CONTROL runtime implementation	When receiving the UNDER_VOLTAGE signal the CPU starts a 20ms timer. When the timer is elapsed the system checks again the UNDER_VOLTAGE. If the signal is still active the system checks for the MICRO_UPS_VCAP_OK. If this signal is high the super-capacitors are ready and the peripherals are switched off (see previous point). The memory data block (128KB) is copied the MRAM memory. In case the super-capacitors are not ready, no data is saved to avoid possible data corruption. The data saving process can be estimated never exceeding 250ms at maximum. After the data copy has been completed if the UNDER_VOLTAGE signal is still active the system is turned off; if the UNDER_VOLTAGE signal is OFF the system is restarted automatically. In case of a shutdown command the data is saved and the system turned off. Note: Sleep mode is not supported.
User's application compatibility	YES, applications can subscribe $\mu$ UPS "power-down event" form $\mu$ UPS APIs. Note: The $\mu$ UPS does not send any shutdown command to the OS, hence no files nor databases can be automatically closed without proper handling of the event. Note: If the CONTROL Runtime has to manage retain variables the user's "event-application" must work on a priority level greater than 10. Note: Please contact KEB support for further details about APIs availability and use.

## 2.7 Putting in operation

The followings two phases are required to put the system into operation:

- Configuration and creation of the project
- Process management


### 2.7.1 Configuration and project creation

During the configuration phase, you create the user interfaces for operation and monitoring of the technical process by using a PC on which is installed COMBIVIS studio HMI development environment. Configuration also includes:

- Creating the project
- Saving the project
- Testing the project
- Simulating the project

After compiling the configuration, you load the project into the C6 S14 device.


Figure 16  
Configuration and project creation

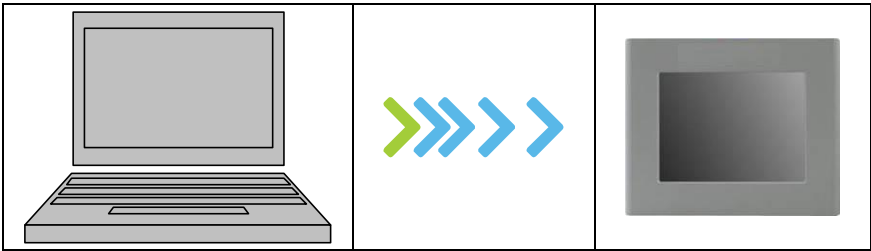

### 2.7.2 Process management

Process management is a two-way communication between C6 S14 device and PLC.

Figure 17  
Process management

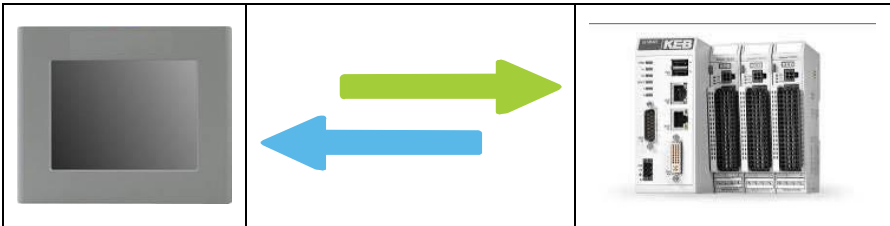

## SECTION 3

# Installation and connection

## 3.1 Preparation for installation

### 3.1.1 Select the mounting location

Points to observe when selecting the mounting location:

- a) Position the system to avoid exposure to direct sunlight.
- b) Position the system such that it is ergonomically accessible for the operator.
- c) Choose a suitable mounting height.
- d) Ensure that the Aeration holes are not covered.

### 3.1.2 Portrait Mounting

- The system can be mounted in portrait mode; the display can be rotate according to the mounting position using the dedicated utility from the panel control panel.
- From the Start menu, select "Settings" and then "Control Panel"; the display rotation utility is available from "Freescale Display Driver".
- Double click on the icon to get the window from where you can select the desired orientation.
- The selection is immediately applied and does not require to be saved in the registry.



**Note:**

Please refer to paragraph 2.2 Package.

## 3.2 Checking the package contents

- Check the package content for visible signs of transport damage and completeness.
- In the case of damaged parts, contact your KEB representative. Do not install parts damaged during shipment.

## 3.3 Checking the operating conditions

- Read carefully the standards, approvals, EMC parameters and technical specifications for operation of the C6 S14 device. This information is available in the following sections:
  - Certificates and approvals
  - Electromagnetic compatibility
- Check the mechanical and climatic ambient conditions for operation of the C6 S14 device: Ambient conditions.
- Follow the instructions for local use of the C6 S14 device.
- Adhere to the permissible rated voltage and the associated tolerance range:
  - 24V
  - Range: 18÷36 VDC

### 3.4 Mounting position

The C6 S14 device is suitable for installation in:

- Mounting cabinets
- Control cabinets
- Switchboards
- Consoles

#### 3.4.1 Damage due to overheating

- The operative temperature must be between 0° and 50°C.
- All C6 S14 systems are designed for vertical mounting position.
- An inclined installation reduces the thermal convection by the C6 S14 device and the maximum permissible ambient temperature for operation. Please contact KEB for details.
- The C6 S14 device may otherwise be damaged and its certifications and warranty will be void.



**Note:**

For installation in control cabinets and, in particular, in closed containers, make sure the recommended ambient temperature is maintained.

*Figure 18  
Mounting position*



### 3.5 Checking installation distances

To ensure adequate Aeration it is necessary to leave the following open spaces around the system:

- X direction 15 mm (min.) for each side
- Y direction 50 mm (min.) for each side
- Z direction 100 mm (min.)

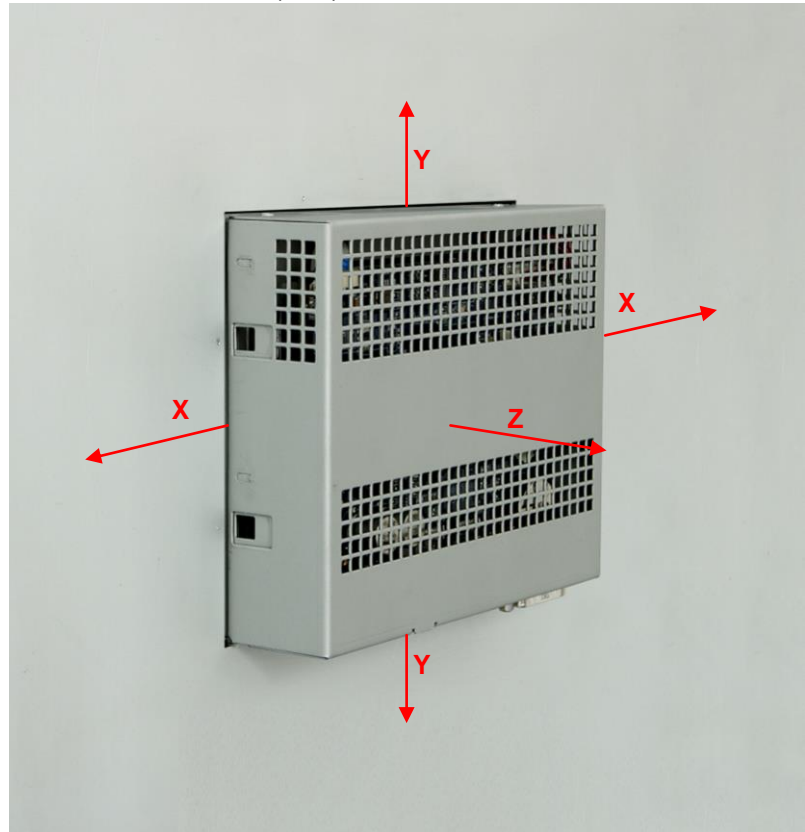


Figure 19  
Installation distances

### 3.6 Preparing the mounting cut-out

In order to ensure a proper mounting of the system, the material of the mounting cut-out must be sufficiently stable.

To obtain the degree of protection described below, the material of the mounting panel must not deform due to the use of clamps on the operator panel.

#### 3.6.1 Degrees of protection

The degrees of protection of the system are guaranteed only if the following conditions are satisfied:

- Material thickness at the mounting cut-out for IP66 protection: 2mm to 6 mm.
- Deviations of the plane of the mounting cut-out limits:  $\leq 0.5$  mm.  
This condition must be satisfied even when the C6 S14 is installed.
- Allowed surface roughness in the area of the seal:  $\leq 120$  microns (Rz 120).

**Note:**

7"W front panel is available in two versions which are different for size and a cut-out measures.

### 3.6.2 Cut-out measures

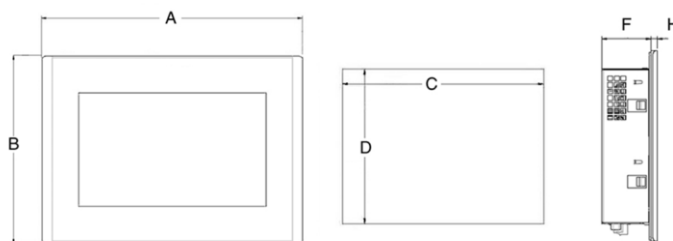


Figure 20  
Cut-out

C6 S14 resistive	CUT OUT "A"						
LCD TFT	A	B	C	D	H	F	Weight (Kg)
7"W	215	155	204	144	5	40 / 48*	1,2
8,4"	255	190	243	179	5	49 / 57*	1,4
10,1"W	293	201,5	285	193,5	5	49 / 57*	1,6
10,4"	295	230	283	219	5	49 / 57*	1,8
12,1"	325	260	313	249	5	49 / 57*	2,1
12,1"W	321	222,5	313	215	5	49 / 57*	2,0
15"	390	305	378	294	6	49 / 57*	3,3
15,6"W	420	265	410	255	6	49 / 57*	3,3

C6 S14 capacitive	CUT OUT "A"				CUT OUT "B"				H	F*	Weight (Kg)
LCD TFT	A	B	C	D	A	B	C	D			
7"W	-	-	-	-	204	147,6	197	140,5	4	40 / 48*	1,2
10,1"W	293	201,5	285	193,5	-	-	-	-	5	48 / 56*	1,6
12,1"W	331	222,5	313	215	-	-	-	-	5	51 / 59*	2,0
15,6"W	433	267	410	255	-	-	-	-	6	49 / 57*	3,3

\* with  $\mu$ UPS




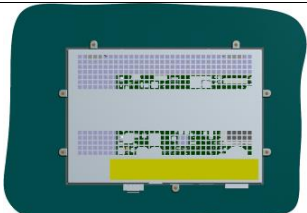

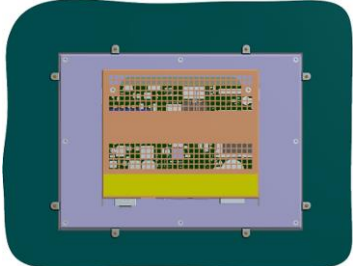

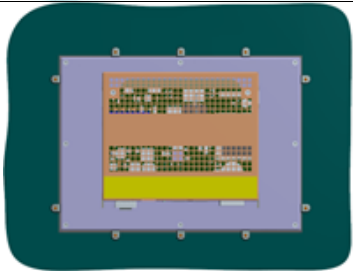
**Note:**  
For use on a flat surface of a Type 1 IN-DOOR Enclosure.

3.7 Mounting the device

3.7.1 Position of the mounting clamps

- To obtain the declared degree of frontal protection for the system, it is necessary to respect the positions of the clamps shown below.
- The table below shows the number and the position of the clamps for each C6 S14 size.

Table 4  
Position of the mounting clamps

System LCD size	Clamp	Quantity	Clamp position
7.0"		7	
8.4"		8	
10.1" 10.4" 12,1" 15" 15,6"		10	

3.7.2 Tools to tighten the mounting clamps

- 1.5 mm hexagonal key



### 3.7.3 Procedure

- Insert the system into the mounting cut-out from the front.

Figure 21  
Installation



Figure 22  
Installation



Figure 23  
Installation



- Insert the fixing clamps into the housings of the device.

Figure 24  
Installation



Figure 25  
Installation




**Note:**

Value of tightening torque: **0.2 Nm**.

Figure 26  
Installation

- Tighten the fixing clamps with a 1.5 mm hex key.

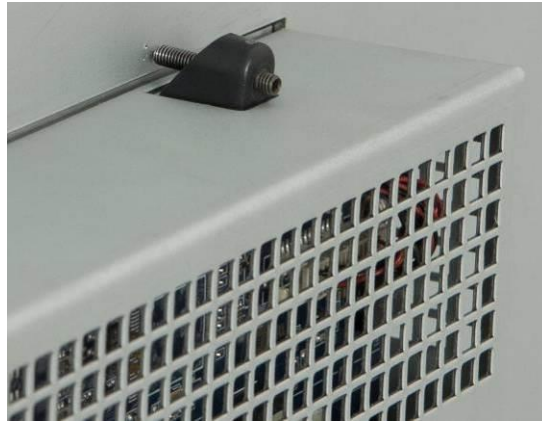

- Repeat steps 2 and 3 for all mounting clamps.
- Check the seal seat.

## 3.8 Connecting the device

### 3.8.1 Notes on connection

- The system must be installed in accordance with the indications contained in these operating instructions.
- These devices are intended to be connected to a “Secondary Circuit Over-voltage Category II”

### 3.8.2 Power supply connection

The device may only be connected to a 24V  $\overline{\text{---}}$  (maximum permissible operating voltage range 18V to 36V) power supply which satisfies the requirements of safe extra low voltage (SELV) in accordance with IEC/EN/DIN EN/UL60950-1.

The power supply has to fulfil the requirements NEC Class2 or LPS in accordance with IEC/EN/DIN EN/UL60950-1.

Connect the device with a cable cross-section of 0.75 – 1.5 mm<sup>2</sup> (AWG18 to AWG16 suitable at least 75C°).

- Remove the three poles connector from the system
- Connect the positive wire to the positive terminal of the three pole connector
- Connect the negative wire to the negative terminal of the three pole connector
- Connect the earth ground wire to the ground terminal of the three pole connector

(Also refer to the label on the back of the system)



**Attention:**

*the system must be powered with a voltage of 24V (18V÷36V).*

Figure 27  
Power supply connection detail

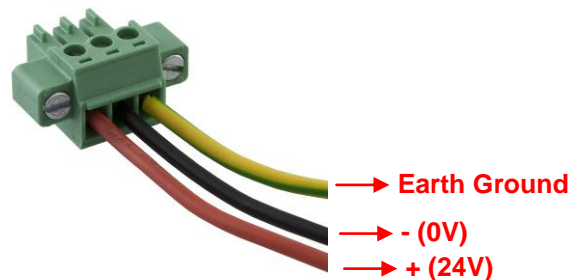


Figure 28  
Power supply connection detail



### 3.8.3 Switching on and testing the device

Connect the power supply cable to the system. Switch On the power supply. The green led will light up.

Figure 29  
Power supply connection detail




The display will switch on accordingly, and after few seconds the Windows CE desktop will appear.

### 3.9 Connecting the configuration PC


You can connect the configuration PC to the system in several ways:

- 1) By using an Ethernet cross cable connected by one end to the configuration PC and on the other end to one of two Ethernet ports of the system.
- 2) By connecting the system to a Ethernet switch on which the configuration PC and the system are both connected

Please note that the system comes with the IP address 192.168.0.100.

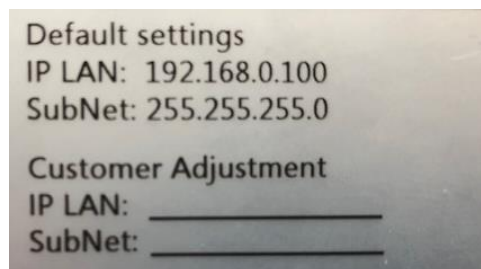

- Click on the start Button, select “Settings” -> “Network and Dial-up Connections”

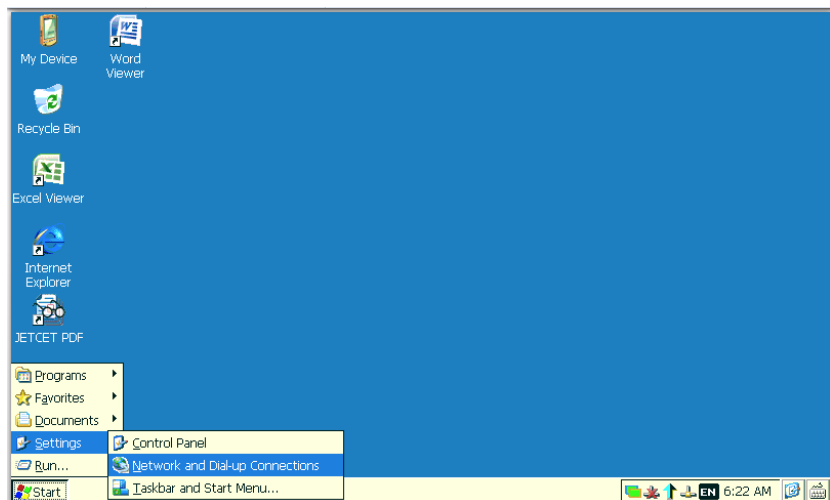

- According to the Ethernet port you want to configure choose the port to configure according to the table:


LAN port on C6 S14	LAN Connection in control panel
LAN1	EtherCAT
LAN2	Ethernet

- For instance if you need to configure LAN2 double click on PCI LAN2, Click on “Specify an IP address” and write the IP address and default Gateway like in the figure below

Figure 30  
Connecting the configuration PC


Table 5  
Connecting the configuration PC

Figure 31  
Connecting the configuration PC

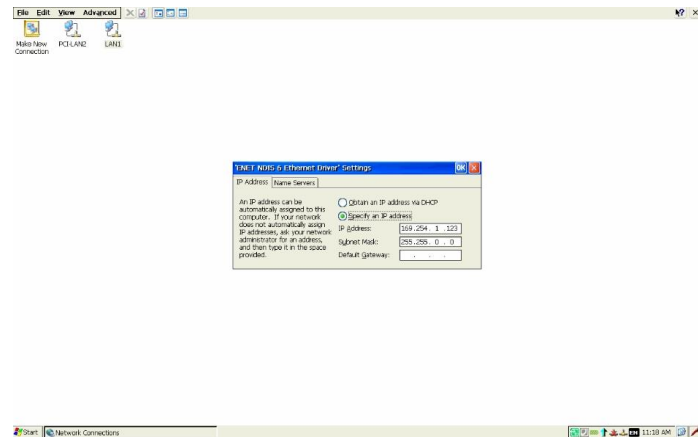

- Click on Ok to save the settings.
- Click on the "Start" button and select "Settings" -> "Control Panel"

Figure 32  
Connecting the configuration PC

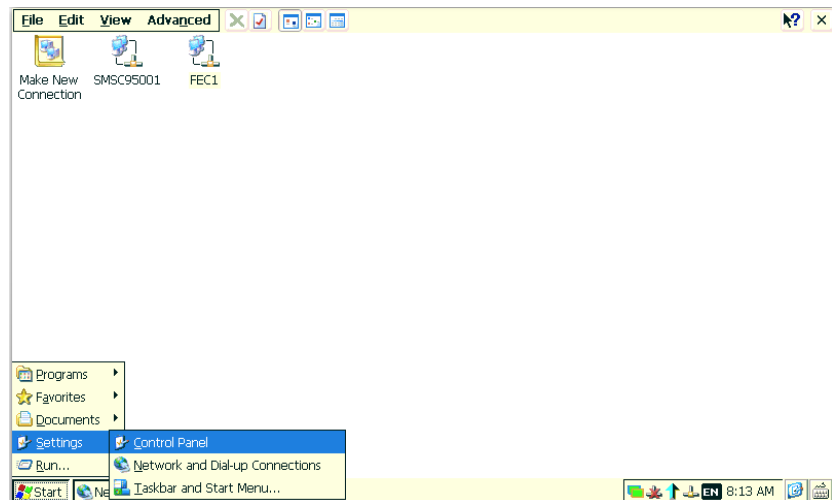

- Then double click on “Registry Saver”



Figure 33  
Connecting the configuration PC

- Click on the “Save” button and confirm clicking on “Ok”. This operation will save your setting in a way.

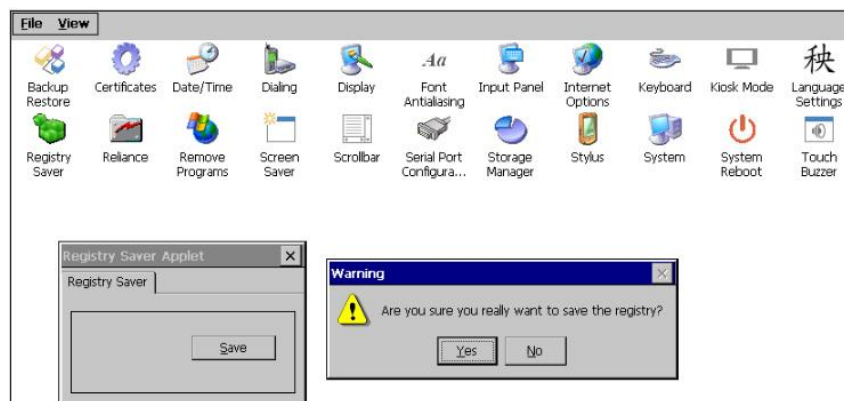


Figure 34  
Connecting the configuration PC



## SECTION 4

# Commissioning the device

4.1 Storage


The system comes as standard with an eMMC memory. The eMMC memory can be used to store other data, like process data or other executable. It is not possible to disable writing into eMMC. You can always read and write the eMMC memory. The purpose of this memory is to store data produced during the running of the machine or plant supervised by the system.

The eMMC memory is formatted using the “Datalight Reliance Nitro” file system specifically designed to improve the mass memory management ensuring reliability and robustness under the most diverse use conditions including intrinsic security of the write operations even in case of a power failure.


The Windows CE Control Panel includes the utilities to manage the storage devices.

To manage the eMMC use the “Reliance Volume Manager” utility.

Figure 35  
Commissioning the device

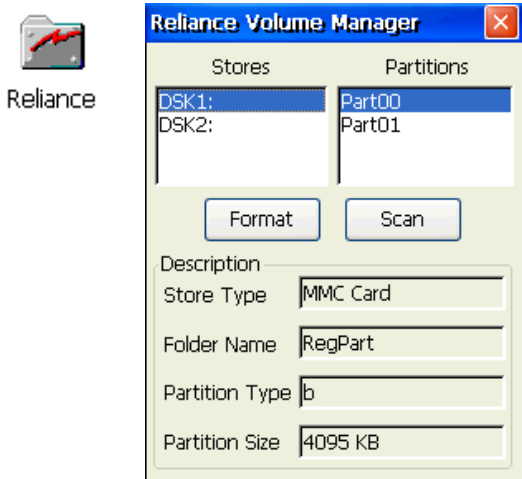


**Note:** In case of needs please contact the technical support for any assistance about the use of the volume manager utility.

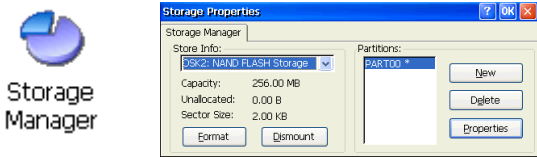

## 4.2 Slot for memory card

The system can optionally accommodate a microSD card slot V. 2.0 (push-push type).

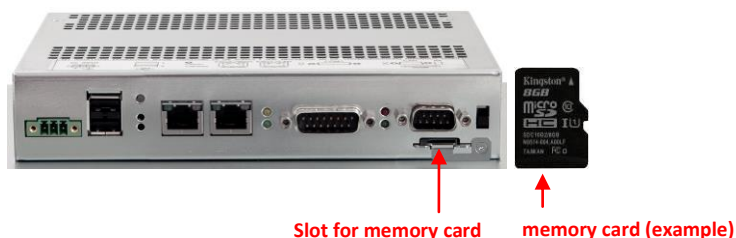


**Attention:**

potential data loss  
Do not remove the memory card while data is being accessed.  
Data on the memory card is lost if you attempt to remove it the system is accessing its data.

## 4.3 Installation/removal of a memory card

- Insert the memory card into the slot as indicated in the figure. Pay attention to the beveled edge.

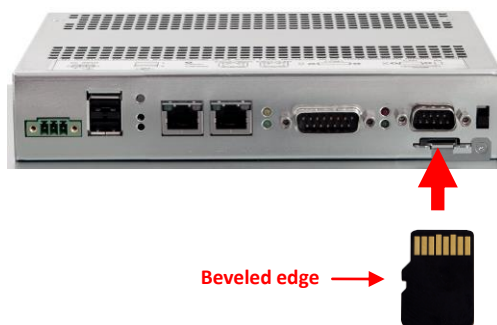

**Attention:**

removing the system memory card while the project is running. If you remove memory card while a project is running, the project may stop.

- Push the card all the way.



Figure 36  
Slot for memory card

Figure 37  
Slot for memory card

Figure 38  
Slot for memory card

Figure 39  
Slot for memory card



- Push the card previously inserted.

Figure 40  
Slot for memory card



- Extract the memory card from the slot.

Figure 41  
Slot for memory card



## SECTION 5

# Commissioning a project

## 5.1 COMBIVIS studio HMI project

### 5.1.1 Overview

#### Configuration phase

A project includes screen, alarms, variables used to represent the real plant of machine. The configuration phase is the creation of the project according to the user needs and interaction between the humans and the machine.

#### Transferring the project to C6 S14

You can transfer a project to C6 S14 as follows:

- Transfer from the configuring PC by using an Ethernet connection
- Start COMBIVIS studio HMI Developing tool
- Load the project to transfer
- Click on the transfer icon (see picture below)




Figure 42  
Connecting the configuration PC

The following window will appear:

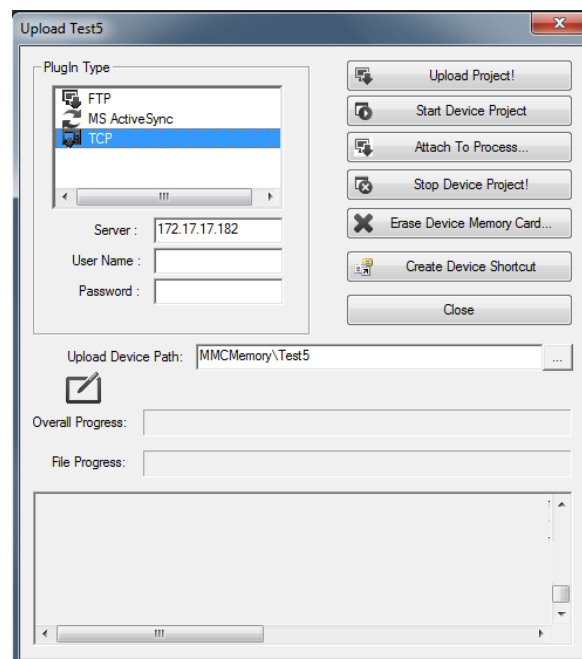


Figure 43  
Connecting the configuration PC



#### Attention:

Please transfer the project into the MMC Memory or into the SD card. This allows you not to lose its content when the system will be switched off.

To transfer the project into the MMC Memory, you must specify MMC Memory (like in the example of the picture above).

- Select TCP in the upper left list.
- Write the IP address of the system.
- Choose where to download the project into the system specifying the "Upload Device Path".
- To transfer the project to the system click on the button "Upload Project!".

There is another possibility to transfer the project to the panel. It is by using a USB key.

- Copy from the configuration PC to the USB Key the folder in which is stored the system project.
- Insert the USB Key into the system
- Copy the project folder from the USB Key to the MMC memory.

Note: The name of the memory disks are according to the following table:

Memory	Name used by Windows Explorer	Note
MMC	MMC Memory	Memory to store data and executables. Read and Write memory.
micro SD	SD Memory	Removable Memory. Read and Write memory.
USB Key	Hard Disk	USB key inserted into a USB port of C6 S14.

Table 6  
Procedure

In the picture below an example of file Explorer on C6 S14.

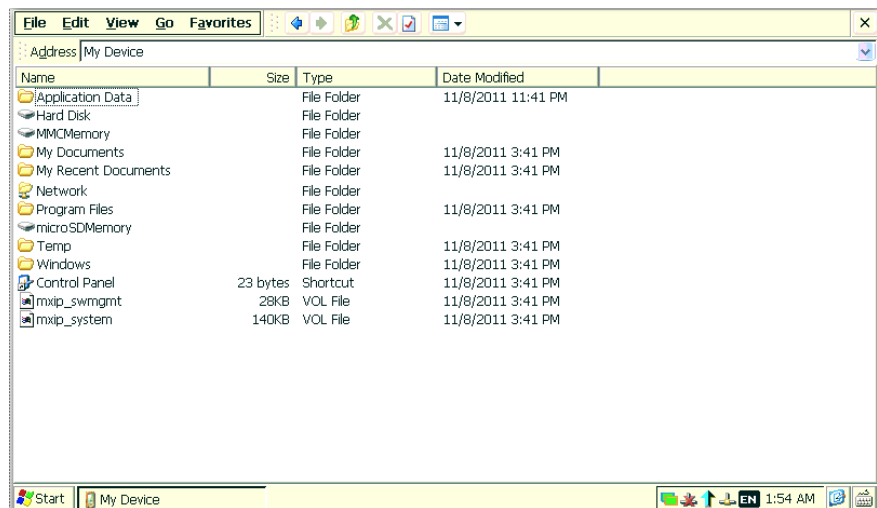


Figure 44  
Connecting the configuration PC

**Process control phase**

After the project was transferred, C6 S14 is ready to communicate to one or more PLC's and to visualize the screens according to the configured project.

**ATTENTION:** If you need to communicate with a device connected to the serial port you must configure the serial port.

**Commissioning and re-commissioning**

When you switch on the first time C6 S14, there is no project inside. At first you need to transfer a project into C6 S14.

After you download a project you can retransfer another project or another version of the same project without any special operation, also while the project runs on C6 S14.

**5.1.2 Transfer**

C6 S14 is always ready for accepting the download of a project, even when a project is running. In this way, if C6 S14 is connected by means of Ethernet to the configuration PC, you are able to download a new project or a new version of the same project even without stopping the project.

**5.1.3 Configuring the serial port**

If your project need to communicate with a device connected to the serial port, you need to configure the serial port according to the type of serial connection you use for your communication. The following types of communications are supported by the serial port of C6 S14:

- RS 232
- RS 422
- RS 485

C6 S14 comes as default with the serial port set as RS 232. If you want to change the type of serial communication you must do the following:



Go in control panel

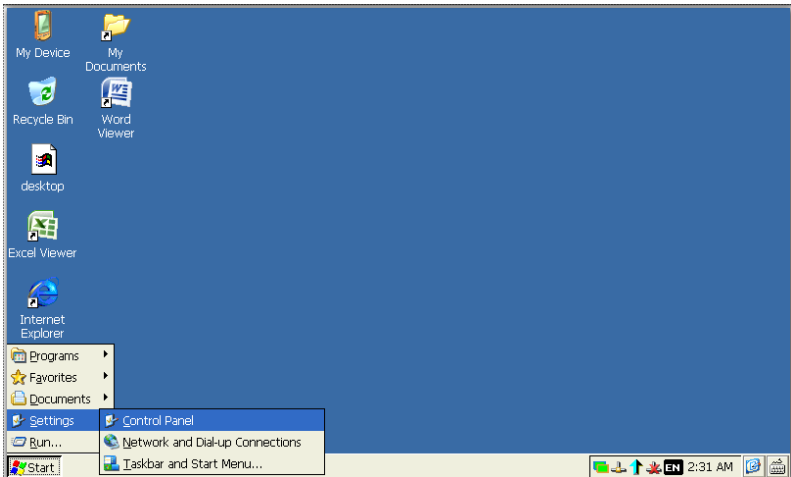


Figure 45  
Configuring the serial port

Double click on “Serial Port Configuration”

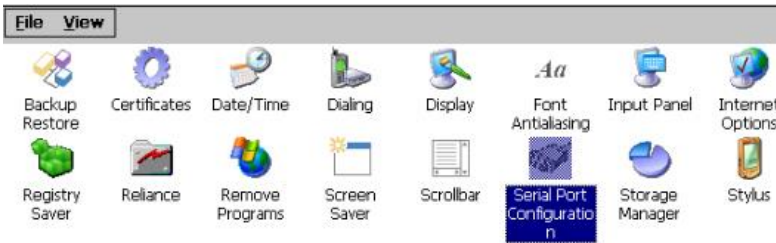


Figure 46  
Configuring the serial port

Choose the type of serial communication


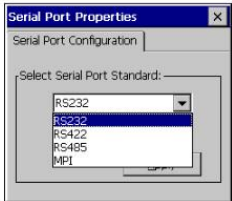


Figure 47  
Configuring the serial port

And confirm by pressing the “Apply” button. A warning message will rise, advising to store that new configuration is active and saved a permanent way.

Figure 48  
Configuring the serial port

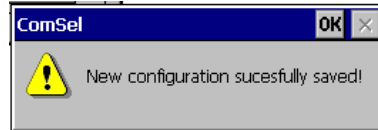

This applet can be used just to check which serial communication mode is active; in this case it is enough to push the “red cross” on the high right side of the panel (fig 54).

Please note that MPI mode cannot be selected: when this protocol will be used by HMI software all required settings will be applied automatically.

#### 5.1.4 Connecting the serial port

A unique DB15 male connector hosts all serial protocols (please check par. 7.4 for pin-out details) so it is necessary to adapt this connection to plant needs; KEB can supply connector adapters as optional parts but user can adapt DB15 connector by himself.


#### 5.1.5 Managing the project

C6 S14 has powerful tools to manage a running project. With the same mask used to transfer the project (see below) you can also:

- Stop the C6 S14 project from the configuration PC
- Start the C6 S14 project from the configuration PC
- Debug the project from the configuration PC
- Transfer the project from C6 S14 to the configuration PC.

### 5.1.6 Stopping the running project

Figure 49  
Stopping the running project

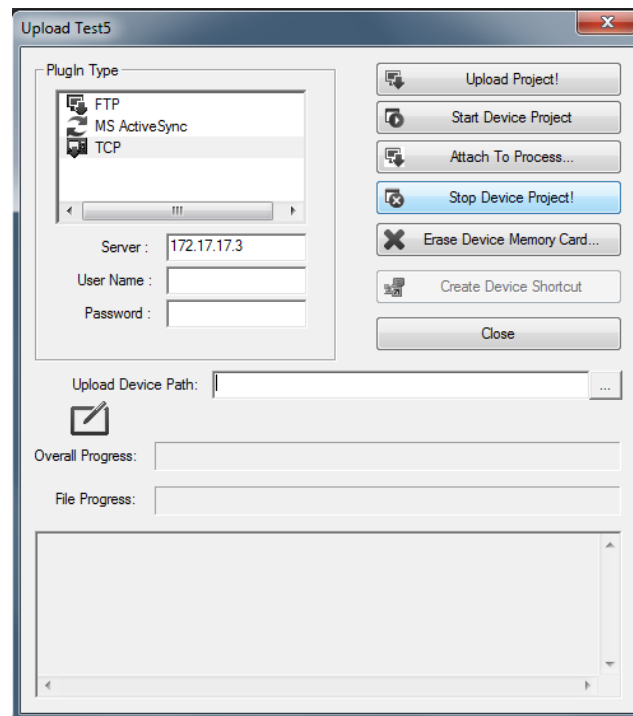


To stop a project running in C6 S14, you must:

- Select TCP in the upper left list
- Write the IP address of C6 S14
- Click on the button "Stop Device Project!"


You will see the project in C6 S14 stops (see below)

Figure 50  
Stopping the running project

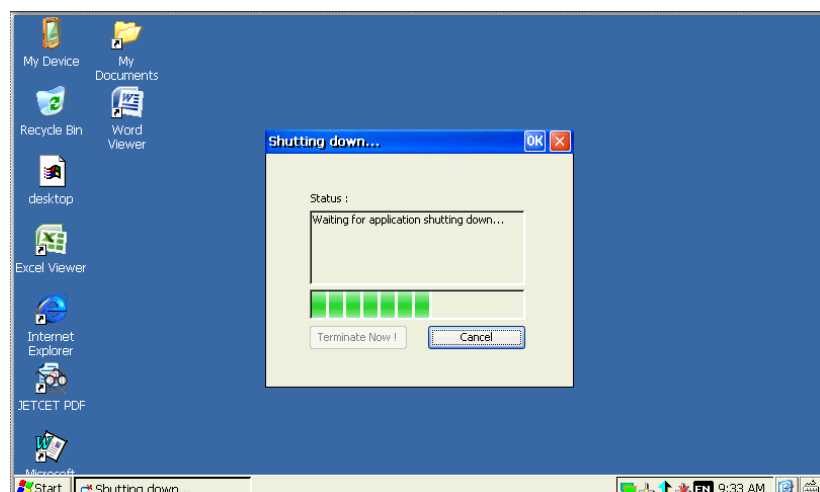

5.1.7 Starting the project

Figure 51  
Starting the project

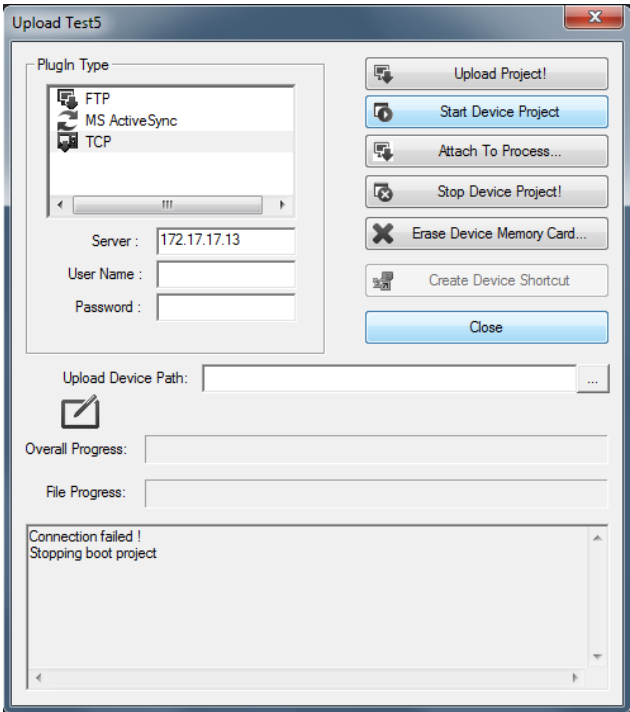


To start a project in C6 S14 by using the configuration PC you must:

- Select TCP in the upper left list
- Write the IP address of C6 S14
- Click on the button “Start Device Project”

You will see the C6 S14 project starting (see below).

Figure 52  
Starting the project

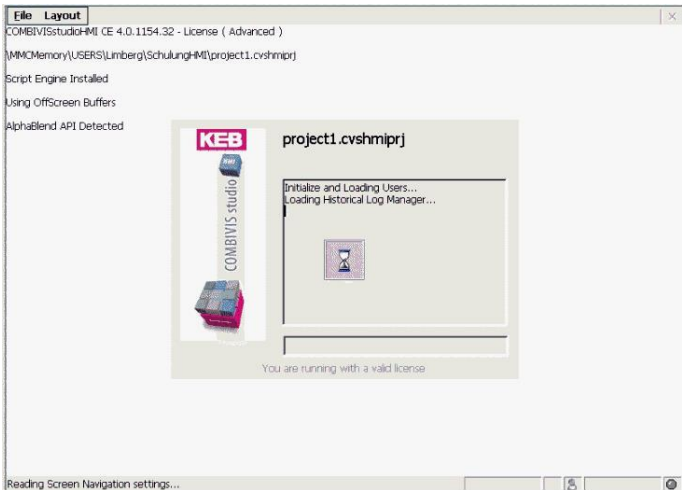


If there isn't a project in C6 S14 you will have an error.

### 5.1.8 Debugging the project

You can debug the project in C6 S14 by connecting with the configuration PC. In order to be able to use the debugging functionality you must prepare your project as follows:

1. Select "Networking" in the project explorer window of COMBIVIS studio HMI
2. Enable the property "Debugger" in the Properties window of COMBIVIS studio HMI

Figure 53  
Debugging the project

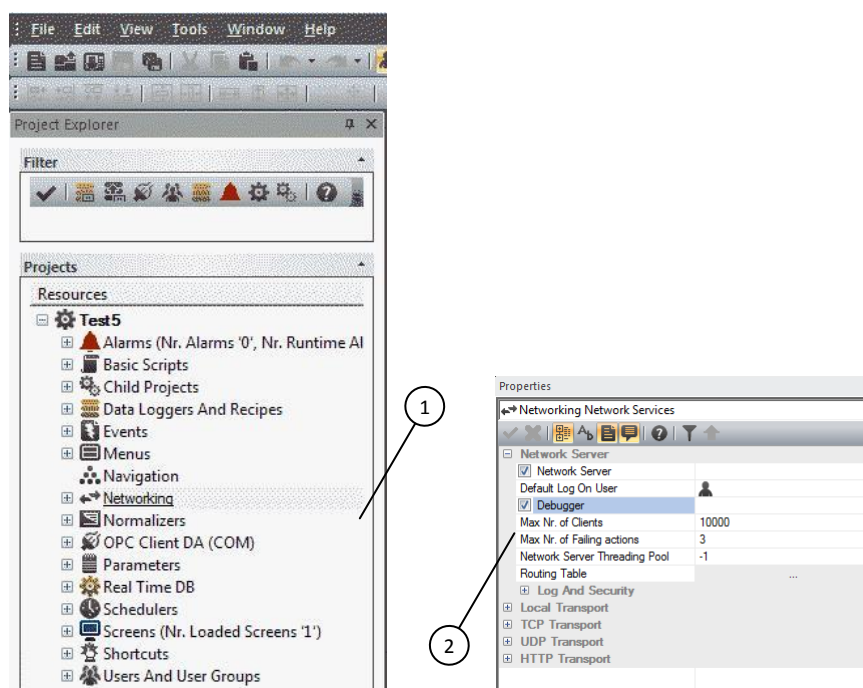

Transfer the project to C6 S14 and start it.


**NOTE:** Be sure that the project is running otherwise you cannot debug the project

To debug the project runs in C6 S14 from the configuration PC you must:

1. Select TCP in the upper left list
2. Write the IP address of C6 S14


Click on the button "Attach To Process..."

Figure 54  
Debug the project

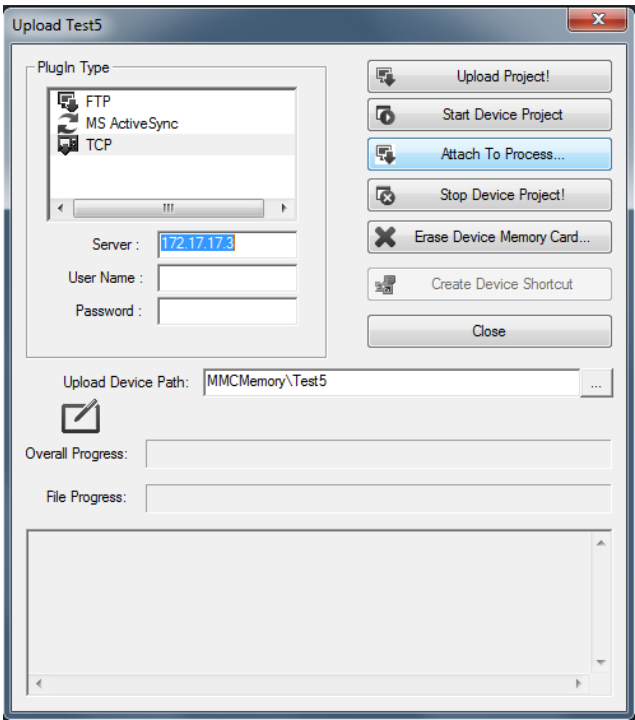


The following window will appear

Figure 55  
Debug the project

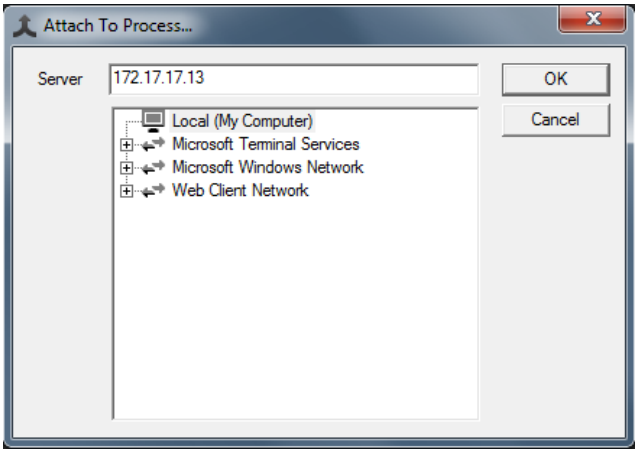

Write the IP address of C6 S14 and click on the “OK” button. A new windows asking for user and password will appear

Figure 56  
Debug the project

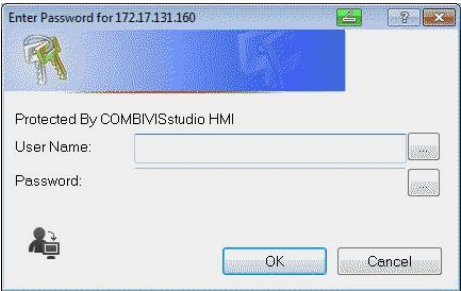

In case the project is not protected, just click "OK", otherwise insert the name and password of a project user that has the rights to change the project.

You will see that a debug session will start in COMBIVIS studio HMI on the configuration PC. Now you are able to:

- See the project screens and navigate between them. Please note that you can see different screen from those seen on C6 S14 and that your debugging is not affecting the normal running of C6 S14 project
- See and change the value of the variables
- Put breakpoint and debug Visual Basic scripts running in the project

### 5.1.9 Transfer the project from C6 S14 to the configuration PC

This option allows you to transfer the project from C6 S14 to the configuration PC in order to check or change and hence transfer into C6 S14 again.

**Hint:** It is always suggested to protect the project with a password in order to don't allow changes to the project.

Be sure that the project is not running on C6 S14. When COMBIVIS studio HMI runs on the configuration PC, click on the "File" menu and select "Open Device Project..."


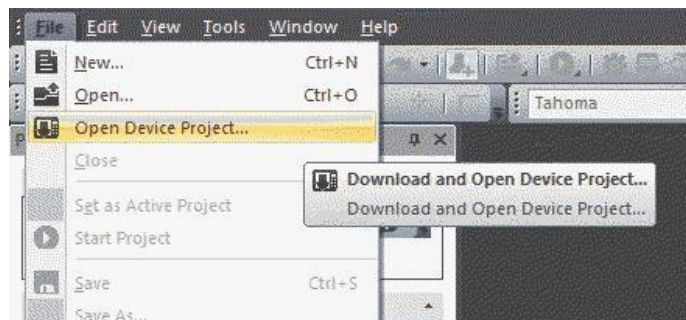


Figure 57  
Debug the project

1. Select TCP in the upper left list
2. Write the IP address of C6 S14
3. Write the path on which you want to store the project on your configuration PC
4. Click on the button "Get Project from Device!"

Figure 58  
Debug the project

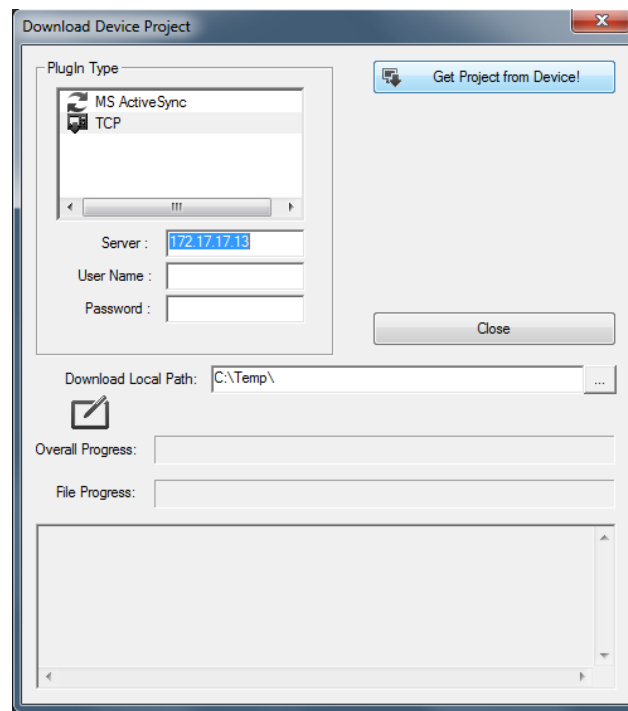

After the transfer of the project you will see the project explorer containing the project resources in COMBIVIS studio HMI and you will be able to check, test and change the resources of the project.

#### 5.1.10 Backup and restore

C6 S14 provides tools to backup and restore the contents of its internal memory in order to manage the project and the operating system of C6 S14. For more information please contact the support center of KEB.

#### 5.1.11 Updating the operating system

Please contact the support center of KEB.



## 5.2 COMBIVIS studio 6 BASIC/PRO/ADVANCED


This chapter is valid only for C6 S14 systems which are delivered with CONTROL Runtime pre-installed directly from production.

### 5.2.1 Project Implementation

The CONTROL Runtime runs as a thread with real time priority.

The execution model is based on the task concept; the program execution requires the definition of tasks and the assignment of priority and execution cycle according to the following figure (see below in this manual about how to configure COMBIVIS studio 6).

Figure 59  
Task configuration

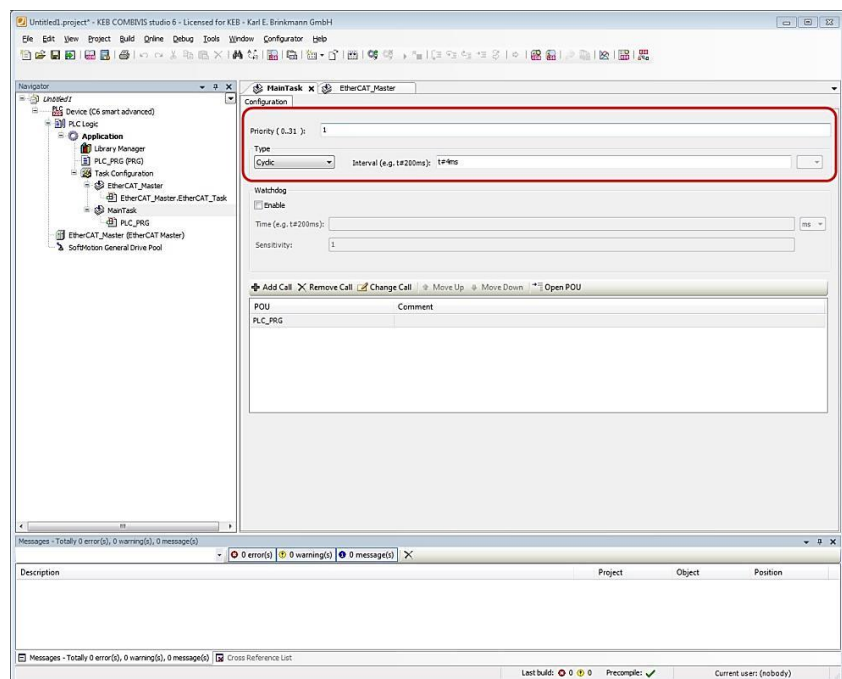

Each task is executed at the specified time interval and according to the assigned priority. Only when all the CONTROL Runtime activities are over, the CPU time goes to the other processes, as they are assigned to an inferior priority.


**Note:** Each task cycle time must be properly assigned according to the general performances required by the Soft PLC itself, by the COMBIVIS HMI Runtime, by the COMBIVIS connect Runtime and by any other application or process running in the system. A too short task cycle time may introduce an undesired slowdown in the general reaction of the system. If this is the case, the task cycle time should be properly increased until you reach the proper balancing between performances and reactivity of the whole system.

### 5.2.2 Transferring the COMBIVIS studio 6 application to the target system

To transfer a valid “COMBIVIS studio 6” application of the target system, follow these steps:

- Ensure the C6 S14 device is connected to the same sub network of the PC where you have running the COMBIVIS studio 6 programming tool (same network mask, e.g. “192.168.1.xx”)
- Double click on the device icon from the COMBIVIS studio 6 project tree; the right part of the workspace will show the “Communication settings” tab contents
- Select the Gateway and click on the button “Scan network” button
- The box will be populated with the list of available CONTROL Runtime
- Click on the one you want to connect to and click on the “Set active path” button
- Click On-line\Login to start the communication

Figure 60  
Setting active path

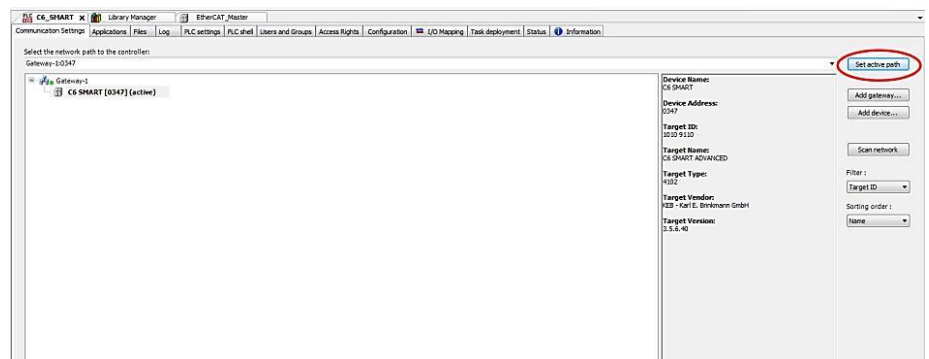


### 5.2.3 I/O Fieldbus

The COMBIVIS studio 6 implementation for C6 S14 systems supports the following I/O fieldbuses:

- EtherCAT with DC support (distributed clock) on LAN1
- Modbus TCP on LAN2
- Modbus RTU

To insert the I/O master right click on the C6 S14 device icon on the project tree, select “Add Device” and select from the “Vendor” list box “KEB Automation KG”.

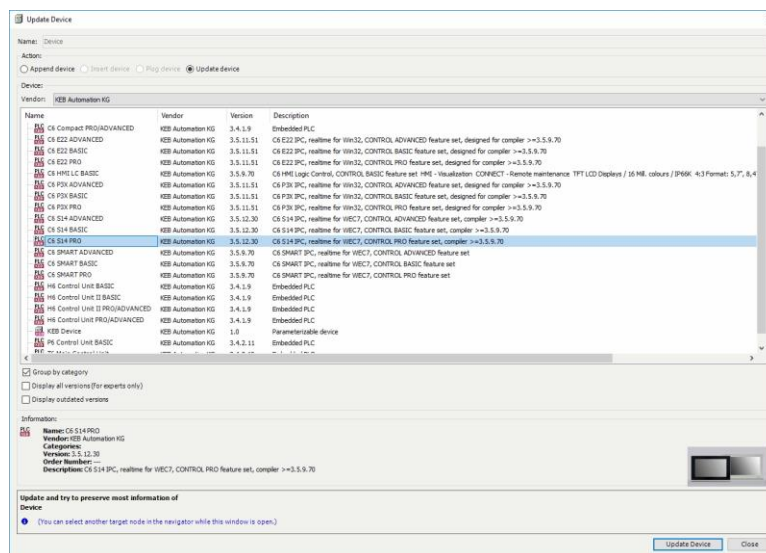

The list will be populated with the available master devices. Select the one required by your application in between:

- EtherCAT Master
- Modbus COM (for Modbus based I/O both serial and TCP)
- CANbus

C6 S14 systems are featuring two Ethernet interfaces.

The interface that must be used for I/O fieldbus is the one denominated “LAN1”.

### 5.2.4 Support for retentive data

C6 S14 systems are equipped with a Micro UPS specifically designed to support the data memory retention.

In COMBIVIS studio 6 the retentive variables can retain their value throughout the usual program run period. They are declared as “Retain Variables” or even more stringent as “Persistent Variables”. For each case a separate memory area is used.

Please check the COMBIVIS studio 6 manual for any additional detail about retentive data.

The use of the retentive areas does not require any specific configuration except for declaring the variable in the proper area according to the COMBIVIS studio 6 programming manual.

**Note:** To start the backup procedure the super capacitors must be fully charged.

At the moment of a power failure (when the voltage is below the threshold for more than 20ms) the UPS triggers an event and the system will switch off the display and the USB device connected in order to save energy, and will follow a four step sequence to save data:

1. The panel display and the USB ports are turned off
2. All running IEC tasks are terminated so the retentive areas are consistent
3. The system starts flushing the retentive memory areas to a file which is saved on disk
4. The CONTROL Runtime is terminated

The panel continues to run until the Micro UPS is able to provide power to C6 S14.

**Note:** To start the backup procedure the super capacitors must be fully charged.

**Note:** The available retentive memory size is 64KB for the RETAIN memory type and 64KB for the PERSISTENT memory type.

**Note:** If the power supply returns before the energy inside the Micro UPS is finished, and actually C6 S14 has not been switched off, the following operations are carried on:


- The display is switched on
- The USB ports are powered
- CONTROL Runtime behavior can be selected in between 3 possible models:

- 1) CONTROL Runtime does not start and no message is returned.
- 2) CONTROL Runtime does not start and returns a warning message.
- 3) CONTROL Runtime restarts normally (default option).

The COMBIVIS studio 6 restart behavior can be configured directly by the user by means of the COMBIVIS studio 6 launcher manager program.

The launcher manager of the CONTROL Runtime is an application stored in the "\\MMCMemory\\CoDeSys3" folder as shown in the following figure.


Figure 61  
Start CDlauch-Mgr.exe

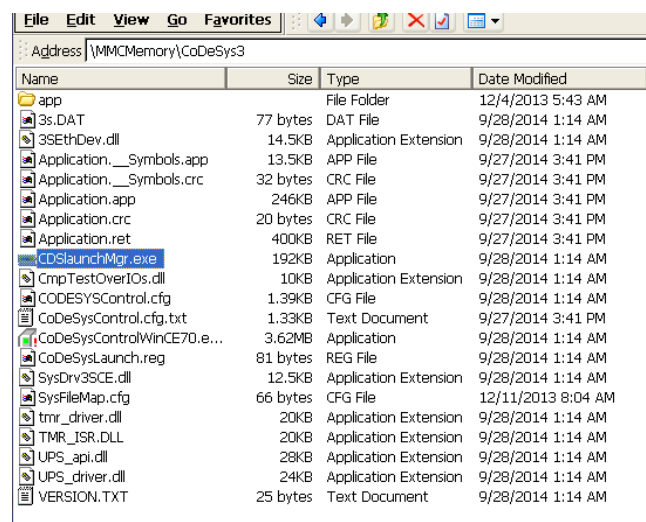

To start it, simply double click on the file name.

Figure 62  
CDS Launch Manager

The launcher manager interface is shown in the following figure.

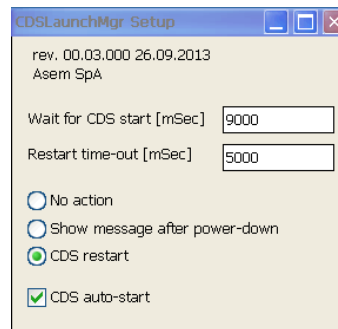

The parameter "Wait for CDS start" is the time the launcher waits before starting the CONTROL Runtime.

"Restart timeout" is the time the launcher waits before restarting CONTROL Runtime.

### 5.2.5 Use in combination with COMBIVIS HMI Runtime

COMBIVIS HMI Runtime can be configured to communicate with the CONTROL Runtime.

The C6 S14 CONTROL Runtime implementation includes the CODESYS Gateway which is then used as communication interface.

The COMBIVIS studio HMI project must be configured to communicate with a generic CODESYS controller inserting in the "Real Time DB" resource. The driver called "CODESYS" as shown in the following figure:



Figure 63  
Configuring COMBIVIS studio 6 project

The protocol uses a socket to communicate with the CONTROL Runtime through the Gateway component.

The Station must be configured to connect to "localhost". The Device name is the one shown by the COMBIVIS studio 6 programming system when connected on-line with the C6 S14 device from the "Communication settings" window as shown in the following figure.


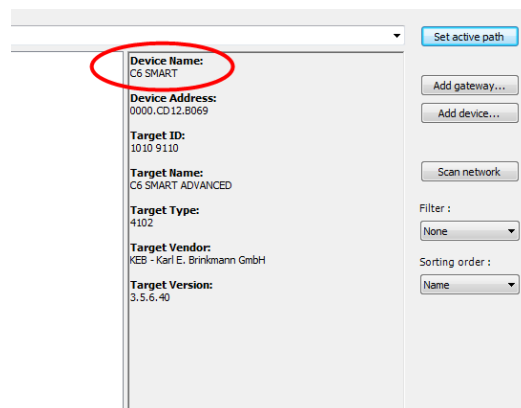


Figure 64  
Device name in COMBIVIS studio 6

The HMI Station Properties will result as following.

Figure 65  
CONTROL implementation

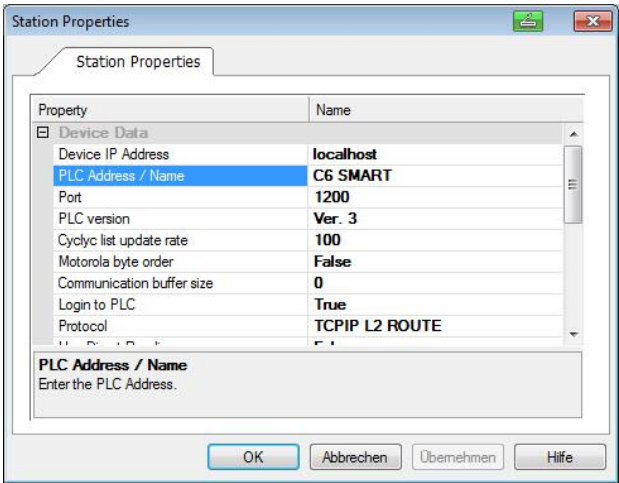

The CONTROL Runtime running on a C6 S14 device can be reached also from a panel which has been configured to belong to the same sub network. When having on the same sub network more than one C6 S14 system, you need to assign to them different name.

**Note:** The COMBIVIS studio HMI project can be configured to communicate with more than one controller in these cases the system can act as a gateway and transfer data through the different channels. For further information about this feature consult the COMBIVIS studio HMI online manual searching for “Variable Commands” and then “Move Value”.

### 5.2.6 Use in combination with COMBIVIS connect

The C6 S14 systems are featuring COMBIVIS connect Runtime preloaded and preconfigured.

It is possible to connect the system from remote using the COMBIVIS connect Control Center tool. The LAN2 (Eth2/WAN) network interface must be used for the Internet connectivity.

Figure 66  
COMBIVIS connect implementation

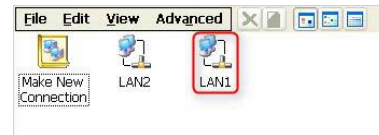


Figure 67  
COMBIVIS connect implementation



The LAN1 (Eth1/LAN) interface must be used for the connection to the automation network or fieldbus. The two interfaces cannot be swapped.

The COMBIVIS connect setup for C6 S14 devices provides that the VPN is configured by default with LAN1.

Figure 68  
COMBIVIS connect implementation


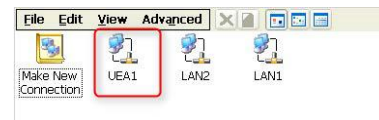


Figure 69  
COMBIVIS connect implementation

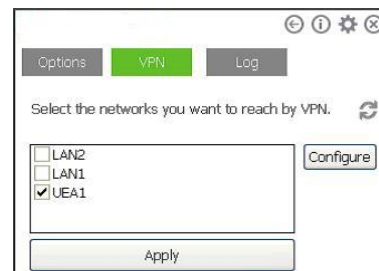

The COMBIVIS connect setup for C6 S14 devices provides the installation by default of the COMBIVIS connect VPN virtual network adapter. The VPN is by default configured to be done with this adapter without any interference with the physical interface LAN1 which is normally used by CONTROL Runtime for the automation network or the fieldbus.

### 5.2.7 Limitations and Recommendations

In order to get the best balancing between functionalities and performances we strongly suggest to follow some guidelines when designing the applications for COMBIVIS studio 6 and COMBIVIS studio HMI.

- The PLC cycle time must be greater or equal than 1ms
- In general the CPU time reserved to CONTROL shall not be greater than 25%; this is calculated using the real time required by the PLC Runtime to complete the cycle and the time left free for all the other processes

**Note:** The maximum CPU time usable for the COMBIVIS studio 6 application is fixed from a system parameter; in case the PLC program gets more than 25% of the CPU time, the CONTROL Runtime will be stopped. The user shall then properly change the PLC task timing in order to respect the limitation.

- The COMBIVIS studio 6 application shall use only one at a time of the 3 I/O fieldbus available
- The maximum number of bytes exchanged between COMBIVIS HMI Runtime and CONTROL Runtime shall not be greater than 1024
- The sampling time specified for data acquisition shall not be less than 15sec
- The scripting shall be carefully used in order to leave enough time to the other tasks to run without impacting too much with the general reaction of the overall system
- If the project has been configured to use the Web Client, you should consider that when an external client is connect you may experience a slowdown of the page change performance of the COMBIVIS HMI Runtime
- The “S7-MPI COMx” communication protocol from COMBIVIS studio HMI is not supported



## SECTION 6

# System Manager

### 6.1 System Manager

The System manager is a utility which is available for all ARM and x86 based KEB systems with WinCE operating system and comes as built-in component of the operating system image.

The System Manager aims to provide a comprehensive support to manage system specific features, such as clone, selective system components backup and related restore operations, system font quality settings and screen saver options.

It is available as a set of Control Panel applications:










Backup Re-store	 Backup Restore
Font Antialiasing	 Font Antialiasing
Screen Saver	 Screen Saver
Touch Buzzer	 Touch Buzzer
EMMC Usage	 EMMC Usage
Kiosk Mode	 Kiosk Mode
Language Settings	 Language Settings
Scrollbar	 Scrollbar
System reboot	 System Reboot

Figure 70  
System Manager Control Panel Applets

**Note:**

Before starting Backup Restore operations the CONTROL runtime should be stopped. Otherwise Backup Restore operation can take very long time!

Figure 71  
Backup Restore



Backup  
Restore

**Note:**

The settings saved by the clone process are those related to the system (IP address, network configuration, system time, etc.) and those related to the application installed (Control project, HMI, Connect). Any specific user setting, except for the auto-run keys) are not saved

## 6.1.1 Backup Restore


The "Backup Restore" utility interface is shown in the following figure.

The utility provides two functionalities:

- System clone and restore
- Selective feature backup and selective restore

## 6.1.2 System clone and Restore

To store Clone snapshots and selective feature backup, the System manager utility uses a single file container with extension ".ASR" which includes all the information and data required later for the restore operation.

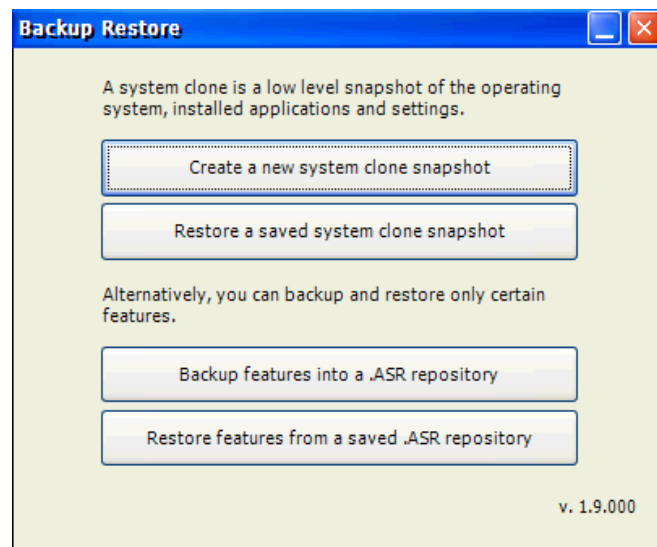

The system clone creates a low level snapshot of:

- All the files on disk
- The operating system configuration from the registry
- The applications configurations from the registry

To process with the clone process, click on the "Create a new system clone snapshot" button.

The clone operation has two optional settings:

- 1) Operating system image: allows to create a clone of the operating system ROM image.
- 2) Custom registry keys: allow to specify custom keys to be saved in the backup.

**Note:**

*Destination path for the clone file can be only an external storage disk such a USB pen drive.*

**Note:**

*The restore of a clone snapshot cannot be selective.*

**Attention:**

*When restoring a clone snapshot of a system associated to a COMBIVIS connect Domain, please consider that the COMBIVIS connect Identity is also restored. This means that if the target device was also already associated to a COMBIVIS connect Domain, it will lose its original identity. In case you need to keep it, it is suggested to save the "auth.bin" file from the COMBIVIS connect runtime installation folder before restoring the clone snapshot. When restoring a feature backup, the COMBIVIS connect identity of the target device is instead maintained.*

**Note:**

*If the System manager is not able to determine the compatibility condition, it will display a warning message and final decision is left to the user.*

Click "Run" to start the process.

You will be asked to provide a path where to store the clone snapshot.

Once the process is started the status bar at the bottom of the system manager application informs on the operation in progress.

To restore a clone snapshot you can simply click on the "Restore a saved system clone snapshot" button and locate the ".ASR" repository file.

The status bar at the bottom of the system manager application informs on the operation in progress.

The restore process provides the automatic shutdown of the running processes (Control project, HMI, connect), the file replacement from the archive and the processes restart at the end.

**Compatibility check**

A clone snapshot can be restored to the same system from where it comes as well to another device.

When doing the restore operation, the System manager utility will verify if the snapshot provided is compatible with the actual hardware.

**Selective backup and restore**

The selective backup provides support to backup only specific and selected features, files and application settings.

**Attention:**

The backup of the studio HMI application provides the backup of all the user's applications present on the "MMCMemory" flash disk. In case the Data folder has been moved out of the default path, it will NOT be saved in the backup.

**Note:**

Destination path for the selective backup file can be internal or external storage disk.

**Note:**

If the System manager is not able to determine the compatibility condition, it will display a warning message and final decision will be left to the user.

Once the process is started the status bar at the bottom of the system manager application informs on the operation in progress.

To start the selective backup, click on the button "Backup features into a .ASR repository".

The utility will display a list of available features and settings to be saved.

The window is self-explain, follow the instructions on the screen and mark the check box of the desired features you need to backup.

Once the selection is completed, press Run to select the target path and to start the process.

To restore a selective backup click on the button "Restore features from a saved .ASR repository" and locate the archive.

Once the archive has been loaded, you can press the "Details" button to check the archive contents. A complete list of all the features available in the .ASR archive, including application version, will be displayed.

The restore process provides the automatic shutdown of the running processes (Control project, HMI, connect), the file replacement from the archive and the new processes restart at the end.

The restore process may require several system reboots to complete; the process is fully automated.

**Compatibility check**

A selective backup can be restored to the same system as before or to another device.

When doing the restore operation of the operating system component the System manager utility verifies if the archive content is compatible or not with the actual hardware.

**Note:**

Font Antialiasing is *ONLY* supported by ARM based devices (C6 HMI, C6 HMI LC, C6 SMART).

### 6.1.3 Font Antialiasing


The utility allows the setting of the font quality rendering options.

Double click on the Control Panel icon and just select the desired rendering option.

Click OK to confirm.

The settings are automatically saved to the registry and no manual saving is required.


Figure 72  
Font Antialiasing

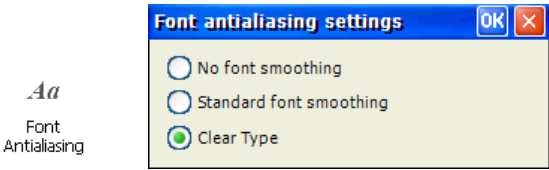

6.1.4 EMMC Usage

The utility provides useful information on the usage of the eMMC memory together with an indication of its health status.

Figure 73  
EMMC Usage

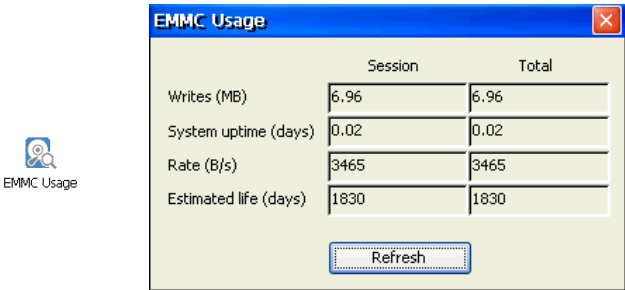

The information provided are divided per current session (since last power cycle) and in total since the installation of the System Manager utilities.

The utility provides the following information.


<b>Writes (MB)</b>	Written data to the eMMC memory in MB
<b>System uptime (days)</b>	Days since last power cycle
<b>Rate (B/s)</b>	Average writing speed in B/s calculated considering the amount of data written and the uptime
<b>Estimated life (days)</b>	Estimation of the memory life time calculated considering the maximum number of writes supported by the physical device (information from the memory manufacturer) and the rate of writes generated.

### 6.1.5 Kiosk mode

The utility allows enabling of the kiosk mode.

When enabled, the panel will start directly the HMI Runtime with related project without showing the Windows CE Explorer.

Figure 74  
Kiosk Mode

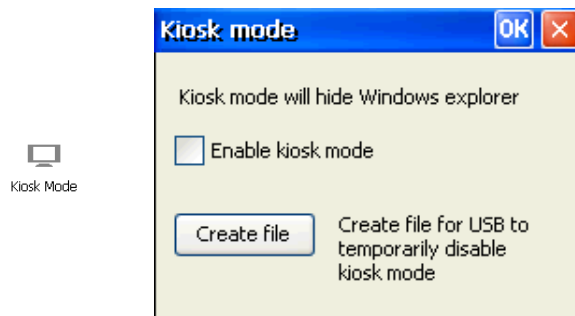

To enable kiosk mode, just open the utility and mark the “Enable kiosk mode” check box

At the moment you enable the kiosk mode, you can also create a file which allows temporarily kiosk mode deactivation. The file is created using the “Create file” button. Plug a USB pen drive into an USB port and store the file directly on the root of the USB disk.

If the USB pen drive is plugged in, the file is automatically recognized and kiosk mode will be disabled immediately until the next power cycle.

If you had forgotten to create the file at the moment the kiosk mode was enabled, you can simply make it manually by yourself.

Create a text file named “SystemManager.xml”. Open it with any text editor and copy in, the following text.

```
<?xml version="1.0" encoding="utf-8"?>
<SystemManager>
  <Commands>
    <Command Type="RunProcess" FilePath="explorer.exe" Arguments="" WaitCompletion="0"/>
  </Commands>
</SystemManager>
```

Save the file and use it as explained before.




**Note:**

If kiosk mode is enabled and the HMI Runtime is terminated, or simply closed with the proper command, Explorer will not be started automatically and you will apparently end up in a situation where the screen is frozen and not reacting. To avoid this annoying condition it is enough to include the launch Explorer command before the Runtime shutdown as shown in the figure below.



Figure 75  
Launch Explorer from COMBIVIS studio HMI

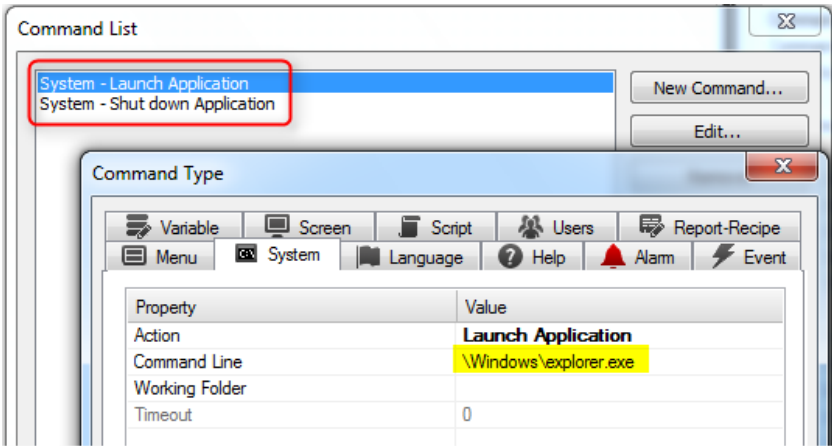


6.1.6 Language settings

The utility provides fonts installation for the Chinese, Japanese and Korean languages

Figure 76  
Language Settings


秧  
Language  
Settings

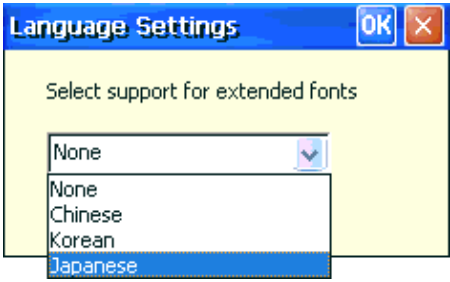

6.1.7 Scrollbar

The utility allows changing the size of the windows scrollbars. This is useful when creating applications with HMI because some of the standard controls get the scrollbar size information from the operating system.

Figure 77  
Configuring Scrollbar

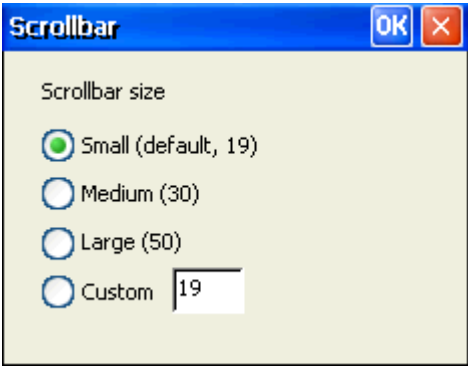


From the window, just select the desired size of the scrollbars and confirm.

6.1.8 System reboot

The utility allows to reboot the system.

Figure 78  
System Reboot

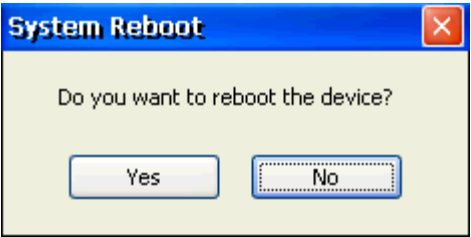

## SECTION 7

# Maintenance and care


## 7.1 Calibration of the touch screen

The touch screen of the system has only to be recalibrated in a few cases, e. g. update of the operating system.

To calibrate the touch screen:


- Go in control panel.

Figure 79  
Calibration of the touch screen

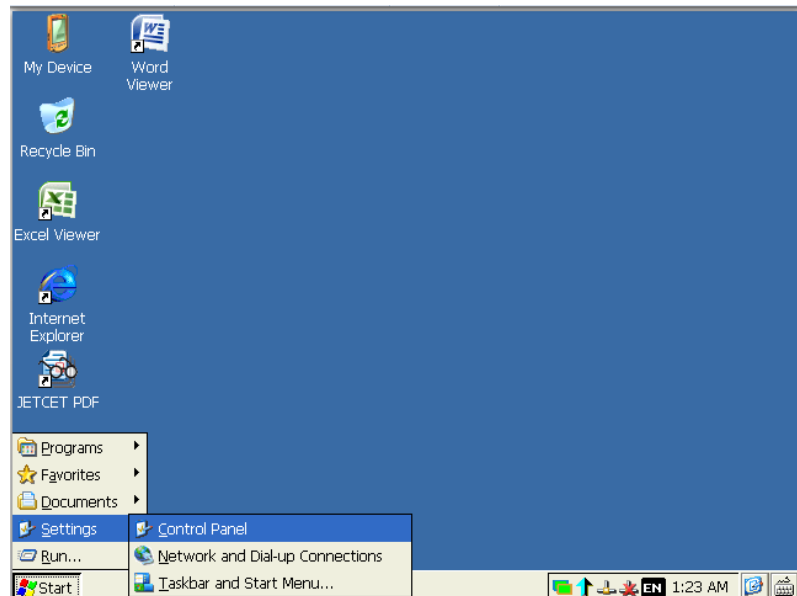


- Open the “Stylus” application.

Figure 80  
Calibration of the touch screen

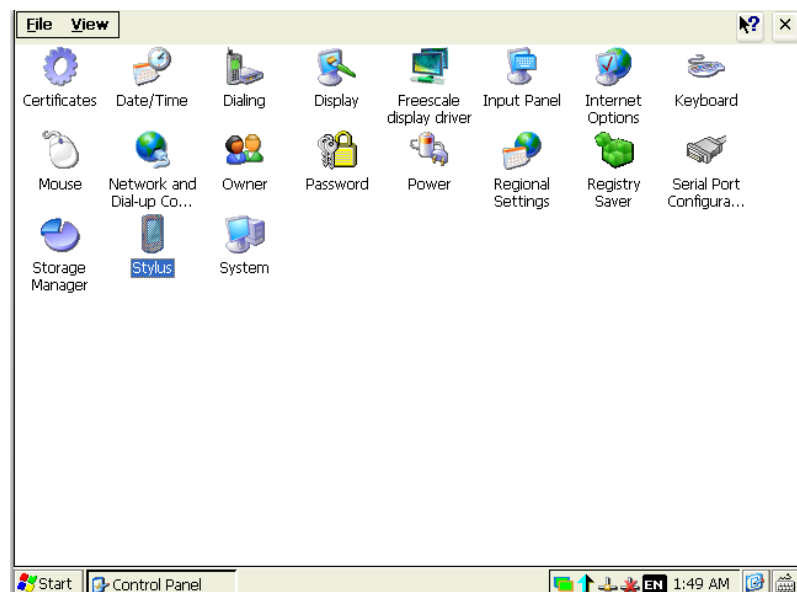

The following window will appear.

Figure 81  
Calibration of the touch screen

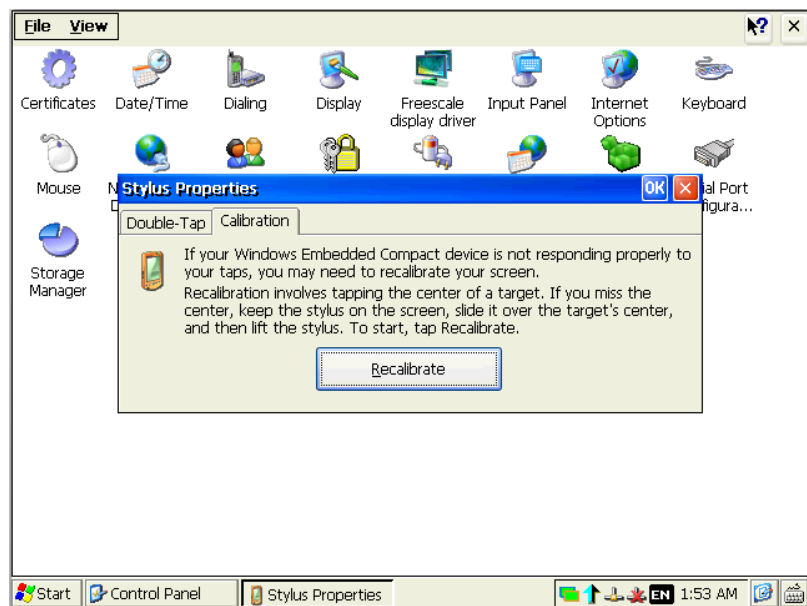

- Click on the “Recalibrate” button and follow the instructions.

## 7.2 Maintaining & cleaning

The system is designed for maintenance-free operation except for the replacing of the battery backup when necessary. It is recommended to clean the touch screen with a damp cleaning cloth and a display cleaning solution.



Note: Clean the front panel of the system with a soft damp cloth only.



Attention: Do not use detergents, solvents, cleaners or objects that could scratch the surface.




Attention: Switch off the power before any cleaning operation.

### 7.2.1 Procedure

Proceed as follows:

- a) Switch off the C6 S14 device or lock the touch screen.
- b) Spray the cleaning product onto a cleaning cloth.
- c) Do not spray directly onto the display.
- d) Clean the display from the screen edge inwards.

7.2.2 Removing the rear cover for access to the motherboard

Tool required	Action
Screwdriver 2,5mm 	Screw / unscrew n.2 fixing screws
Box spanner 2,5mm	Screw / unscrew n.4 SUB-D screws

- Turn off the system and disconnect the power supply.
- On the side of the system remove the 2 fixing screws of the cover.

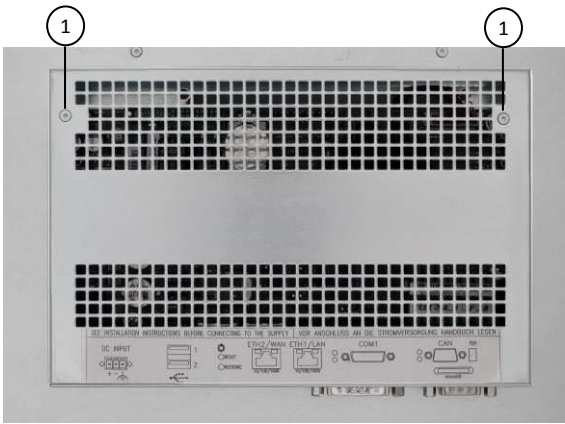


Figure 82  
Backup battery replacement

1 Screw to be removed

- Remove the 4 SUB-D screws as indicated in figure.

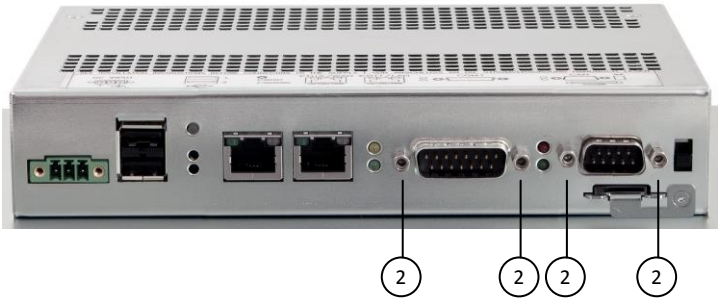


Figure 83  
Backup battery replacement

2 SUB-D screw to be removed

- Remove the cover.



Figure 84  
Backup battery replacement

- Now the motherboard is accessible.

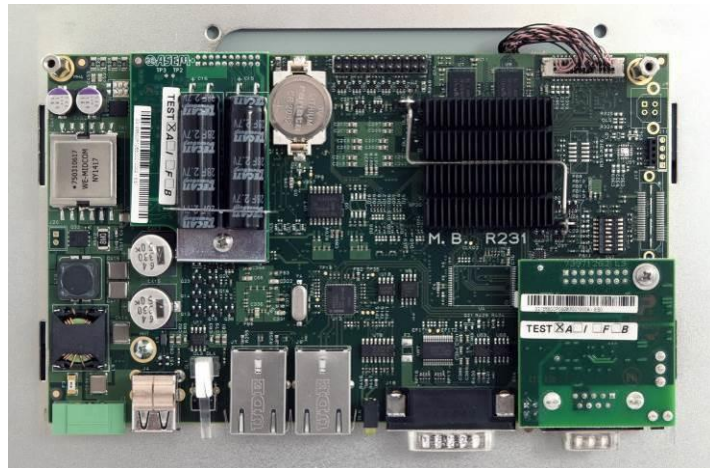



Figure 85  
Backup battery replacement

7.2.3 Backup battery replacement (BR2032 3V)

Tool required	Action
Plastic screwdriver 	Pull out the battery holder.

- Follow the procedure described in paragraph 6.2.2. to access the mother-board.
- Locate the Backup battery.

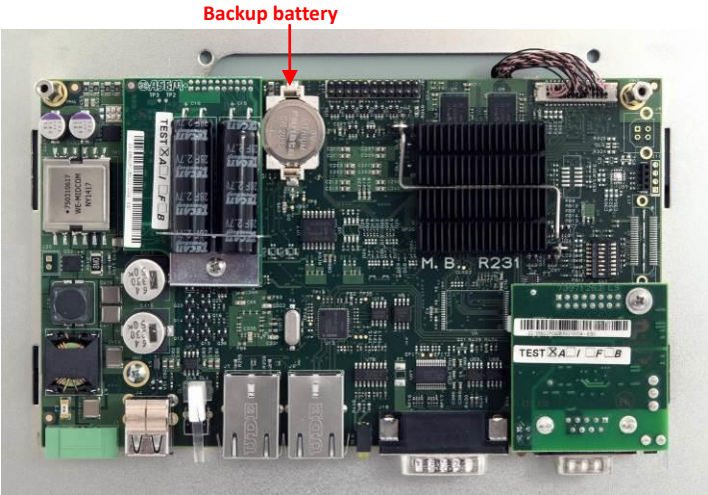


Figure 86  
Backup battery replacement

- Using a screwdriver (not provided) carefully pull out the battery holder.

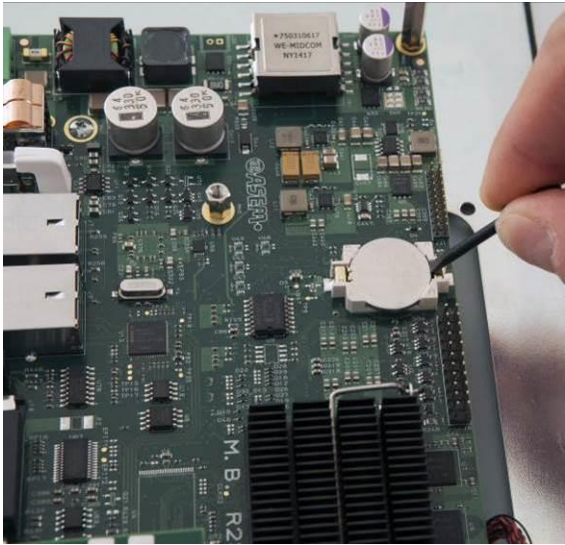



Figure 87  
Backup battery detail

- Remove the battery and replace it with one of the same model (BR2032 3V).



7.2.4 Micro UPS Backup battery replacement

Tool required	Action
Screwdriver 2,5mm 	Screw / unscrew n.1 fixing screws

- Follow the procedure described in paragraph 6.2.2. to access the mother-board.
- Locate the Micro UPS module position.

Micro UPS module

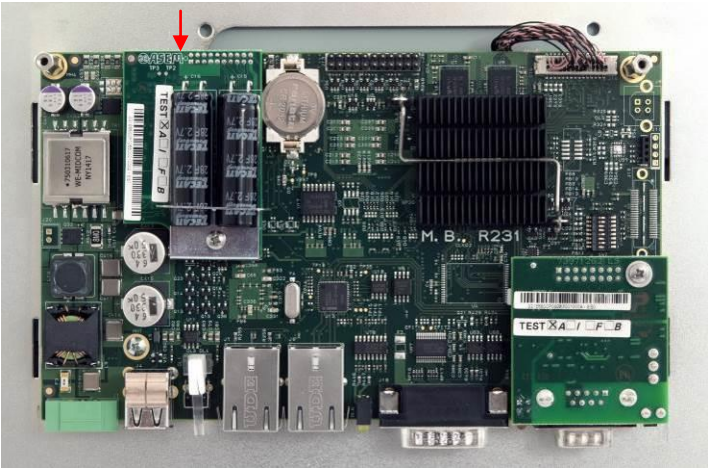


Figure 88  
Backup battery replacement


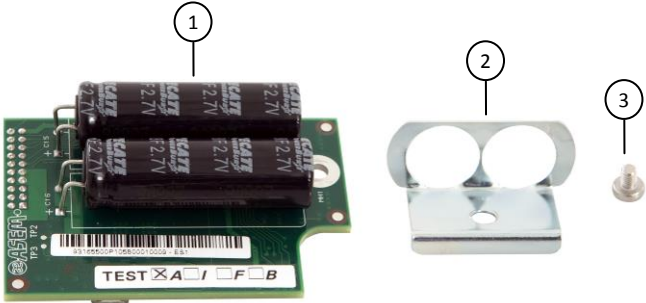


Figure 89  
Backup battery replacement

- 1 Micro UPS module
- 2 Retainer
- 3 Screw

- Remove the screw as indicated in the picture.

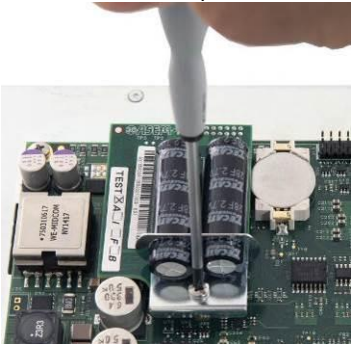

- Remove the retainer as indicated in the picture.

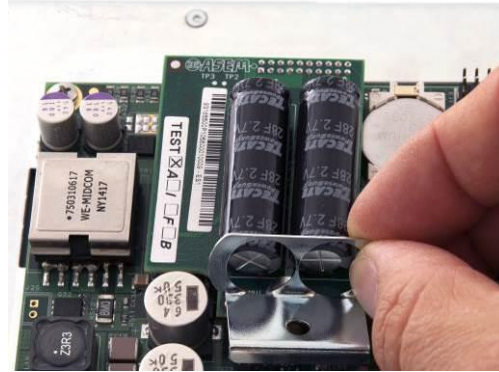


Figure 90  
Backup battery replacement

- Remove the module as indicated in the picture.



Figure 91  
Backup battery replacement

## SECTION 8

# Technical specifications

## 8.1 Technical specifications

Table 7  
System hardware characteristics



Note

The power consumption of the configuration takes into consideration the maximum absorbed power of every component and does not include the consumption of the devices connected to the USB ports.



Note

The efficiency of the antennas and the extension cables is dependent on the quality of the radio frequency signal present at the installation site therefore we suggest not to use more than one extension cable between the antenna and the router.

			Power [W]
<b>Basic configuration</b>	<b>A</b>	<b>B</b>	
		LCD TFT 7" W • P-CAP projected capacitive multi touch screen • ARM Cortex A9 i.MX6 DualLite, 1 GHz • 1 GB RAM • 4GB eMMC Pseudo-SLC • fanless • Windows Embedded Compact 7 Pro with Datalight Reliance Nitro file system • COMBIVIS studio HMI WinCE BASIC runtime • KEB COMBIVIS CONNECT PRO WinCE runtime • KEB System Manager • Aluminium and tempered glass TrueFlat front panel • 12 months warranty	10
<b>HMI Software</b>	●	●	COMBIVIS HMI WinCE BASIC runtime
	●	●	COMBIVIS HMI ADVANCED WinCE runtime
<b>Remote Assistance</b>	●	●	COMBIVIS CONNECT PRO WinCE runtime -
<b>Front panel</b>	●	●	Aluminium front panel • KEB logo sticker
<b>Processor</b>	●	●	ARM Cortex A9 dual core processor • i.MX6 DualLite • 1 GHz • 400Mhz memory bus • Soldered on board
<b>Display &amp; touch screen</b>	●	●	7" LCD TFT 15:9 • WVGA, 800x480, 16M colors • backlight LED 500 cd/m2 • Viewing angle L:R/U:L (typ.): 70°:70°/60°:60° 7" W touch-screen • 4 wires resistive technology • Controller integrated on board
	●		8,4" LCD TFT 4:3 • SVGA, 800x600, 256K colors • LED backlight, 400 cd/m2 • Viewing angle L:R/U:L (typ.): 80°:80°/80°:80° 8,4" touch-screen • 5 wires resistive technology • Controller integrated on board
	●		10,1" W LCD TFT 16:10 • WXGA, 1280x800, 16M colors • LED backlight, 400cd/m2 • Viewing angle L:R/U:L (typ.): 88°:88°/88°:88° 10,1" W Touch-Screen 16:10 • 5 wires resistive technology • Controller integrated on board
	●		10,4" LCD TFT 4:3 • SVGA, 800x600, 16M colors • LED backlight , 400 cd/m2 • Viewing angle L:R/U:L (typ.): 80°:80°/70°:70° 10,4" Touch-Screen 4:3 • 5 wires resistive technology • Controller integrated on board
	●		12,1" LCD TFT 4:3 • SVGA, 800x600, 16M colors • LED backlight, 450 cd/m2 • Viewing angle L:R/U:L (typ.): 80°:80°/65°:75° 12,1" touch-screen • 5 wires resistive technology • Controller integrated on board
	●		12,1" LCD TFT 4:3 • XGA, 1024x768, 16M colors • LED backlight, 600 cd/m2 • Viewing angle L:R/U:L (typ.): 80°:80°/70°:70° 12,1" touch-screen • 5 wires resistive technology • Controller integrated on board
	●		12,1" W LCD TFT 16:10 • WXGA, 1280x800, 16M colors • LED backlight, 400 cd/m2 • Viewing angle L:R/U:L (typ.): 88°:88°/88°:88° 12,1" W Touch-Screen 16:10 • 5 wires resistive technology • Controller integrated on board
	●		15" LCD TFT 4:3 • XGA, 1024x768, 16M colors • LED backlight, 500 cd/m2 • Viewing angle L:R/U:L (typ.): 85°:85°/85°:85° 15" Touch-Screen 4:3 • 5 wires resistive technology • Controller integrated on board
	●		15,6" W LCD TFT 16:9 • 1366x768 (HD), 16M colors • LED backlight, 400 cd/m2 • Viewing angle L:R/U:L (typ.): 85°:85°/80°:80° 15,6" W Touch-Screen 16:9 • 5 wires resistive technology • Controller integrated on board

### 8.1.1.1 Options

	A	B	
<b>Communication ports</b>	●	●	1 x RS-485 (DB9M) isolated with terminations • Without MPI protocol support
			+1

### 8.1.2 C6 S14 (without $\mu$ UPS) Technical specifications

<b>Front panel</b>	<b>C6 S14 capacitive</b>	Aluminium and tempered glass TrueFlat
<b>Touch screen</b>	<b>C6 S14 capacitive</b>	projective capacitive touch-screen
<b>Frontal protection</b>		IP66, Enclosure type 4X (Indoor use only)
<b>Operating System</b>		Microsoft Windows Embedded Compact 7 Pro license with Datalight Reliance Nitro file system • Microsoft olographic sticker
<b>Software</b>	<b>HMI</b>	COMBIVISHMI WinCE BASIC / ADVANCED runtime license
	<b>Remote assistance</b>	KEB COMBIVIS CONNECT WinCE PRO runtime license with KEB sticker
	<b>Utility</b>	KEB System Manager
<b>Power supply</b>		Input voltage 18÷36V DC Isolated power supply section integrated on board
<b>Motherboard</b>		"All-In-One" type • KEB R231
<b>Processor</b>		ARM Cortex A9 dual core • i.MX6 DualLite • 1 GHz, 400 MHz system memory bus • GPU (Graphic Processor Unit) integrated
<b>RAM memory</b>		1 GB DDR3-800 • Soldered on board
<b>Mass storage</b>		eMMC (Solid State Disk) 4GB Pseudo-SLC, 8bit, file system organization • for projects and applications
<b>SD slot</b>		1 x Slot MicroSD integrated on board • external access
<b>Rear access interfaces</b>		2 x Ethernet 10/100/1000 Mbps (RJ45) 2 x USB 2.0 (Type-A / host)
<b>Rear access serial interfaces</b>		1 x RS-232/422/485 (DB15M) with MPI protocol support up to 187,5Kbit/s Optional 1 x RS-485 isolated (DB9M) without MPI protocol support
<b>Environmental specifications</b>		Operating temperature: 0° ÷ +50°C Storage temperature: -20° ÷ +60°C Humidity: 80% (non-condensing)

### 8.1.3 COMBIVIS studio HMI runtimes differences

	BASIC	ADVANCED
RealTime DB (max, byte)	1.024	8.192
Alarms (max)	1.024	4.096
Recipes / Data Logger (ODBC)	Max 2	Unlimited
Communication drivers	Max 2	Max 4
Alarm notification (SMS, E-Mail)		•
SMS notification via SMPP protocol		SMS using Internet gateway
Web Clients		Max 4 clients connected
COMBIVIS studio HMI Mobile		•

### 8.1.4 COMBIVIS CONNECT PRO main features

Control Center application to access the service with intuitive and ergonomic user interface for a comprehensive machine park management
Optimized VPN with access limited to the remote device with COMBIVIS connect Runtime
Optimized VPN with entire access to the complete remote device sub-network and serial pass-through

### 8.1.5 KEB System Manager Control Panel utilities

<b>Backup&amp;Restore</b>	Complete system cloning or selective backup and restore of the installed software
<b>Antialiasing</b>	Softens the characters matrix
<b>Screensaver</b>	Display brightness control or display switch off after an inactivity period
<b>Touch Buzzer</b>	Enable touch sound-feedback
<b>eMMC Usage</b>	Check the eMMC memory usage and evaluate the expected endurance
<b>Kiosk Mode</b>	Hide the O.S. explorer interface and run COMBIVIS HMI runtime in 'kiosk' mode
<b>Language Set-tings</b>	Easy installation of not european languages characters in HMI applica-tions
<b>Scrollbar</b>	Allows to change the size of the scroll bars
<b>System reboot</b>	Reboot the system without switching off the power supply



Note

The power consumption of the configuration takes into consideration the maximum absorbed power of every component and does not include the consumption of the devices connected to the USB ports.



Note

Communication ports cannot be installed together.

### 8.1.6 C6 S14 resistive

			Power [W]
<b>Basic configuration</b>		LCD TFT 7" W • Touch-Screen • Aluminium front panel • ARM Cortex A9 i.MX6 DualLite, 1 GHz • 1 GB RAM • 4GB eMMC PseudoSLC • 512kB MRAM • fanless • 24V DC power supply with MicroUPS function • Windows Embedded Compact 7 Pro with Datalight Reliance Nitro file system CONTROL Runtime WinCE/ARM • COMBIVIS HMI WinCE BASIC runtime • KEB COMBIVIS CONNECT PRO WinCE runtime • KEB System Manager • 12 months warranty	19
<b>SoftPLC</b>	•	CONTROL Runtime Basic for WinCE/ARM runtime Protocols: EtherCAT Master, MODBUS TCP Master, MODBUS RTU Master, CANopen Master. Retentive variables: Automatic backup of retentive variables on MRAM at every system switch-off and/or power supply interruption	-
	•	CONTROL Runtime PRO + SoftMotion v3.5x for WinCE/ARM runtime	-
	•	CONTROL Runtime ADVANCED + SoftMotion + CNC v3.5x for WinCE/ARM runtime	-
<b>HMI Software</b>	•	COMBIVIS HMI WinCE BASIC runtime	-
	•	COMBIVIS HMI ADVANCED WinCE runtime	-
<b>Remote Assistance</b>	•	KEB COMBIVIS CONNECT PRO WinCE runtime	-
<b>Front panel</b>	•	Aluminium front panel • KEB logo sticker	-
<b>Processor</b>	•	ARM Cortex A9 dual core processor • i.MX6 DualLite • 1 GHz • 400Mhz memory bus • Soldered on board	-
<b>Display &amp; touch screen</b>	•	7" LCD TFT 15:9 • WVGA, 800x480, 16M colors • backlight LED 500 cd/m2 • Viewing angle L:R/U:L (typ.): 70°:70°/60°:60° 7" W touch-screen • 4 wires resistive technology • Controller integrated on board	-
	•	8,4" LCD TFT 4:3 • SVGA, 800x600, 256K colors • LED backlight, 400 cd/m2 • Viewing angle L:R/U:L (typ.): 80°:80°/80°:80° 8,4" touch-screen • 5 wires resistive technology • Controller integrated on board	-0
	•	10,1" W LCD TFT 16:10 • WXGA, 1280x800, 16M colors • LED backlight, 400cd/m2 • Viewing angle L:R/U:L (typ.): 88°:88°/88°:88° 10,1" W Touch-Screen 16:10 • 5 wires resistive technology • Controller integrated on board	+2
	•	10,4" LCD TFT 4:3 • SVGA, 800x600, 16M colors • LED backlight, 400 cd/m2 • Viewing angle L:R/U:L (typ.): 80°:80°/70°:70° 10,4" Touch-Screen 4:3 • 5 wires resistive technology • Controller integrated on board	+2
	•	12,1" LCD TFT 4:3 • SVGA, 800x600, 16M colors • LED backlight, 450 cd/m2 • Viewing angle L:R/U:L (typ.): 80°:80°/65°:75° 12,1" touch-screen • 5 wires resistive technology • Controller integrated on board	+4
	•	12,1" LCD TFT 4:3 • XGA, 1024x768, 16M colors • LED backlight, 600 cd/m2 • Viewing angle L:R/U:L (typ.): 80°:80°/70°:70° 12,1" touch-screen • 5 wires resistive technology • Controller integrated on board	+11
	•	12,1" W LCD TFT 16:10 • WXGA, 1280x800, 16M colors • LED backlight, 400 cd/m2 • Viewing angle L:R/U:L (typ.): 88°:88°/88°:88° 12,1" W Touch-Screen 16:10 • 5 wires resistive technology • Controller integrated on board	+7
	•	15" LCD TFT 4:3 • XGA, 1024x768, 16M colors • LED backlight, 500 cd/m2 • Viewing angle L:R/U:L (typ.): 85°:85°/85°:85° 15" Touch-Screen 4:3 • 5 wires resistive technology • Controller integrated on board	+13
	•	15,6" W LCD TFT 16:9 • 1366x768 (HD), 16M colors • LED backlight, 400 cd/m2 • Viewing angle L:R/U:L (typ.): 85°:85°/80°:80° 15,6" W Touch-Screen 16:9 • 5 wires resistive technology • Controller integrated on board	+8
<b>Microups &amp; MRAM</b>	•	MicroUPS, with backup function for micro interruptions max 500ms and 512kB MRAM (Magneticresistive RAM) for retentive variables	

#### 8.1.6.1 Options

<b>Communication ports</b>	•	1 x RS-485 (DB9M) isolated with terminations • Without MPI protocol support	1
	•	1 x CAN isolated channel (DB9M) with terminations	1

## 8.1.7 C6 S14 capacitive



## Note

The power consumption of the configuration takes into consideration the maximum absorbed power of every component and does not include the consumption of the devices connected to the USB ports.



## Note

Communication ports cannot be installed together.

			Power [W]
<b>Basic configuration</b>	LCD TFT 7" W • P-CAP projected capacitive Touch-Screen • Aluminium and tempered glass TrueFlat front panel • ARM Cortex A9 i.MX6 DualLite, 1 GHz • 1GMB RAM • 4GB eMMC PseudoSLC • 512kB MRAM • fanless • 24V DC power supply with MicroUPS function • Windows Embedded Compact 7 Pro with Datalight Reliance Nitro file system • CONTROL Runtime x WinCE/ARM • COMBIVIS HMI WinCE BASIC runtime • KEB COMBIVIS CONNECT PRO WinCE runtime • KEB System Manager • 12 months warranty		19
<b>SoftPLC</b>	<b>A</b>	<b>B</b>	
	●	●	CONTROL Runtime Basic x for WinCE/ARM runtime Protocols: EtherCAT Master, MODBUS TCP Master, MODBUS RTU Master, CANopen Master. Retentive variables: Automatic backup of retentive variables on MRAM at every system switch-off and/or power supply interruption
	●	●	CONTROL Runtime PRO + SoftMotion v3.5x for WinCE/ARM runtime
	●	●	CONTROL Runtime ADVANCED + SoftMotion + CNC v3.5x for WinCE/ARM runtime
<b>HMI Software</b>	●	●	COMBIVIS HMI WinCE BASIC runtime
	●	●	COMBIVIS HMI ADVANCED WinCE runtime
<b>Remote Assistance</b>	●	●	KEB COMBIVIS CONNECT PRO WinCE runtime
<b>Front panel</b>	●	●	Aluminium front panel • KEB logo sticker
<b>Processor</b>	●	●	ARM Cortex A9 dual core processor • i.MX6 DualLite • 1 GHz • 400Mhz memory bus • Soldered on board
<b>Display &amp; touch screen</b>		●	7" LCD TFT 15:9 • WVGA, 800x480, 16M colors • backlight LED 500 cd/m2 • Viewing angle L:R/U:L (typ.): 70°:70°/60°:60° 7" W Touch-Screen 15:9 • P-CAP projected capacitive Multi-touch touch screen
	●		10,1" W LCD TFT 16:10 • WXGA, 1280x800, 16M colors • LED backlight, 400cd/m2 • Viewing angle L:R/U:L (typ.): 88°:88°/88°:88° 10,1" W Touch-Screen 16:10 • P-CAP projected capacitive Multi-touch touch screen
	●		12,1" W LCD TFT 16:10 • WXGA, 1280x800, 16M colors • LED backlight, 400 cd/m2 • Viewing angle L:R/U:L (typ.): 88°:88°/88°:88° 12,1" W Touch-Screen 16:10 • P-CAP projected capacitive multi-touch touch screen
	●		15,6" W LCD TFT 16:9 • 1366x768 (HD), 16M colors • LED backlight, 400 cd/m2 • Viewing angle L:R/U:L (typ.): 85°:85°/80°:80° 15,6" W Touch-Screen 16:9 • P-CAP projected capacitive multi-touch touch screen
<b>Microups &amp; MRAM</b>	●	●	MicroUPS, with backup function for microinterruptions max 500ms and 512kB MRAM (Magnetic RAM) for retentive variables

## 8.1.7.1 Options

	A	B	
<b>Communication ports</b>	●	●	1 x RS-485 (DB9M) isolated with terminations • Without MPI protocol support
	●	●	1 x CAN isolated channel (DB9M) with terminations



### 8.1.8 C6 S14 Family Technical specifications

<b>Front panel</b>	<b>C6 S14 resistive</b>	Aluminium • KEB logo sticker
	<b>C6 S14 capacitive</b>	Aluminium and tempered glass TrueFlat
<b>Touch screen</b>	<b>C6 S14 resistive</b>	4/5 wires resistive technology
	<b>C6 S14 capacitive</b>	projective capacitive touch-screen
<b>Frontal protection</b>		IP66, Enclosure type 4X (Indoor use only)
<b>Operating System</b>		Microsoft Windows Embedded Compact 7 Pro license with Datalight Reliance Nitro file system • Microsoft olographic sticker
<b>Software</b>	<b>HMI</b>	COMBIVIS-HMI WinCE BASIC / ADVANCED runtime license with KEB sticker
	<b>Control</b>	CONTROL Runtime x for WinCE/ARM runtime • license with 3S sticker
	<b>Remote assistance</b>	KEB COMBIVIS CONNECT WinCE PRO runtime license with KEB sticker
	<b>Utility</b>	KEB System Manager
<b>Power supply</b>		Input voltage 18÷36V DC Isolated power supply section integrated on board
<b>Motherboard</b>		"All-In-One" type • KEB R231
<b>Processor</b>		ARM Cortex A9 dual core • i.MX6 DualLite • 1 GHz, 400 MHz system memory bus • GPU (Graphic Processor Unit) integrated
<b>RAM memory</b>		1 GB DDR3-800 • Soldered on board
<b>Mass storage</b>		eMMC (Solid State Disk) 4GB Pseudo-SLC, 8bit, file system organization • for projects and applications
<b>Retentive memory</b>		512kB MRAM (Magneticresistive RAM) for backup of retentive and persistent variables
<b>SD slot</b>		1 x Slot MicroSD integrated on board • external access
<b>Rear access interfaces</b>		2 x Ethernet 10/100/1000 Mbps (RJ45) 2 x USB 2.0 (Type-A / host)
<b>Rear access serial interfaces</b>		1 x RS-232/422/485 (DB15M) with MPI protocol support up to 187,5Kbit/s Optional 1 x RS-485 isolated (DB9M) without MPI protocol support
<b>Environmental specifications</b>		Operating temperature: 0° ÷ +50°C Storage temperature: -20° ÷ +60°C Humidity: 80% (non-condensing)

### 8.1.9 CONTROL Runtime WinCE/ARM for C6 S14 main features

Table 8  
CONTROL Runtime WinCE/ARM for C6 S14  
main features

<b>PLC programming</b>	IEC61131-3, CONTROL Runtime
<b>Supported protocols</b>	EtherCAT Master, MODBUS TCP Master, MODBUS RTU Master
<b>Variables backup</b>	Retentive: 64kByte Persistent: 64kByte Management: Automatic backup of retentive variables on MRAM at every system switch-off and/or power supply interruption
<b>Main performances</b>	Cycle time: $\geq 2\text{ms}$ Jitter: $\pm 600\mu\text{s}$ Fieldbus: Only one, no gateway admitted

### 8.1.10 COMBIVIS HMI runtimes differences

Table 9  
COMBIVIS HMI runtimes differences

	<b>BASIC</b>	<b>ADVANCED</b>
RealTime DB (max, byte)	1.024	8.192
Alarms (max)	1.024	4.096
Recipes / Data Logger (ODBC)	Max 2	Unlimited
Communication drivers	Max 2	Max 4
Alarm notification (SMS, E-Mail)		•
SMS notification via SMPP protocol		SMS using Internet gateway
Web Clients		Max 4 clients connected
COMBIVIS studio HMI Mobile		•

### 8.1.11 COMBIVIS CONNECT PRO main features

Table 10  
KEB COMBIVIS CONNECT PRO main features

Control Center application to access the service with intuitive and ergonomic user interface for a comprehensive machine park management
Optimized VPN with access limited to the remote device with COMBIVIS connect Runtime
Optimized VPN with entire access to the complete remote device sub-network and serial pass-through

### 8.1.12 KEB System Manager Control Panel utilities

Table 11  
ASM Control Panel utilities

<b>Backup&amp;Restore</b>	Complete system cloning or selective backup and restore of the installed software
<b>Antialiasing</b>	Softens the characters matrix
<b>Screensaver</b>	Display brightness control or display switch off after an inactivity period
<b>Touch Buzzer</b>	Enable touch sound-feedback
<b>eMMC Usage</b>	Check the eMMC memory usage and evaluate the expected endurance
<b>Kiosk Mode</b>	Hide the O.S. explorer interface and run COMBIVIS HMI runtime in 'kiosk' mode
<b>Language Settings</b>	Easy installation of not european languages characters in HMI applications
<b>Scrollbar</b>	Allows to change the size of the scroll bars
<b>System reboot</b>	Reboot the system without switching off the power supply

### 8.1.13 7.0"W display characteristics

Table 12  
7.0" W display characteristics

<i>7" display characteristics</i>	
<b>Dimensions</b>	7.0"W (15:9)
<b>Technology</b>	TFT active matrix
<b>Active area</b>	152.4 x 91.44 mm
<b>Resolution</b>	800 x 480 pixels
<b>Display color</b>	262K / 16.2 M colors
<b>Pixel Pitch</b>	0.1905 (W) x 0.1905 (H) mm
<b>Luminance</b>	500 cd/m <sup>2</sup> (Note 1)
<b>Horizontal viewing angle (left + right)</b>	70°+70°
<b>Vertical viewing angle (up + down)</b>	60°+60°
<b>Contrast ratio</b>	600:1 (Typ.)
<b>Response time (Rise / Fall)</b>	16 ms (Typ.)
<b>Backlight</b>	LED
<b>LED life time (Note 2)</b>	50.000h @ default (Note 3) and max Tamb

### 8.1.14 8.4" display characteristics

Table 13  
8.4" display characteristics

<i>8.4" display characteristics</i>	
<b>Dimensions</b>	8.4" (4:3)
<b>Technology</b>	TFT active matrix
<b>Display area</b>	170.4 (W) x 127.8 (H) mm
<b>Resolution</b>	800 x 600 pixels
<b>Display color</b>	16.2 M colors
<b>Pixel Pitch</b>	0.213 (W) x 0.213 (H) mm
<b>Luminance</b>	400 cd/m <sup>2</sup> (Note 1)
<b>Horizontal viewing angle (left + right)</b>	80°+80°
<b>Vertical viewing angle (up + down)</b>	80°+80°
<b>Contrast ratio</b>	800:1 (Typ.)
<b>Response time (Rise + Fall)</b>	18 ms (Typ.)
<b>Backlight</b>	LED
<b>LED life (Note 2)</b>	50.000h @ default (Note 3) and max Tamb

### 8.1.15 10.1" display characteristics

Table 14  
10.1" display characteristics

<i>10.4" display characteristics</i>	
<b>Dimensions</b>	10.1" (16:10)
<b>Technology</b>	TFT active matrix
<b>Display area</b>	216.96 (W) x 135.6 (H) mm
<b>Resolution</b>	1280 x 800 pixels
<b>Display color</b>	16.7M colors
<b>Pixel Pitch</b>	0.1695 (W) x 0.1695 (H) mm
<b>Luminance</b>	400 cd/m <sup>2</sup> (Note 1)
<b>Horizontal viewing angle (left + right)</b>	88°+88°
<b>Vertical viewing angle (up + down)</b>	88°+88°
<b>Contrast ratio</b>	800:1 (Typ.)
<b>Response time (Rise + Fall)</b>	25 ms (Typ.)
<b>Backlight</b>	LED
<b>LED life (Note 2)</b>	100.000h @ default (Note 3) and max Tamb

## 8.1.16 10.1"W display characteristics

Table 15  
10.1" W display characteristics

10.4" display characteristics	
<b>Dimensions</b>	10.1" (16:10)
<b>Technology</b>	TFT active matrix
<b>Display area</b>	216.96 (W) x 135.6 (H) mm
<b>Resolution</b>	1280 x 800 pixels
<b>Display color</b>	16.7M colors
<b>Pixel Pitch</b>	0.1695 (W) x 0.1695 (H) mm
<b>Luminance</b>	400 cd/m <sup>2</sup> (Note 1)
<b>Horizontal viewing angle (left + right)</b>	88°+88°
<b>Vertical viewing angle (up + down)</b>	88°+88°
<b>Contrast ratio</b>	800:1 (Typ.)
<b>Response time (Rise + Fall)</b>	25 ms (Typ.)
<b>Backlight</b>	LED
<b>LED life (Note 2)</b>	70.000h @ default (Note 3) and max Tamb

## 8.1.17 10.4" display characteristics

Table 16  
10.4" display characteristics

10.4" display characteristics	
<b>Dimensions</b>	10.4" (4:3)
<b>Technology</b>	TFT active matrix
<b>Display area</b>	211.2 (W) x 158.4 (H) mm
<b>Resolution</b>	800 x 600 pixels
<b>Display color</b>	262K / 16.2M colors
<b>Pixel Pitch</b>	0.264 (W) x 0.264 (H) mm
<b>Luminance</b>	400 cd/m <sup>2</sup> (Note 1)
<b>Horizontal viewing angle (left + right)</b>	80°+80°
<b>Vertical viewing angle (up + down)</b>	70°+70°
<b>Contrast ratio</b>	700:1 (Typ.)
<b>Response time (Rise / Fall)</b>	16 ms (Typ.)
<b>Backlight</b>	LED
<b>LED life (Note 2)</b>	50.000h @ default (Note 3) and max Tamb

## 8.1.18 12.1" (SVGA) display characteristics

Table 17  
12.1" (SVGA) display characteristics

12.1" display characteristics	
<b>Dimensions</b>	12.1" (4:3)
<b>Technology</b>	TFT active matrix
<b>Display area</b>	246.0 (W) x 184.5 (H) mm
<b>Resolution</b>	800 x 600 pixels
<b>Display color</b>	262K / 16.7M colors
<b>Pixel Pitch</b>	0.3075 (W) x 0.3075 (H) mm
<b>Luminance</b>	500 cd/m <sup>2</sup> (Note 1)
<b>Horizontal viewing angle (left + right)</b>	80°+80°
<b>Vertical viewing angle (up + down)</b>	60°+80°
<b>Contrast ratio</b>	800:1 (Typ.)
<b>Response time (Rise + Fall)</b>	16 ms (Typ.)
<b>Backlight</b>	LED
<b>LED life (Note 2)</b>	50.000h @ default (Note 3) and max Tamb

### 8.1.19 12.1"W (WXGA) display characteristics

Table 18  
12.1"W (WXGA) display characteristics

<b>12.1" display characteristics</b>	
<b>Dimensions</b>	12.1"W (16:10)
<b>Technology</b>	TFT active matrix
<b>Active area</b>	261,12 x 163,2 mm
<b>Resolution</b>	1280 x 800 pixels
<b>Display color</b>	262K/16.2M colors
<b>Pixel Pitch</b>	0.204 (W) x 0.204 (H) mm
<b>Luminance</b>	400 cd/m <sup>2</sup> (Note 1)
<b>Horizontal viewing angle (left + right)</b>	88°+88°
<b>Vertical viewing angle (up + down)</b>	88°+88°
<b>Contrast ratio</b>	1000:1 (Typ.)
<b>Response time (Rise / Fall)</b>	25 ms
<b>Backlight</b>	LED
<b>LED life (Note 2)</b>	50.000h @ default (Note 3) and max Tamb

### 8.1.20 15.0" (XGA) display characteristics

Table 19  
15.0" (XGA) display characteristics

<b>15.0" display characteristics</b>	
<b>Dimensions</b>	15.0" (4:3)
<b>Technology</b>	TFT active matrix
<b>Display area</b>	304.1 (W) x 228.1 (H) mm
<b>Resolution</b>	1024 x 768 pixels
<b>Display color</b>	16.2M colors
<b>Pixel Pitch</b>	0.297 (W) x 0.297 (H) mm
<b>Luminance</b>	500 cd/m <sup>2</sup> (Note 1) (Typ.)
<b>Horizontal viewing angle (left + right)</b>	85°+85°
<b>Vertical viewing angle (up + down)</b>	85°+85°
<b>Contrast ratio</b>	1500:1 (Typ.)
<b>Response time (Rise / Fall)</b>	35 ms (Typ.)
<b>Backlight</b>	LED
<b>LED life (Note 2)</b>	50.000h @ default (Note 3) and max Tamb

### 8.1.21 15.6"W (WXGA) display characteristics

Table 20  
15.6" W display characteristics

<b>15.6" display characteristics</b>	
<b>Dimensions</b>	15.6" (16:9)
<b>Technology</b>	TFT active matrix
<b>Active area</b>	344.2 (W) x 193.5 (H) mm
<b>Resolution</b>	1366 x 768 pixels
<b>Display color</b>	16.7M colors
<b>Pixel Pitch</b>	0.252 (W) x 0.252 (H) mm
<b>Luminance</b>	400 cd/m <sup>2</sup> (Note 1)
<b>Horizontal viewing angle (left + right)</b>	85°+85°
<b>Vertical viewing angle (up + down)</b>	80°+80°
<b>Contrast ratio</b>	500:1 (Typ.)
<b>Response time (Rise / Fall)</b>	8 ms (Typ.)
<b>Backlight</b>	LED
<b>LED life (Note 2)</b>	50.000h @ default (Note 3) and max Tamb

**Note 1:**

At maximum (100%) brightness setting.

**Note 2:**

After the LED life time, the backlight luminance may be reduced up to the 50% of the initial value.

**Note 3:**

The default backlight value is set at 80% of the maximum brightness by the operating system.

Note, that the user can modify the backlight brightness, using the related operating system mask.

At 25°C, the above-indicated LED life is also guaranteed at 100% backlight brightness; instead, at higher ambient temperature and 100% backlight brightness, LED life time will decrease.

## 8.2 Certificates and approvals

Table 21  
Certificates & approvals

### EU DECLARATION OF CONFORMITY



Document No. / month.year: ce\_ca\_remv-C6J-a\_en.docx / 01.2019

Manufacturer:	KEB Automation KG Südstraße 38 32683 BARNTRUP Germany	
Product type	Control type Control size	yy <b>C6J</b> xx – xxxx yy = 00 for Stand Alone PC or yy = 01 to FF for TouchPanel PC x = any letter or number
	Voltage category	24 Vdc

The above given product is in accordance with the following directives of the European Union

Number: **EMC : 2014 / 30 / EU**  
Text: Directive on the approximation of the laws of the Member States relating to electromagnetic compatibility.

Number: **Hazardous Substances: 2011 / 65 / EEC ( incl. 2015 / 863 / EU )**  
Text: Directive on the approximation of the laws of the Member States relating on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Responsible: KEB Automation KG  
Südstraße 38  
32683 BARNTRUP

Place, date Barntrup, 28. December 2018

Issued by:

I. A. W. Hovestadt / Conformance Officer

W. Wiele / Technical Manager

This declaration certifies the conformity with the named directives, but does not contain any assurance of quality.

The safety instructions, described in the instruction manual are to be followed.

## EU DECLARATION OF CONFORMITY



### Annex 1

Document-No. / month/year: ce\_ca\_remv-C6J-a\_en.docx / 01.2019

Product type	Control type	yyC6Jxx – xxxx
	Control size	yy = 00 for Stand Alone PC or yy = 01 to FF for TouchPanel PC
		x = any letter or number
	Voltage category	24 Vdc

The conformity of the above given product to the European Directive 2014/30/EU ( for electromagnetic compatibility ) is given by complete approval / testing to the following European harmonized standards. For not exceeding the required limits or minimum levels of immunity it is necessary to use observe the given wiring specifications from available instruction manual.





EN - Norm	Text
EN 61326-1 Version 2013	Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 1: General requirements
EN 61000 – 3 – 2 Version 2014	Electromagnetic compatibility – Part 3-2 Limits – Limits for harmonic current emissions ( equipment input current ≤ 16A per phase )
EN 61000 – 3 – 3 Version 2013	Electromagnetic compatibility – Part 3-3 Limits – Limits of voltage changes, voltage fluctuations and flicker in public low voltage systems, for equipment with rated current ≤ 16A per phase
EN 61000 – 6 – 2 Version 2005	Electromagnetic compatibility (EMC) – Part 6-2: Generic Standard – Immunity standard for industrial environment
EN 55011 Version 2009 + A1 - 2010	Industrial, scientific and medical equipment, radio-frequency disturbance characteristics: Limits and methods of measurement

The conformity of the above given product to the European Directive 2011/65/EU with changes of 2015/863/EU ( for restrictions of the use for certain hazardous substances in electrical and electronic equipment ) is given by qualification of components and manufacturing process within the ISO 9001 QM system. The necessary information and declarations are documented and memorized.

The above given product was developed, manufactured and tested within an internal quality management system. This ISO 9001 QM system was approved by:

Notified body:	TÜV - CERT
Address:	Zertifizierungsstelle des RWTÜV Steubenstrasse 53 D - 45138 Essen
No. of approval	041 004 500
Dated:	20.10.1994
Valid until:	December 2021



<b>Warranty &amp; approvals</b>		
	Emission	Conforms to: EN 61326-1 Electrical equipment for measurement, control and laboratory use. EMC requirements. General requirements EMC Directive 2014/30/EU
	Immunity	Conforms to: EN 61326-1 Electrical equipment for measurement, control and laboratory use. EMC requirements. General requirements EMC Directive 2014/30/EU
	Safety	Conforms to: EN 61010-1 Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements EN 61010-2-201 Safety requirements for electrical equipment for measurement, control and laboratory use - Part 2-201: Particular requirements for control equipment
	Conforms to: EN 50581:2012 - Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances RoHS Directive 2011/65/EU	
	Conforms to: EN 60079-0 Explosive atmospheres – Part 0: Equipment - General requirements EN 60079-11 Explosive atmospheres – Part 11: Equipment protection by intrinsic safety "i" EN 60079-15 Explosive atmospheres – Part 15: Equipment protection by type of protection "n" EN 60079-31 Explosive atmospheres – Part 31: Equipment dust ignition protection by enclosure "t" Atex Directive 2014/34/EU ex 94/9/EC For further information please refer to ATEX user guide. NB: Not applicable in systems equipped with Wi-Fi & Modem modules	
	ANSI/UL 61010-1, "Electrical Equipment for Measurement, Control, and Laboratory Use - Part 1: General Requirements," and ANSI/UL 61010-2-201, "Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use - Part 2-201: Particular Requirements for Control Equipment." CAN/CSA-C22.2 No. 61010-1 (2012), "Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use - Part 1: General Requirements," and CAN/CSA-C22.2 No. 61010-2-201 (2014), "Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use - Part 2-201: Particular Requirements for Control Equipment."	

8.3 Dimension drawings

8.3.1 7.0” W (resistive)

Figure 92  
7.0” W (resistive)


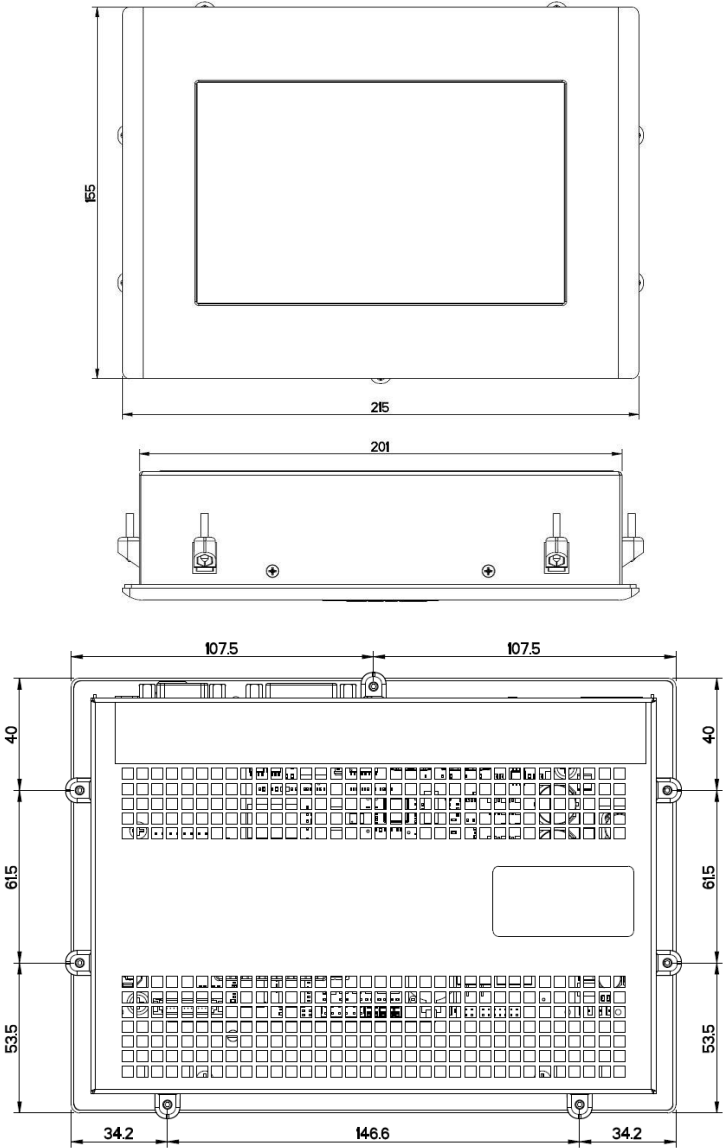


Figure 93  
7.0" W (resistive)

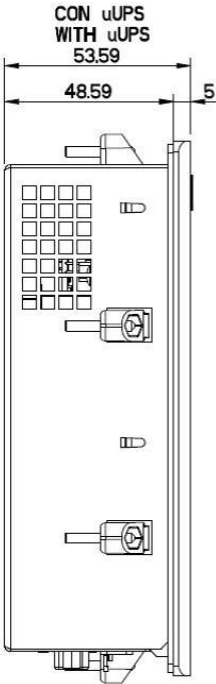

8.3.2 7.0"W capacitive CUTOUT B

Figure 94  
7.0" W (capacitive) CUT OUT B


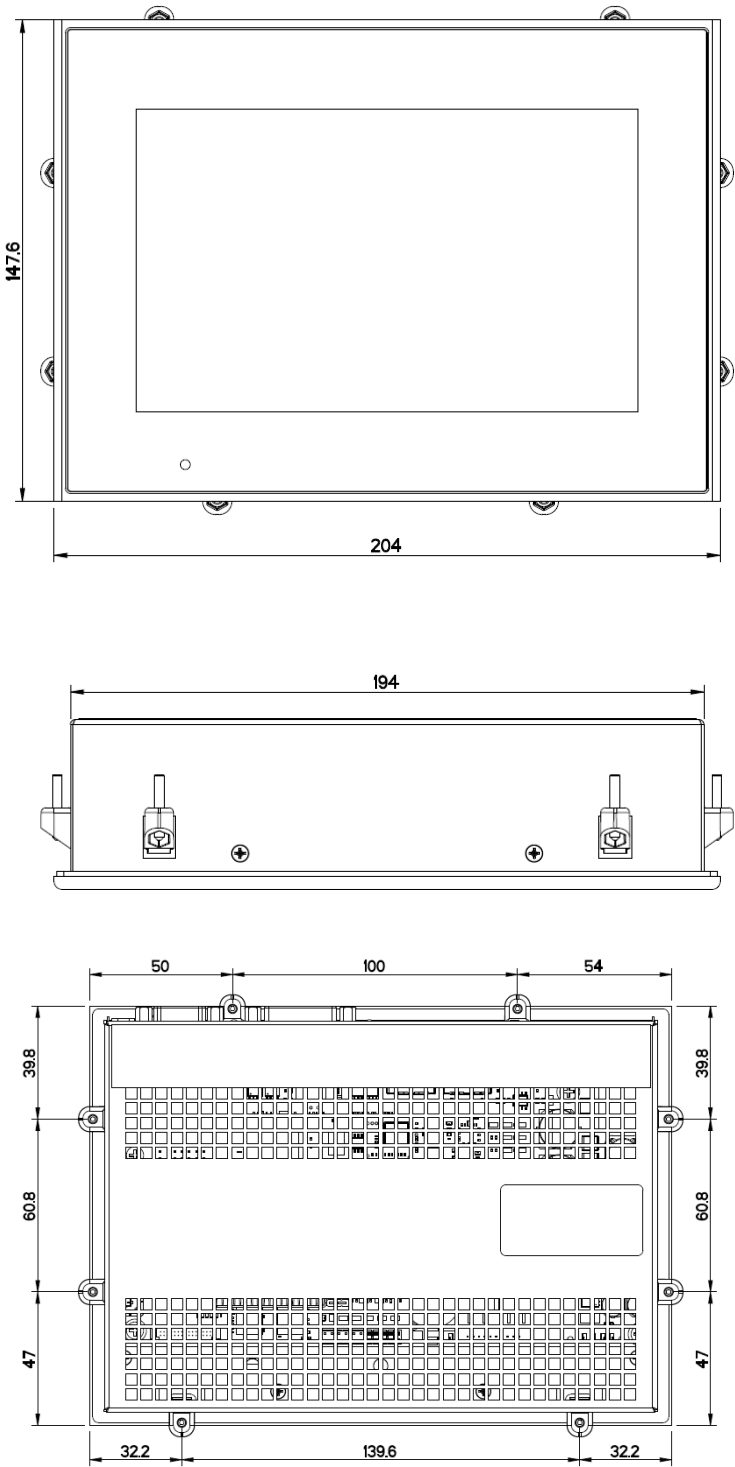


Figure 95  
7.0" W capacitive CUT OUT B

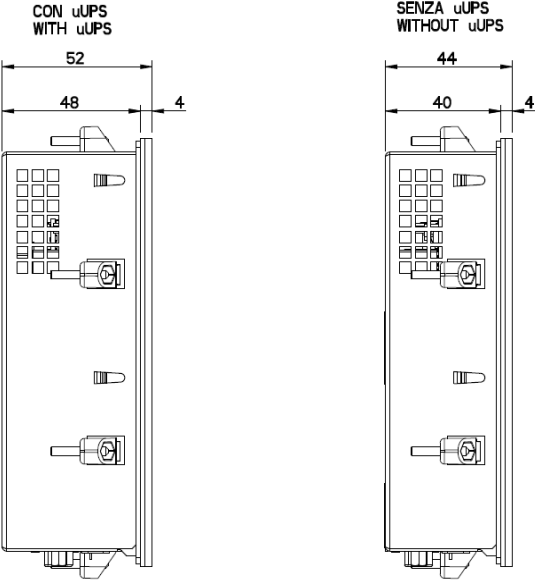

8.3.3 8.4” (resistive)


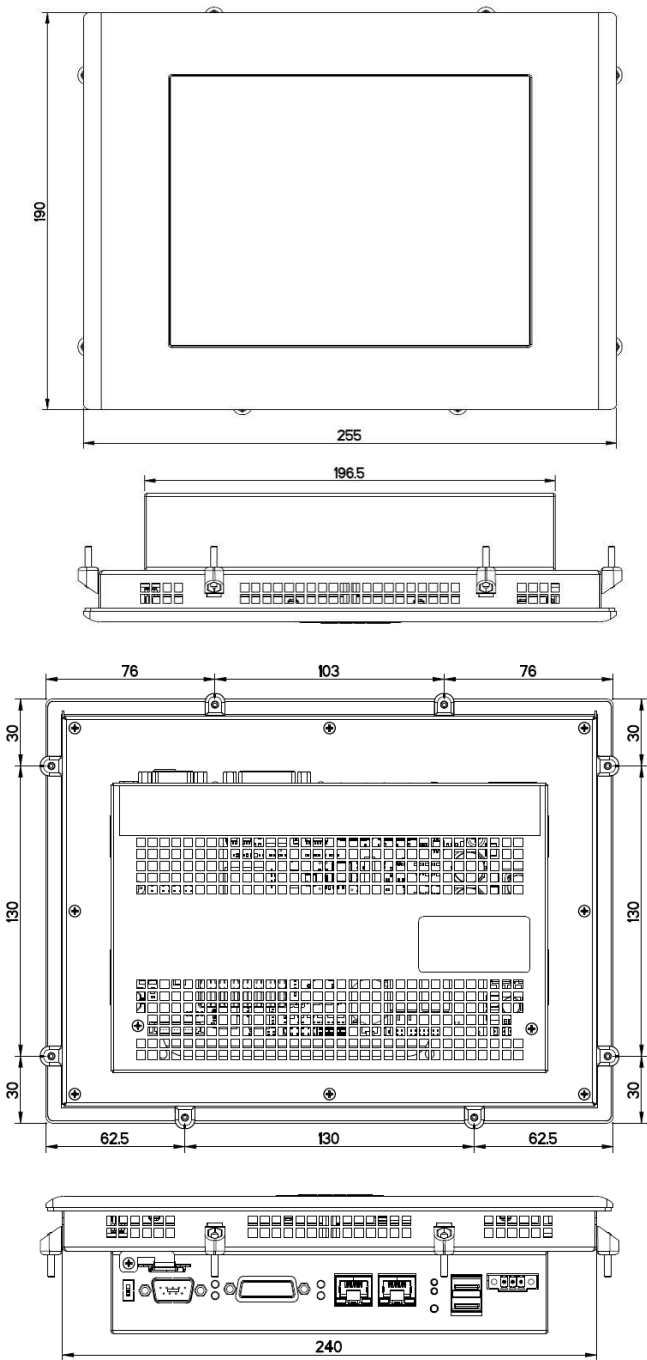


Figure 96  
8.4” (resistive)

Figure 97  
8.4" (resistive)

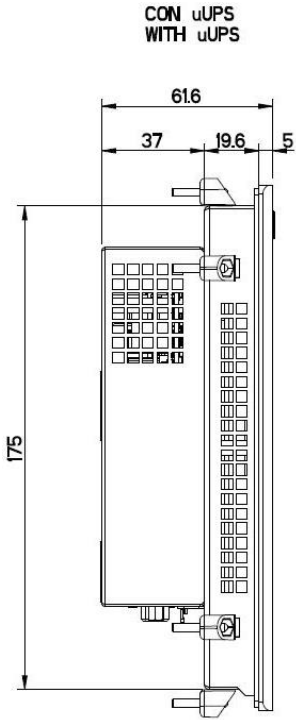

8.3.4 10.1” W (resistive)

Figure 98  
10.1” W (resistive)


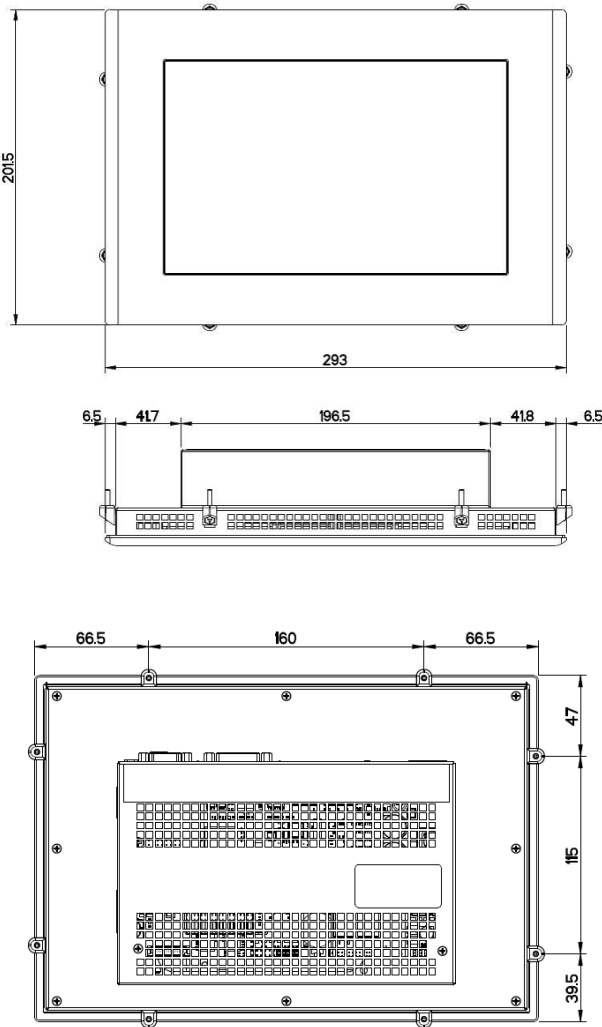




Figure 99  
10.1" W (resistive)

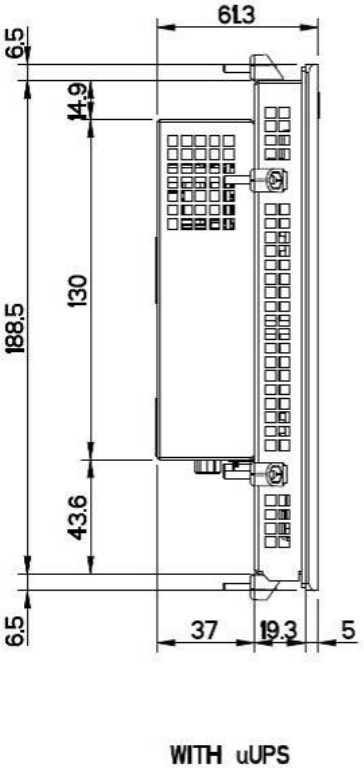

8.3.5 C6 S14 - 10.1”W (capacitive)



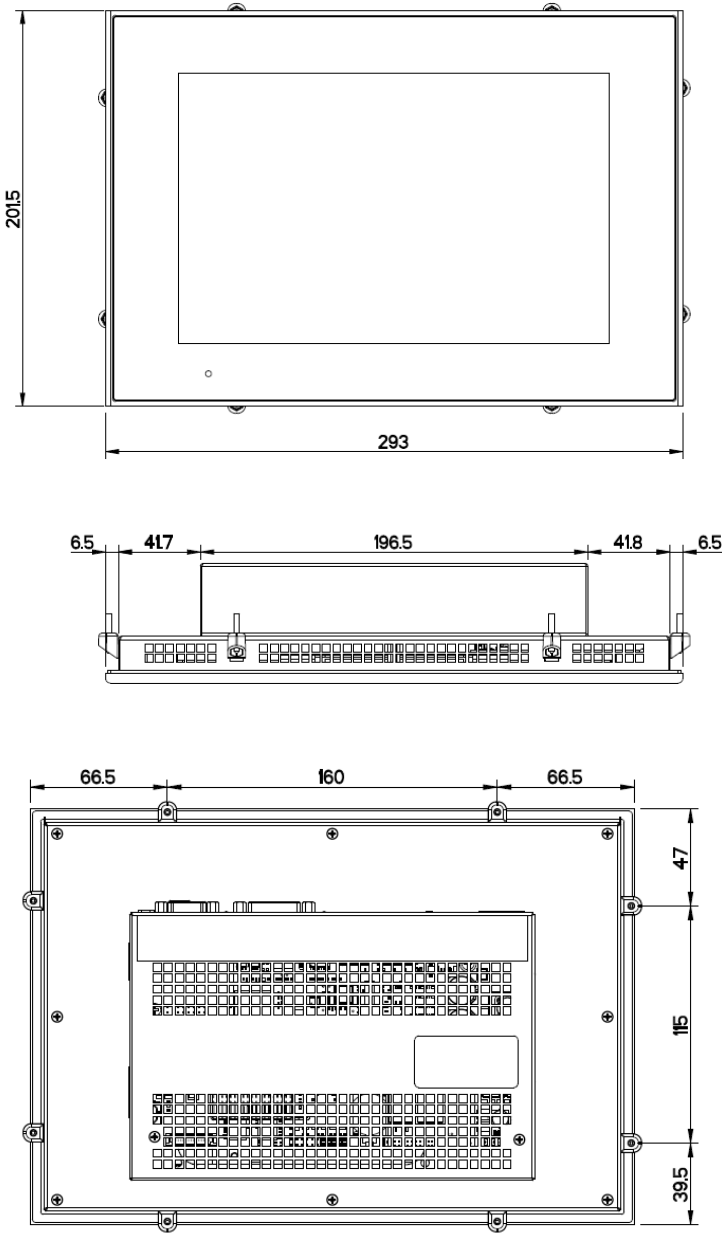


Figure 100  
10.1” W (capacitive)

Figure 101  
10.1" W (capacitive)

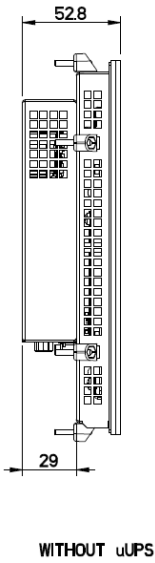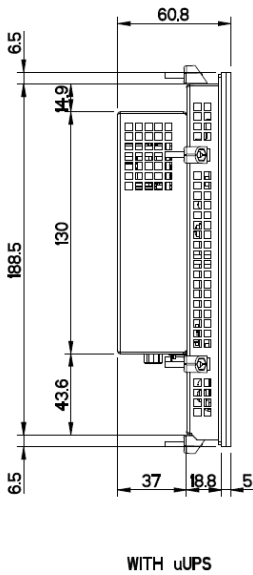

8.3.6 10.4” (resistive)

Figure 102  
10.4”(resistive)


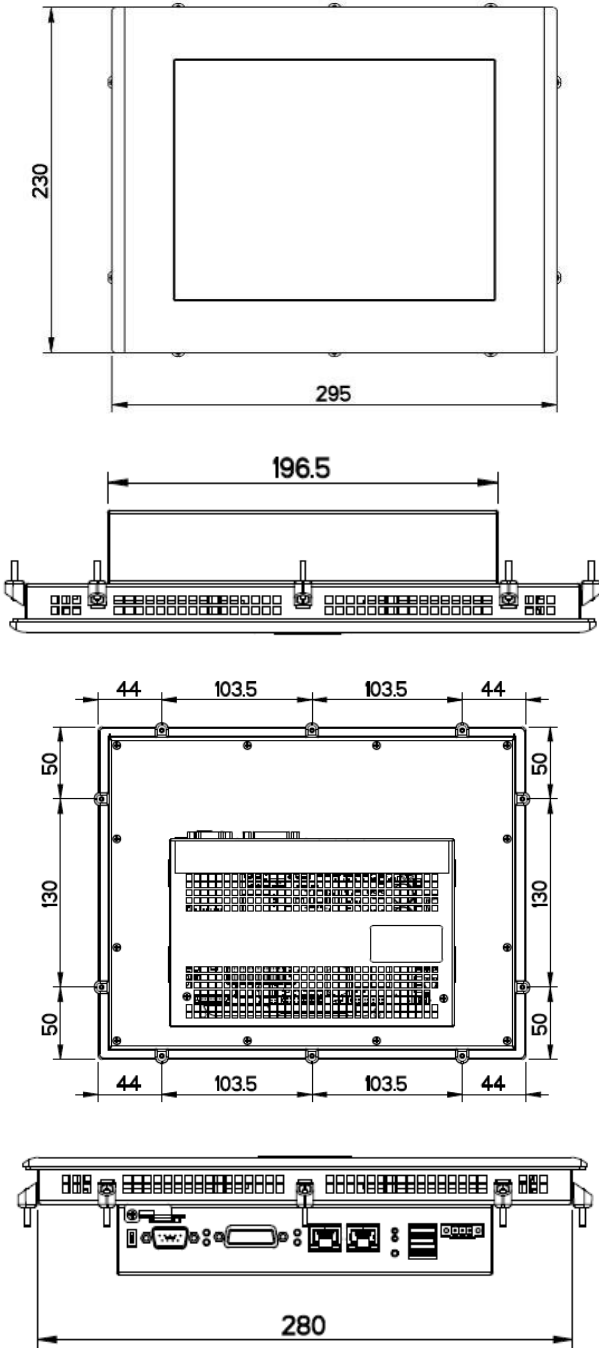


Figure 103  
10.4" (resistive)

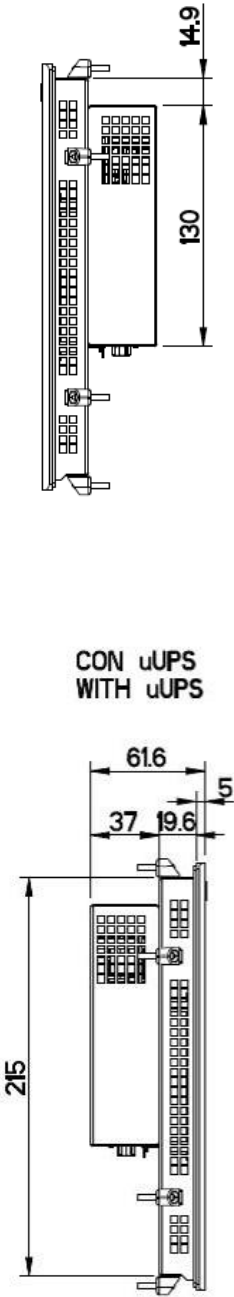

8.3.7 12.1” (resistive)


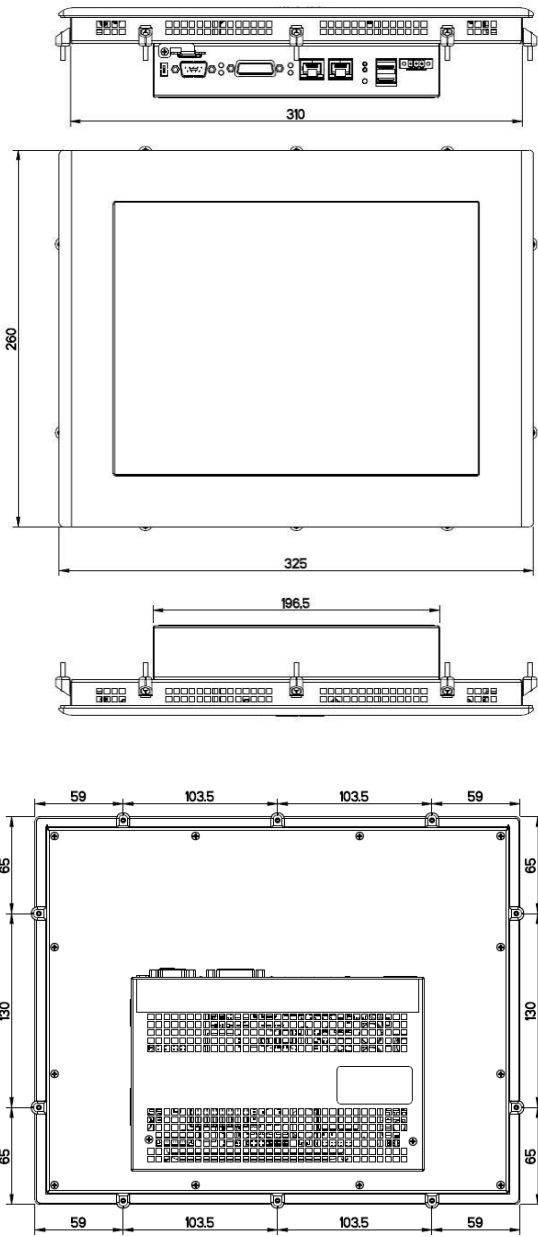


Figure 104  
12.1” (resistive)

Figure 105  
12.1" (resistive)

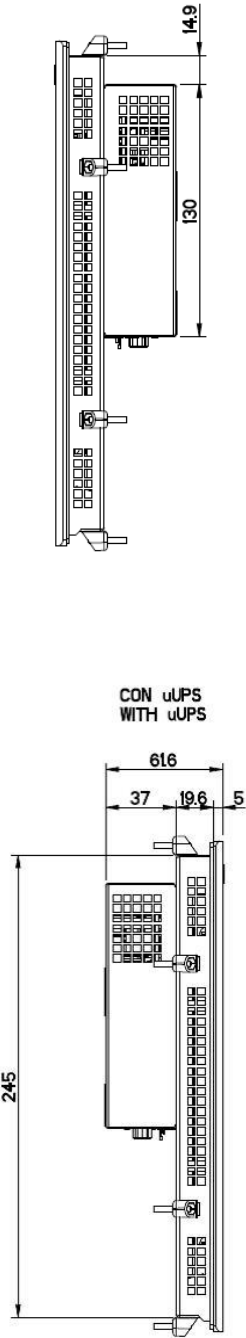

8.3.8 12.1” W (resistive)


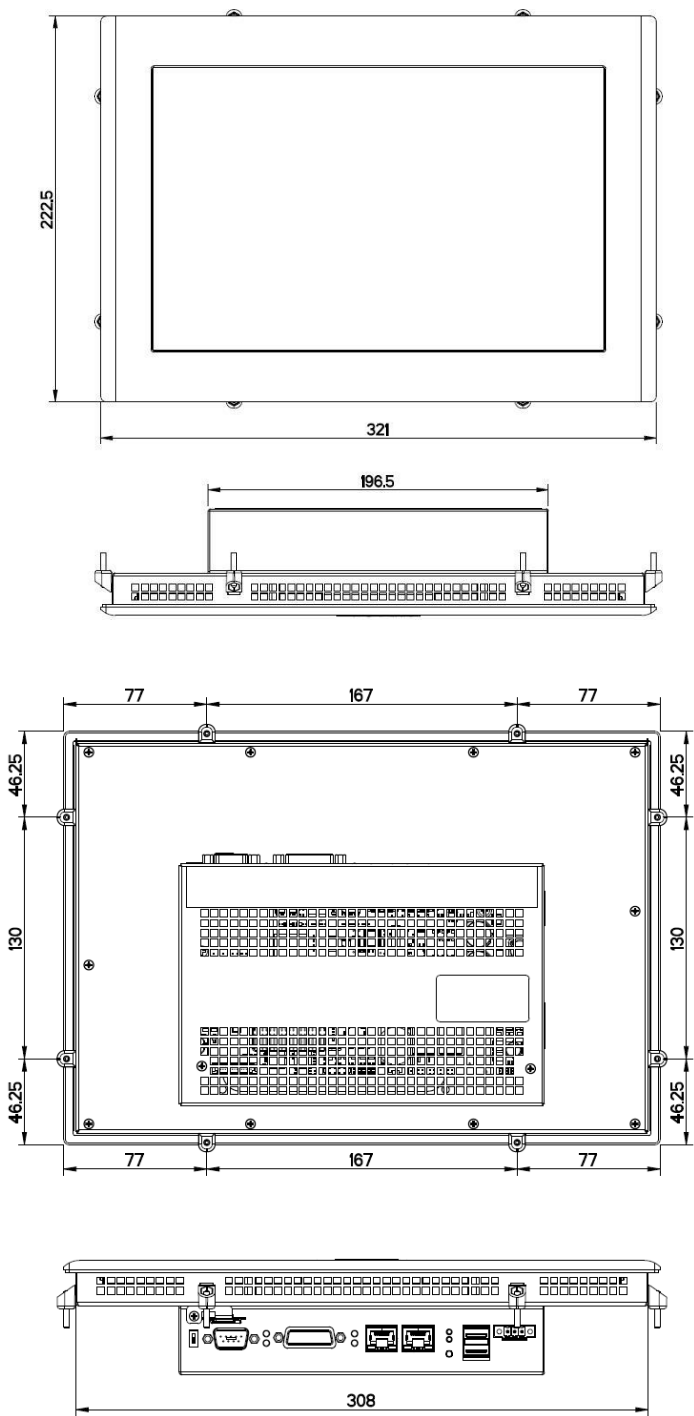


Figure 106  
12.1” W (resistive)



Figure 107  
12.1" W (resistive)

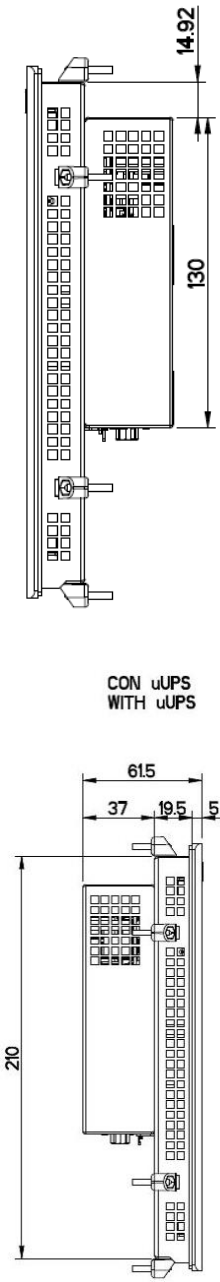

8.3.9 12.1”W (capacitive)

Figure 108  
12.1” W (capacitive)


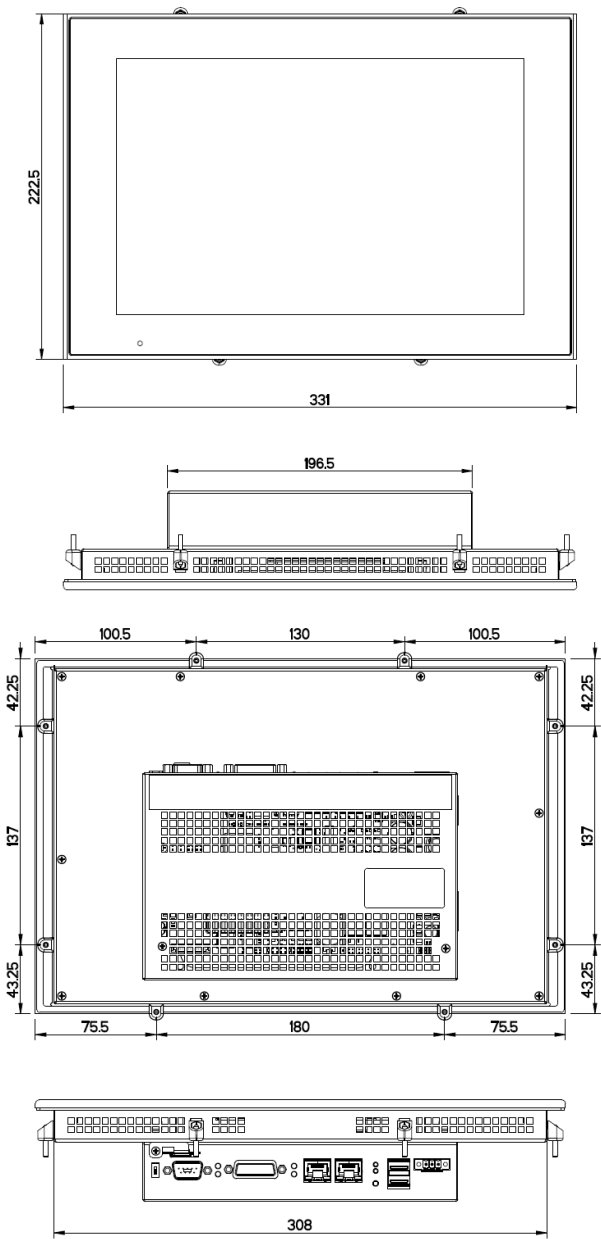


Figure 109  
12.1" W (capacitive)

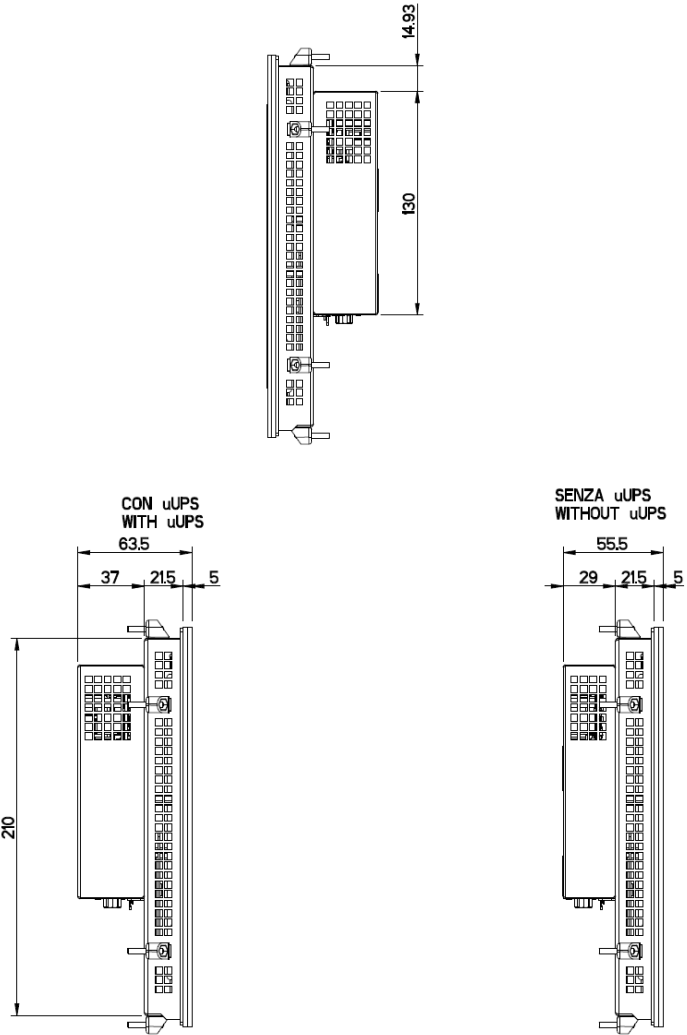

8.3.10 15.0” (resistvie)


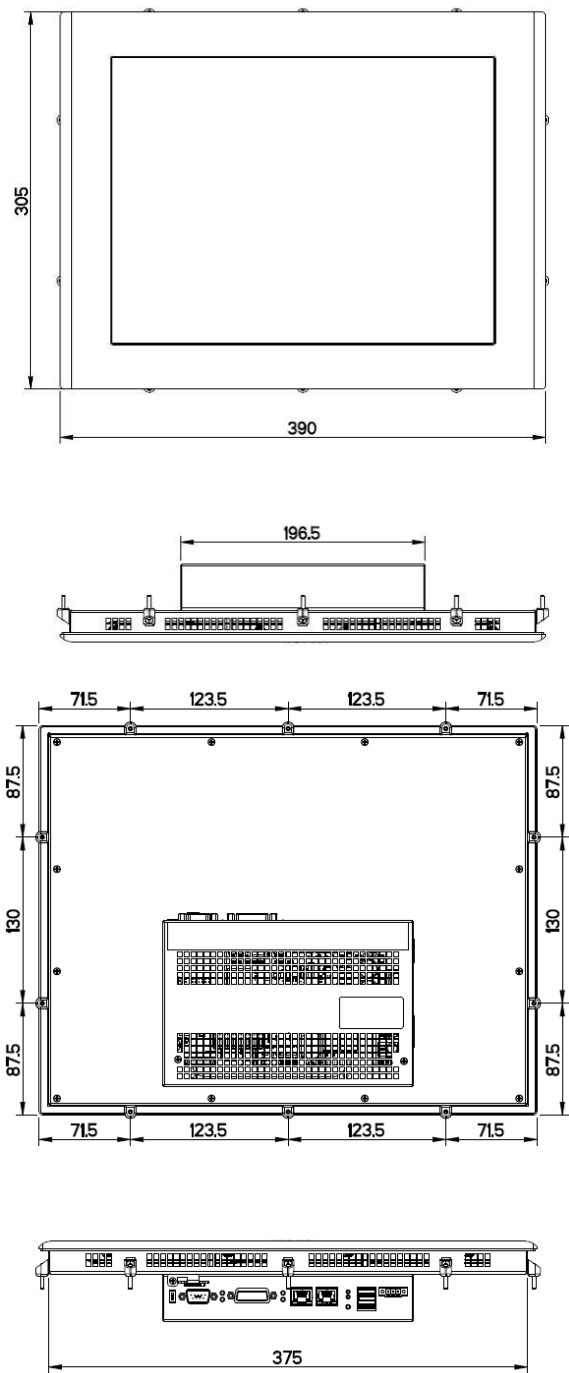


Figure 110  
15.0” (resistvie)

Figure 111  
15.0" (resistive)

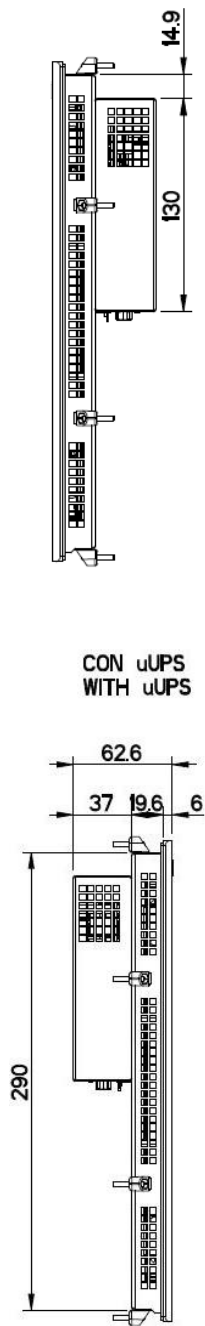

8.3.11 15.6” W (resistive)

Figure 112  
15.6” W (resistive)


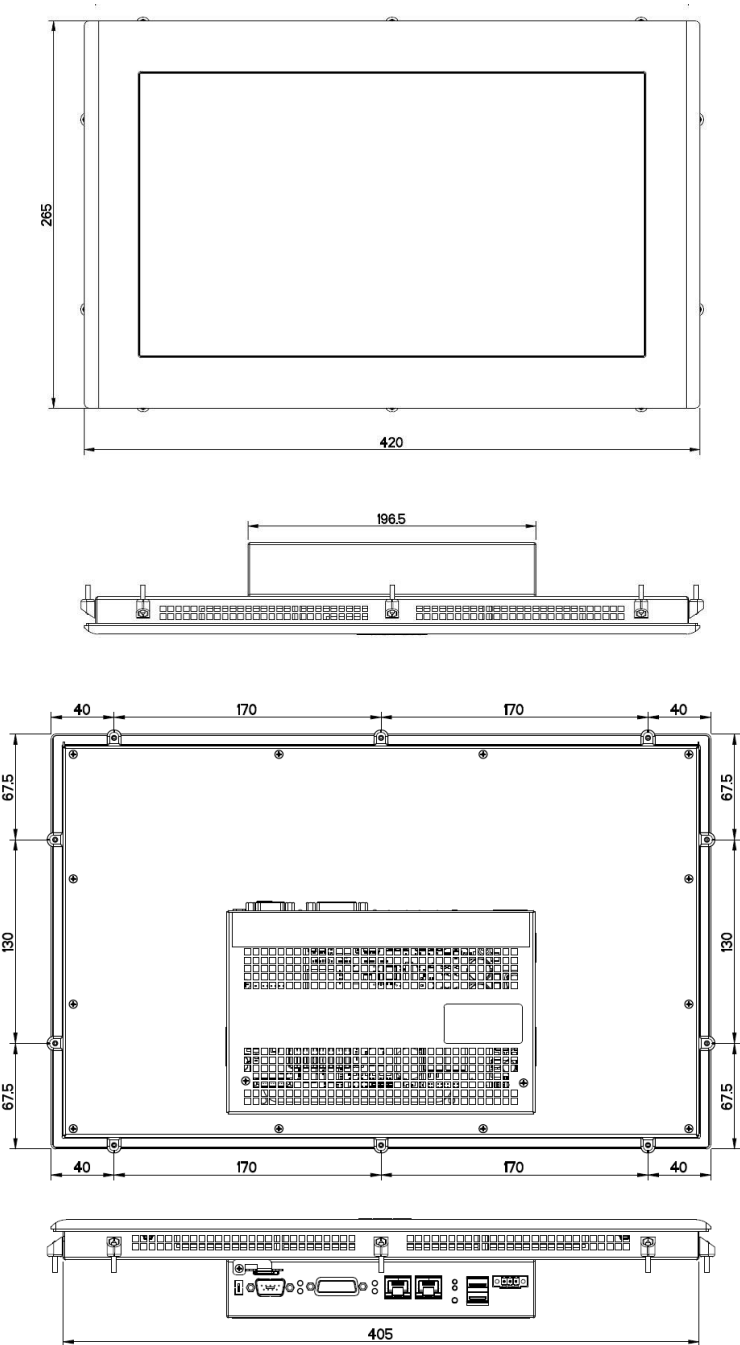


Figure 113  
15.6" W (resistive)

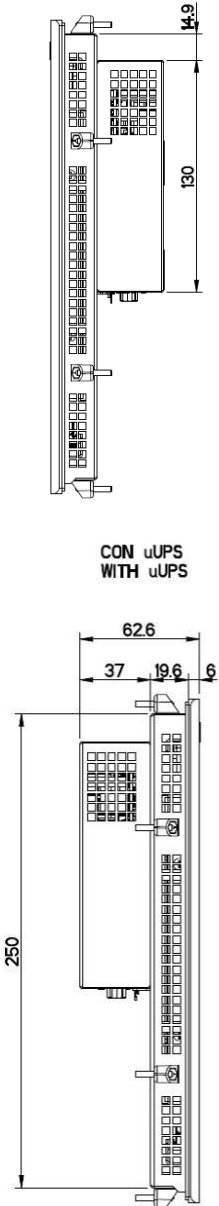

8.3.12 15.6” W (capacitive)

Figure 114  
15.6” W (capacitive)


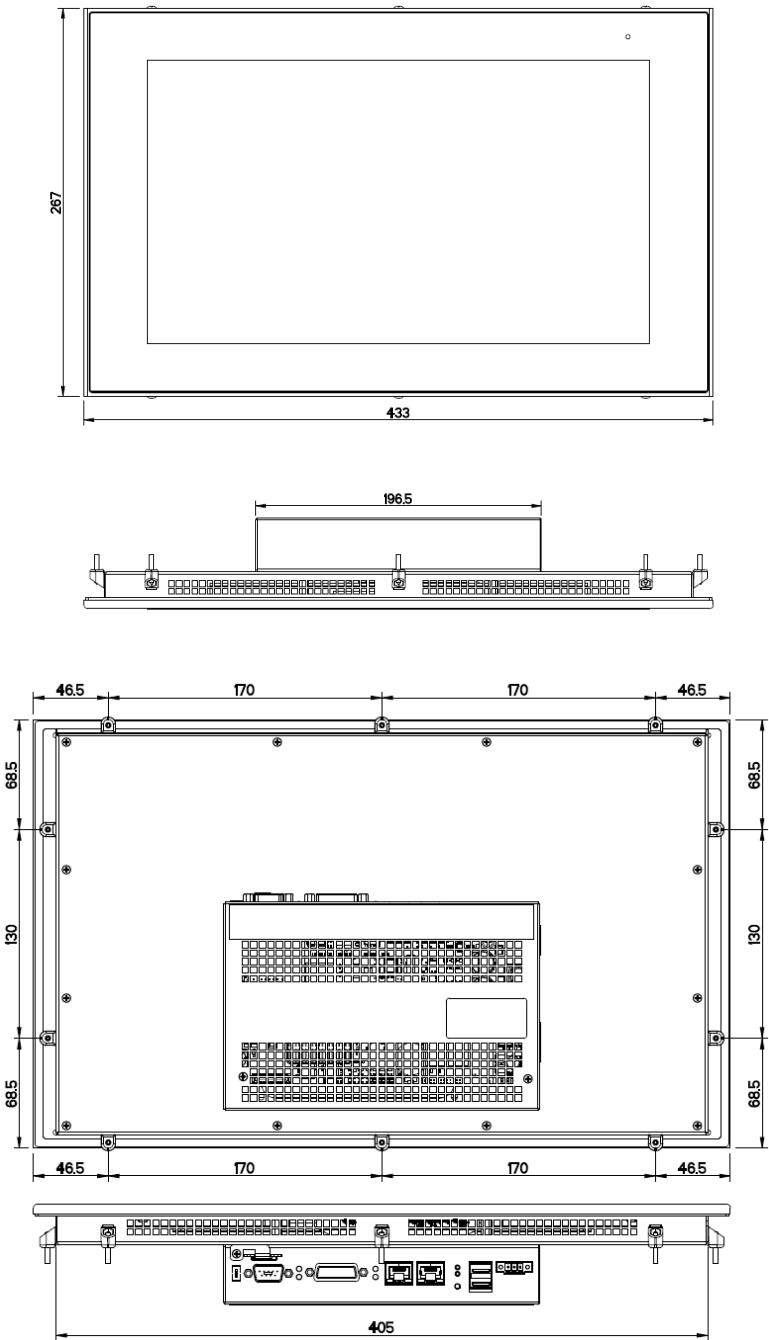




Figure 115  
15.6" W (capacitive)

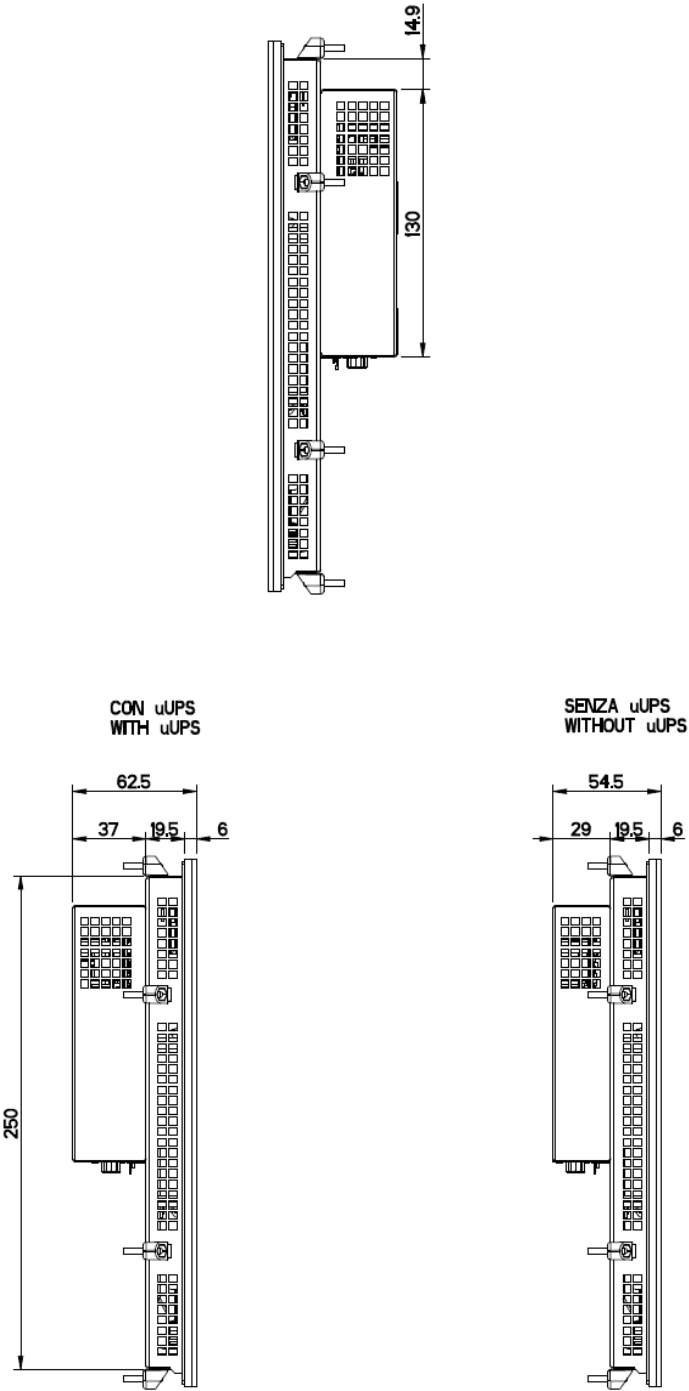

## 8.4 Ports PINOUT

### 8.4.1 COM1




Table 22  
COM1 – DB15M

PIN	Signal	I/O
1	+5 VDC	OUT
2	Transmit Data (RS-232)	OUT
3	Receive Data (RS-232)	IN
4	Request To Send	OUT
5	Clear To Send	IN
6	Data Set Ready	IN
7	Ground	—
8	Data Terminal Ready	OUT
9	Carrier Detect	IN
10	Transmit Data +/Receive Data + (RS-485/RS-422)	I/O
11	Transmit Data -/Receive Data - (RS-485/RS-422)	I/O
12	Ring Indication (RS-232)	IN
13	Receive Data + (RS-422)	IN
14	Receive Data - (RS-422)	IN
15	N.C.	N.C.



Any polarization or termination resistor is connected to RS422/485 channel so, if required, it has to be provided by the user into the plant connector.

### 8.4.2 LAN1 – LAN2




Table 23  
LAN1 – LAN2

PIN	Signal
1	TX+
2	TX-
3	RX+
4	Shield
5	Shield
6	RX-
7	Shield
8	Shield

### 8.4.3 CAN




Table 24  
CAN

PIN	Signal	I/O
1	N.C.	N.C.
2	CANL	IN/OUT
3	GND	—
4	N.C.	N.C.
5	Shield	—
6	GND	—
7	CANH	IN/OUT
8	N.C.	N.C.
9	+5 VDC	OUT

### 8.4.4 RS485




Table 25  
RS485

<i>PIN</i>	<i>Signal</i>	<i>I/O</i>
1	N.C.	N.C.
2	N.C.	N.C.
3	TX+/RX+	I/O
4	N.C.	N.C.
5	GND	—
6	+5 VDC	OUT
7	N.C.	N.C.
8	TX-/RX-	I/O
9	N.C.	N.C.

### 8.4.5 USB1 / USB2



Table 26  
USB1 – USB2

<i>PIN</i>	<i>Signal</i>
1	+5 Vcc
2	USB Data -
3	USB Data +
4	GND

## 8.5 Technical support & repairs

KEB offers wide-ranging, complete after-sales technical support. You can phone our staff in the service department and they will give you skillfully advice on how to resolve your problems.

Email: [combicontrol@KEB.de](mailto:combicontrol@KEB.de)

## 8.6 Recycling and disposal

The system can be recycled due to the use of materials with low environmental impact. Contact a certified disposal service company for environmentally sound recycling and disposal of your old devices.

## Index of figures

Figure 1 Full aluminium resistive front panel detail.....	11
Figure 2 Capacitive front panel detail.....	11
Figure 3 Full aluminium front panel detail (in the figure is shown as an example a 15.0" display).....	12
Figure 4 Front panel "Step" detail .....	12
Figure 5 Construction detail.....	13
Figure 6 Capacitive front panel (in the figure is shown as an example a 15.6" display).....	14
Figure 7 Capacitive front panel "No step" detail .....	14
Figure 8 Construction detail.....	15
Figure 9 C6 S14 rear view.....	16
Figure 10 C6 S14 side view.....	16
Figure 11 C6 S14 side view.....	16
Figure 12 C6 S14 connectors.....	17
Figure 13 System connectors label detail .....	18
Figure 14 System label detail .....	18
Figure 15 $\mu$ UPS detail.....	19
Figure 16 Configuration and project creation.....	20
Figure 17 Process management.....	20
Figure 18 Mounting position.....	23
Figure 19 Installation distances .....	24
Figure 20 Cut-out .....	25
Figure 21 Installation .....	27
Figure 22 Installation .....	27
Figure 23 Installation .....	28
Figure 24 Installation .....	28
Figure 25 Installation .....	28
Figure 26 Installation .....	29
Figure 27 Power supply connection detail .....	30
Figure 28 Power supply connection detail .....	31
Figure 29 Power supply connection detail .....	31
Figure 30 Connecting the configuration PC .....	32
Figure 31 Connecting the configuration PC .....	33
Figure 32 Connecting the configuration PC .....	33
Figure 33 Connecting the configuration PC .....	34
Figure 34 Connecting the configuration PC .....	34
Figure 38 Commissioning the device.....	36
Figure 39 Slot for memory card .....	37
Figure 40 Slot for memory card .....	37
Figure 41 Slot for memory card .....	37
Figure 42 Slot for memory card .....	38
Figure 43 Slot for memory card .....	38
Figure 44 Slot for memory card .....	38
Figure 35 Connecting the configuration PC .....	40
Figure 36 Connecting the configuration PC .....	40
Figure 37 Connecting the configuration PC .....	41
Figure 45 Configuring the serial port .....	43
Figure 46 Configuring the serial port .....	43
Figure 47 Configuring the serial port .....	43
Figure 48 Configuring the serial port .....	44
Figure 49 Stopping the running project .....	45
Figure 50 Stopping the running project .....	45
Figure 51 Starting the project.....	46
Figure 52 Starting the project.....	46
Figure 53 Debugging the project .....	47
Figure 54 Debug the project .....	48
Figure 55 Debug the project .....	48
Figure 56 Debug the project .....	48
Figure 57 Debug the project .....	49

Figure 58 Debug the project .....	50
Figure 59 Task configuration .....	51
Figure 60 Setting active path .....	52
Figure 61 Start CDlauch-Mgr.exe.....	54
Figure 62 CDS Launch Manager.....	55
Figure 63 Configuring COMBIVIS studio 6 project .....	55
Figure 64 Device name in COMBIVIS studio 6.....	55
Figure 65 CONTROL implementation .....	56
Figure 66 COMBIVIS connect implementation.....	57
Figure 67 COMBIVIS connect implementation.....	57
Figure 68 COMBIVIS connect implementation.....	57
Figure 69 COMBIVIS connect implementation.....	57
Figure 70 System Manager Control Panel Applets .....	60
Figure 71 Backup Restore .....	61
Figure 72 Font Antialiasing .....	65
Figure 73 EMMC Usage .....	65
Figure 74 Kiosk Mode.....	66
Figure 75 Launch Explorer from COMBIVIS studio HMI .....	67
Figure 76 Language Settings.....	67
Figure 77 Configuring Scrollbar .....	68
Figure 78 System Reboot .....	68
Figure 79 Calibration of the touch screen .....	70
Figure 80 Calibration of the touch screen .....	70
Figure 81 Calibration of the touch screen .....	71
Figure 82 Backup battery replacement.....	72
Figure 83 Backup battery replacement.....	72
Figure 84 Backup battery replacement.....	73
Figure 85 Backup battery replacement.....	73
Figure 86 Backup battery replacement.....	74
Figure 87 Backup battery detail.....	74
Figure 88 Backup battery replacement.....	75
Figure 89 Backup battery replacement.....	75
Figure 90 Backup battery replacement.....	76
Figure 91 Backup battery replacement.....	76
Figure 92 7.0" W (resistive).....	92
Figure 93 7.0" W (resistive).....	93
Figure 94 7.0" W (capacitive) CUT OUT B .....	94
Figure 95 7.0" W capacitive CUT OUT B .....	95
Figure 96 8.4" (resistive) .....	96
Figure 97 8.4" (resistive) .....	97
Figure 98 10.1" W (resistive).....	98
Figure 99 10.1" W (resistive).....	99
Figure 100 10.1" W (capacitive) .....	100
Figure 101 10.1" W (capacitive) .....	101
Figure 102 10.4"(resistive).....	102
Figure 103 10.4" (resistive) .....	103
Figure 104 12.1" (resistive) .....	104
Figure 105 12.1" (resistive) .....	105
Figure 106 12.1" W (resistive).....	106
Figure 107 12.1" W (resistive).....	107
Figure 108 12.1" W (capacitive) .....	108
Figure 109 12.1" W (capacitive) .....	109
Figure 110 15.0" (resistive) .....	110
Figure 111 15.0" (resistive) .....	111
Figure 112 15.6" W (resistive).....	112
Figure 113 15.6" W (resistive).....	113
Figure 114 15.6" W (capacitive) .....	114
Figure 115 15.6" W (capacitive) .....	115

## Index of tables

Table 1 Full aluminium features .....	12
Table 2 Capacitive features.....	14
Table 3 LCD aspect ratio .....	15
Table 4 Position of the mounting clamps.....	26
Table 5 Connecting the configuration PC.....	32
Table 6 Procedure .....	41
Table 7 System hardware characteristics .....	78
Table 8 CONTROL Runtime WinCE/ARM for C6 S14 main features .....	84
Table 9 COMBIVIS HMI runtimes differences.....	84
Table 10 KEB COMBIVIS CONNECT PRO main features .....	84
Table 11 ASM Control Panel utilities.....	84
Table 12 7.0" W display characteristics .....	85
Table 13 8.4" display characteristics .....	85
Table 14 10.1" display characteristics .....	85
Table 15 10.1" W display characteristics.....	86
Table 16 10.4" display characteristics .....	86
Table 17 12.1" (SVGA) display characteristics .....	86
Table 18 12.1"W (WXGA) display characteristics .....	87
Table 19 15.0" (XGA) display characteristics .....	87
Table 20 15.6" W display characteristics.....	88
Table 21 Certificates & approvals .....	89
Table 22 COM1 – DB15M.....	116
Table 23 LAN1 – LAN2.....	116
Table 24 CAN .....	116
Table 25 RS485 .....	117
Table 26 USB1 – USB2.....	117

#### Austria | KEB Automation GmbH

Ritzstraße 8 4614 Marchtrenk Austria  
Tel: +43 7243 53586-0 Fax: +43 7243 53586-21  
E-Mail: [info@keb.at](mailto:info@keb.at) Internet: [www.keb.at](http://www.keb.at)

#### Belgium | KEB Automation KG

Herenveld 2 9500 Geraardsbergen Belgium  
Tel: +32 544 37860 Fax: +32 544 37898  
E-Mail: [vb.belgien@keb.de](mailto:vb.belgien@keb.de) Internet: [www.keb.de](http://www.keb.de)

#### Brazil | KEB South America - Regional Manager

Rua Dr. Omar Pacheco Souza Ribeiro, 70  
CEP 13569-430 Portal do Sol, São Carlos Brazil  
Tel: +55 16 31161294 E-Mail: [roberto.arias@keb.de](mailto:roberto.arias@keb.de)

#### France | Société Française KEB SASU

Z.I. de la Croix St. Nicolas 14, rue Gustave Eiffel  
94510 La Queue en Brie France  
Tel: +33 149620101 Fax: +33 145767495  
E-Mail: [info@keb.fr](mailto:info@keb.fr) Internet: [www.keb.fr](http://www.keb.fr)

#### Germany | Headquarters

KEB Automation KG  
Südstraße 38 32683 Barntrup Germany  
Telefon +49 5263 401-0 Telefax +49 5263 401-116  
Internet: [www.keb.de](http://www.keb.de) E-Mail: [info@keb.de](mailto:info@keb.de)

#### Germany | Geared Motors

KEB Antriebstechnik GmbH  
Wildbacher Straße 5 08289 Schneeberg Germany  
Telefon +49 3772 67-0 Telefax +49 3772 67-281  
Internet: [www.keb-drive.de](http://www.keb-drive.de) E-Mail: [info@keb-drive.de](mailto:info@keb-drive.de)

#### Italy | KEB Italia S.r.l. Unipersonale

Via Newton, 2 20019 Settimo Milanese (Milano) Italia  
Tel: +39 02 3353531 Fax: +39 02 33500790  
E-Mail: [info@keb.it](mailto:info@keb.it) Internet: [www.keb.it](http://www.keb.it)

#### Japan | KEB Japan Ltd.

15 - 16, 2 - Chome, Takanawa Minato-ku Tokyo 108 - 0074 Japan  
Tel: +81 33 445-8515 Fax: +81 33 445-8215  
E-Mail: [info@keb.jp](mailto:info@keb.jp) Internet: [www.keb.jp](http://www.keb.jp)

#### P. R. China | KEB Power Transmission Technology (Shanghai) Co. Ltd.

No. 435 QianPu Road Chedun Town Songjiang District  
201611 Shanghai P.R. China  
Tel: +86 21 37746688 Fax: +86 21 37746600  
E-Mail: [info@keb.cn](mailto:info@keb.cn) Internet: [www.keb.cn](http://www.keb.cn)

#### Republic of Korea | KEB Automation KG

Room 1709, 415 Missy 2000 725 Su Seo Dong  
Gangnam Gu 135- 757 Seoul Republic of Korea  
Tel: +82 2 6253 6771 Fax: +82 2 6253 6770 E-Mail: [vb.korea@keb.de](mailto:vb.korea@keb.de)

#### Russian Federation | KEB RUS Ltd.

Leshaya str, house 30 Ozerzhinsky MO  
140091 Moscow region Russian Federation  
Tel: +7 495 6320217 Fax: +7 495 6320217  
E-Mail: [info@keb.ru](mailto:info@keb.ru) Internet: [www.keb.ru](http://www.keb.ru)

#### Spain | KEB Automation KG

c/ Mitjer, Nave 8 - Pol. Ind. LA MASIA  
08798 Sant Cugat Sesgarrigues (Barcelona) Spain  
Tel: +34 93 8970268 Fax: +34 93 8992035 E-Mail: [vb.espana@keb.de](mailto:vb.espana@keb.de)

#### Switzerland | KEB Automation AG

Witzbergstrasse 24 8330 Pfäfers/ZH Switzerland  
Tel: +41 43 2886060 Fax: +41 43 2886088  
E-Mail: [info@keb.ch](mailto:info@keb.ch) Internet: [www.keb.ch](http://www.keb.ch)

#### Great Britain | KEB (UK) Ltd.

5 Morris Close Park Farm Industrial Estate  
Wellingborough, Northants, NN8 6 XF United Kingdom  
Tel: +44 1933 402220 Fax: +44 1933 400724  
E-Mail: [info@keb.co.uk](mailto:info@keb.co.uk) Internet: [www.keb.co.uk](http://www.keb.co.uk)

#### United States | KEB America, Inc.

5100 Valley Industrial Blvd. South  
Shakopee, MN 55379 United States  
Tel: +1 952 2241400 Fax: +1 952 2241499  
E-Mail: [info@kebamerica.com](mailto:info@kebamerica.com) Internet: [www.kebamerica.com](http://www.kebamerica.com)



**MORE KEB PARTNERS WORLDWIDE:**

... [www.keb.de/de/contact/contact-worldwide](http://www.keb.de/de/contact/contact-worldwide)



**Automation with Drive**

**[www.keb.de](http://www.keb.de)**

KEB Automation KG Suedstrasse 38 32683 Barntrup Tel. +49 5263 401-0 E-Mail: [info@keb.de](mailto:info@keb.de)